

REMEMBER, TO ENSURE PROPER PERFORMANCE, CLEAN EMITTERS, BRUSHES AND FILTER REGULARLY.

It will save time and money. If service should be necessary, call, write or fax Kinetronics Service Department.

SYMPTOM: No power (green light won't come on).

REMEDY: Check to see if the unit is plugged into a properly grounded outlet. Check if on/off switch is on. Check connecting cord.

SYMPTOM: Film does not pull easily through machine or "catches."

REMEDY: Check brush tension. Adjust the brushes by loosening the SS screws on each side of the brushes. Film should pass smoothly with a light tension.

SYMPTOM: Film has "dust spots" remaining after cleaning.

REMEDIES:


- a) With the machine unplugged, open the lid and check for accumulated dust in brushes. Vacuum thoroughly. Brushes may also be washed in mild shampoo and water.
- b) With the machine unplugged, open the lid, check to see that the emitter pins are free of dust. Clean with a cotton swab.
- c) Check the filter. If dirty, replace or clean.
- d) Check brush tension. (You may wish to remove and shampoo brushes with gentle baby shampoo, rinse carefully, comb brush hair straight and let AIR DRY.)

SYMPTOM: Fan/blower stops or won't run.

REMEDY: With the machine unplugged, check that there are no obstacles caught in the fan.

If your machine has some other problem or the above remedies don't work, service help is available at **1-800-624-3204** (in U.S. and Canada) or **941-951-2432, FAX 941.955.5992**, or contact your local Dealer or Distributor.

kinetronics[®]
CORPORATION (USA)

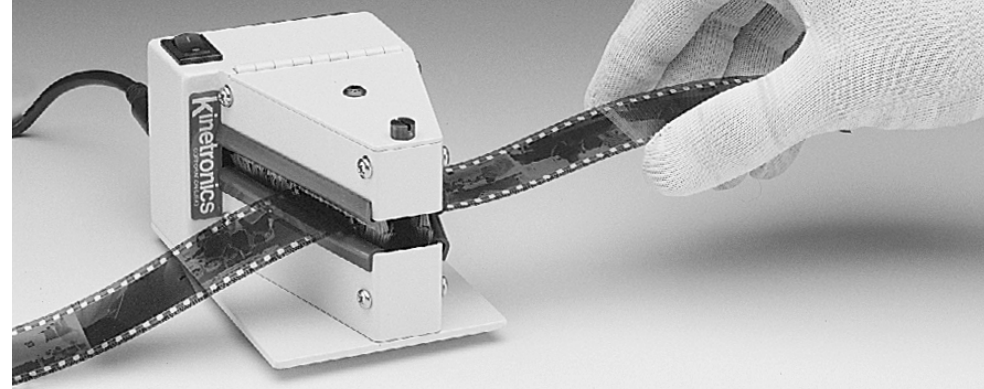

STATICVAC FILM CLEANER MODEL SV-4400U

Thank you for purchasing your new **StaticVac**[®] film cleaning machine. It will provide years of effective operation if three simple maintenance procedures are followed.


Begin by connecting the cord from the transformer to the machine and plugging the machine into a GROUNDED (three wire) outlet. If an extension cord is necessary be sure to use a GROUNDED type. Failure to properly ground your machine may result in damage to the machine or other electronic equipment.

Place the **StaticVac** as close as possible to the printer or projection gate for the best performance. You will find eight (8) small magnets located in the plastic bag. Each magnet has foam adhesive tape for mounting to your printer. Use four (4) for mounting if printing front to back and four (4) for mounting if you are printing left to right or right to left.


The on/off switch is located on top of the machine and when pressed "red" will show on the switch and the "green" LED indicator will light. The machine can be run continuously during normal operation and need not be turned off when not in use.




These steps are **VERY** important to the proper performance of your machine. These procedures should be performed every week.

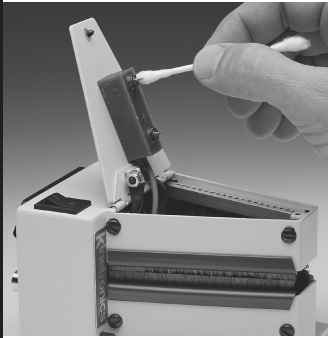

1. Wipe off the emitter pins located under the lid. To do this **TURN POWER OFF**. Loosen screw on lid and lift lid, use a cotton swab or soft cloth to remove any dust or dirt that has accumulated on both pins. Care should be taken as these pins are very sharp.

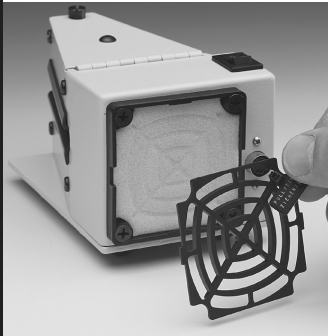

2. Remove the filter retainer in the rear of the machine by pulling the special tab. Remove the white foam H.E.P.A. filter. Replace or wash the filter in water. Place the filter retainer in the bottom and "snap" the top into place.

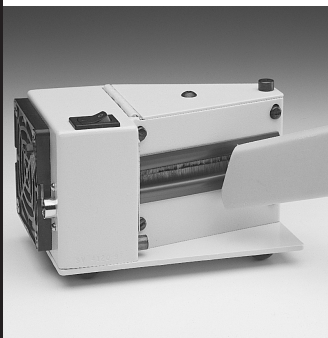

3. Vacuum or blow out brushes to remove debris and dirt trapped or lodged in the brushes. **TURN POWER OFF**. Loosen screw on lid and lift. Vacuum inside of machine carefully to remove any loose materials.

At least four times a year remove the four (4) cleaning brushes. There are two (2) screws which hold each brush in place. Wash in a gentle shampoo, rinse, comb wet brush straight and let air dry. (DO NOT USE ELECTRIC HAIR DRYER, IT WILL DAMAGE THE BRUSH.) When replacing the brushes, rotate brushes like the tires on your car. You will notice the upper brushes have oversized mounting holes which allow adjustment of the brush tension. Mount the lower brushes before installing the upper brushes. The position of the upper brush should just "contact" the lower brush.

DESCRIPTION	PART NO.	QTY. PER MACHINE
Brush (anti-static)	419.1	4
Circuit Board	441	1
Emitter Pin	439	2
Fan/Blower (Papst)	426	1
Filter Assembly	A425	1
Filter Retainer	448	1
Filters (10 pack)	A411	0
Filters (50 pack)	A411/5	0
Finger Guard	427	1
Instruction Manual	405	1
Ionizer	438	1
LED Lens (green)	450	1
Magnet	406	8
Nylatron Guide	451	4
On/Off Switch	418	1
Pull Tab	449	1
Retainer (lid screw)	436	1
Rubber Feet (4)	407	1
Screw (base)	431	4
Screw (brush)	420	8
Screw (fan)	428	8
Screw (lid)	435	1
Socket (6-pin DIN)	442	1
Transformer	402	1
Power Cord		1
	North America, Japan	685.0
	Continental Europe	685.1
	Switzerland	685.2
	United Kingdom	685.3
	Australia	685.4
	Italy	685.5

Should you have any questions call our Service Department at:



1-800-624-3204 or 1-941-951-2432
or FAX 1.941.955.5992

internet: <http://www.kinetronics.com>

e mail: info@kinetronics.com

Your machine is covered by a two year warranty which covers all parts. Any part will be replaced at no charge within the warranty period by furnishing the serial number and date of purchase.

THANK YOU FOR CHOOSING A STATICVAC FILM CLEANING MACHINE.