

## Button 'FEED' Instruction

### ■ Button 'FEED' Instruction

Scene mode	Key operation	Corresponding function
Power on	Long press + boot	Print out the self test page
Standby	Press 3 seconds	Enter into the learn mode of cover sheet
Open the cover	Press 10 seconds	Factory reset
Standby	press	Feedin a blank paper automatically
Continuous printing	press	Print pause
Print pause	press	Resume printing

© All illustrations in this guide may differ from the actual ones, kind prevail.



**Euro-Label BV**

# Desktop Barcode Printer

## Quick Installation Guide

# Euro-Label EL-1180 Labelprinter (Direct Thermisch) USB



### Opening-box List

#### ■ Standard Accessories



Printer



Power Cord



Adapter



USB Line



Quick installation guide

 
### Cable Connection



Adapter

#### ■ Connect the power cable

1. Make sure the printer power switch is off;
2. Connect the adapter to the printer;
3. Connect the power cord to the adapter;
4. Connect the other end of the power cord to a nearby socket.



Power off Power on


Connect PC mainframe

#### ■ USB Connection

1. Connect USB to the printer;
2. Connect USB to the PC mainframe;
3. Turn on the printer power to be Power-on "—".


### Appearance and Components

#### ■ Front View

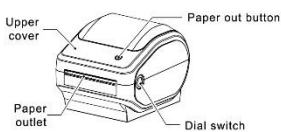


Paper outlet

#### ■ Inner View

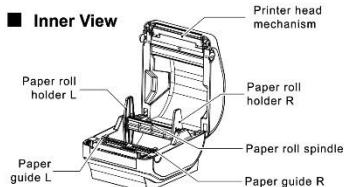

#### ■ Rear View

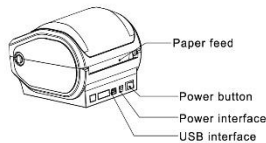

Paper feed

Power button


Power interface

USB interface

### Consumables Installation

#### ■ Inside-scroll Installation


1. Open fixing seat, put in paper roll with printed face above.

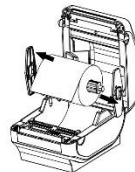

3. Close printer cover, press down to hear "ka" to lock.



2. Make paper front through paper guide, pull paper exceed rubber roller, adjust paper guide to fix the paper according to the paper width.

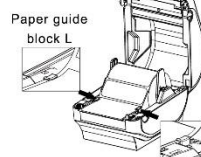

Paper guide block R