

# SIZE GUIDE - MENS

Tech-Air® 3 has been designed to be worn over a protective jacket and can also be worn under a properly fitting protective jacket.

### **TECH-AIR® 3 MEASUREMENT METHOD**

Please take the chest measurement, based on how you plan to wear the System. Once you have taken the measurement, consult the size guide below to determine the correct size for your Tech-Air® 3 System.

### 1. FOR WEARING OVER AN ALPINESTARS JACKET

If you already own an Alpinestars jacket and you plan to wear the Tech-Air® 3 on the outside of the jacket, the recommended size for your Tech-Air® 3 System should be the exact size of the Alpinestars jacket that you plan to wear underneath the Tech-Air® 3 System. For example, if you wear a size L Neo Waterproof Hoodie, then the correct Tech-Air® 3 size for you should be a size L.

### 2. MEASUREMENT FOR WEARING OVER THE JACKET

If you plan to wear the Tech-Air® 3 on the outside of the jacket, then you need to take measurement "A" while wearing the jacket.

#### A - Chest Measurement OVER THE PROTECTIVE JACKET

SIZE	Х	S	5	3	N	Л	ı		х	L	2)	(L	3)	(L	4)	(L
A CHEST (CM)	98	108	104	114	110	121	116	128	122	134	128	141	134	148	140	155
A CHEST (IN)	38 5/8	42 1/2	41	44 7/8	43 1/4	47 5/8	45 5/8	50 3/8	48	52 3/4	50 3/8	55 1/2	52 3/4	58 1/4	55 1/8	61



Over the Jacket

## 3. MEASUREMENT FOR WEARING UNDER THE JACKET

If you plan to wear the Tech-Air® 3 System under the protective jacket, you must take measurement "B" while wearing a base layer.

### B - Chest Measurement OVER A BASE LAYER


SIZE	XS	S	M		L		XL		2XL		3XL		4XL	
B CHEST (CM)	Size <b>XS</b> or <b>S</b> must not be worn under a protection outer garment.		95	101	101	107	107	113	113	119	119	125	125	131
B CHEST (IN)			37 3/8	39 3/4	39/34	42 1/8	42 1/8	44 1/2	44 1/2	46 7/8	46 7/8	49 3/16	49 3/16	51 9/16



Under the Jacket

# WARNING

- \* Tech-Air® 3 in size "S" or below must not in any case be worn under a protection outer garment.
- \* If Tech-Air® 3 is worn under the protective jacket, the customer has to make sure the jacket allows space enough for a safe Tech-Air® deployment as per instructions in the manual p23 /24. (Provinding 4cm of space around the circumference of the upper body to accommodate the Airbag inflation or using the formula described in the p23 of the manual)

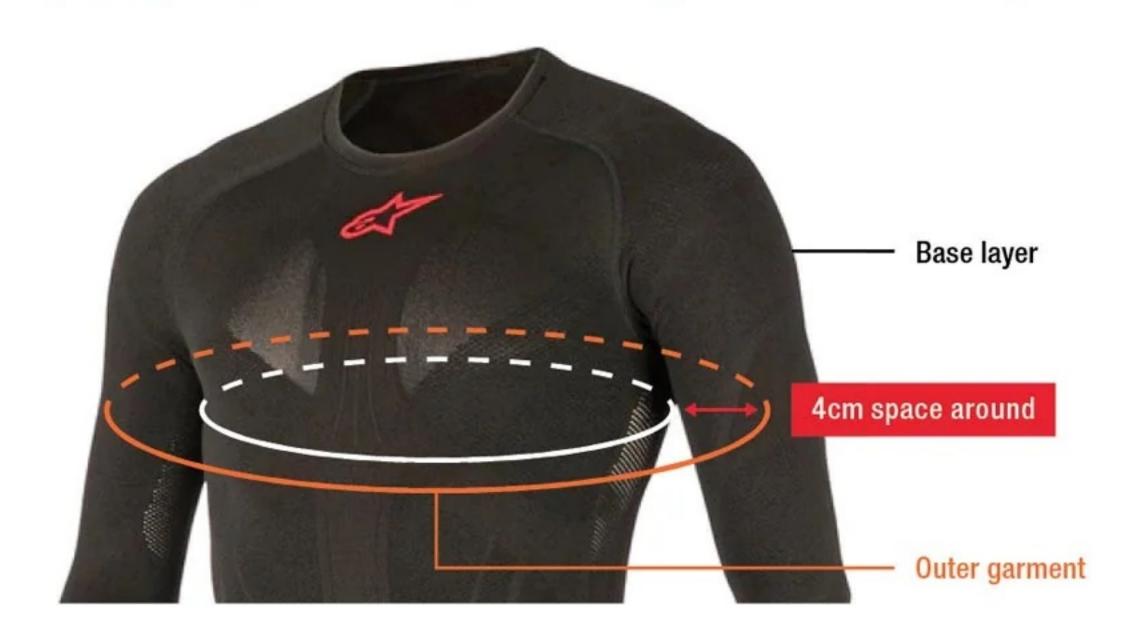

<sup>\*</sup> Tech-Air® 3 in sizes "M" or larger shall be worn with a Tech-Air® Ready Alpinestars' outer garment of the same size of the System or with any Alpinestars' outer garment that is not Tech-Air® Ready provided that the size of the Alpinestars' outer garment is one size larger than the size of the System or regardless of whether it is an Alpinestars' outer garment or not meets the following criteria: For the chest area, measure the circumference of the chest (A) and the garment width on the chest region (A1).

The garment is compatible with Tech-Air® 3 System if A1 > 0.5 x A + 12 cm (A1 > 0.5 x A + 4.72 in) (see figure 1 below)



A - circumference of the chest A1 - garment width on the chest region

Figure 1



# SIZE GUIDE - WOMENS

Tech-Air® 3 has been designed to be worn over a protective jacket and can also be worn under a properly fitting protective jacket.

## **TECH-AIR® 3 MEASUREMENT METHOD**

Please take the chest measurement, based on how you plan to wear the System. Once you have taken the measurement, consult the size guide below to determine the correct size for your Tech-Air® 3 System.

### 1. FOR WEARING OVER AN ALPINESTARS JACKET

If you already own an Alpinestars jacket and you plan to wear the Tech-Air® 3 on the outside of the jacket, the recommended size for your Tech-Air® 3 System should be the exact size of the Alpinestars jacket that you plan to wear underneath the Tech-Air® 3 System. For example, if you wear a size M Stella Bogota' Pro Drystar® Jacket, then the correct Tech-Air® 3 size for you should be a size M.

### 2. MEASUREMENT FOR WEARING OVER THE JACKET

If you plan to wear the Tech-Air® 3 on the outside of the jacket, then you need to take measurement "A" while wearing the jacket.

#### A - Chest Measurement OVER THE PROTECTIVE JACKET

SIZE	XS		S		M		L		XL		2XL	
A CHEST (CM)	92	101	96	106	100	111	104	116	108	121	112	126
A CHEST (IN)	36 1/4	39 3/4	37 3/4	41 3/4	39 3/8	43 3/4	41	45 5/8	42 1/2	47 5/8	44 1/8	49 5/8



### 3. MEASUREMENT FOR WEARING UNDER THE JACKET

If you plan to wear the Tech-Air® 3 System under the protective jacket, you must take measurement "B" while wearing a base layer.

### B - Chest Measurement OVER A BASE LAYER

SIZE	XS	xs s		М		L		XL		KL
B CHEST (CM)	Size <b>XS</b> or <b>S</b> mu	st not be worn	90	94	94	99	99	104	104	109
B CHEST (IN)	under a protection	outer garment.	35 3/8	37	37	39	39	41	41	42 7/8



Under the Jacket

# WARNING

- \* Tech-Air® 3 in size "S" or below must not in any case be worn under a protection outer garment.
- \* If Tech-Air® 3 is worn under the protective jacket, the customer has to make sure the jacket allows space enough for a safe Tech-Air® deployment as per instructions in the manual p23 /24. (Provinding 4cm of space around the circumference of the upper body to accomodate the Airbag inflation or using the formula described in the p23 of the manual)



\* Tech-Air® 3 in sizes "M" or larger shall be worn with a Tech-Air® Ready Alpinestars' outer garment of the same size of the System or with any Alpinestars' outer garment that is not Tech-Air® Ready provided that the size of the Alpinestars' outer garment is one size larger than the size of the System or regardless of whether it is an Alpinestars' outer garment or not meets the following criteria: For the chest area, measure the circumference of the chest (A) and the garment width on the chest region (A1).

The garment is compatible with Tech-Air® 3 System if A1 > 0.5 x A + 12 cm (A1 > 0.5 x A + 4.72 in) (see figure 1 below)

