



Onderdelen voor Trumatic S 3002 (P) (05/96 – ...)

	Hersteller Nr.	Art-Nr.		Hersteller Nr.	Art-Nr.
1	30030-03600	R310/231-1	13	10030-26500	R310/237-1
2	30030-16100	R309/011	14	30090-00042	R309/462
o. Abb.	30050-53500	R309/028	15	30030-42700	R310/230-1
o. Abb.	30030-04800	R310/011	16	30030-33300	R309/180
3	30090-00040	R309/460	17	30050-13900	R310/330
4	30090-00148	R309/432	18	30030-04300	R310/331-1
5	30090-92200	R309/313	19	30030-28500	R310/337
6	30040-16800	R309/184	20	30030-89400	R309/183
7	30010-23500	R309/024	21	30090-00077	R310/017
8	30030-29800	R309/026	22	30040-65900	R310/263
9	30040-60000	R309/027	23	30040-65800	R310/264
10	30030-17500	R309/012	24	30090-00142	R309/492
11	30030-12200	R310/329-1			
12	30050-58100	R310/250-1			