



## Onderdelen Trumatic S 5002 (05/93 – ...)

	Hersteller Nr.	Art-Nr.	Hersteller Nr.	Art-Nr.
1	30050-33100	R310/283-1	12	30050-58100 R310/250-1
2	30030-16100	R309/011	13	30030-17500 R309/012
o. Abb.	30050-53500	R309/028	14	30030-12200 R310/329-1
o. Abb.	30030-04800	R310/011	15	10030-23400 R309/176
3	30090-00041	R309/461	16	10030-26500 R310/237-1
4	30090-00152	R309/430	17	30030-42700 R310/230-1
	30090-00149	R309/431	18	30010-19800 R309/022
5	30050-52100	R309/188	19	30050-13900 R310/330
6	30050-52200	R310/343	20	30050-18700 R309/020
7	30050-51100	R309/186	21	30030-04300 R310/331-1
8	30050-51300	R309/187	22	30030-28500 R310/337
9	30010-23500	R309/024	23	30090-00077 R310/017
10	30030-29800	R309/026	24	30050-08600 R310/345-1
11	30040-60000	R309/027	25	30090-00142 R309/492