

PRODUCTDESCRIPTION

The Max Pro STEAM+ is a Hair straightener [100% titanium plates] works by steam/ water in combination with the included MOHI Hair Serum. The STEAM+ is equipped with negative ion technology which neutralizes loops and eliminates static hair. Thanks to the function of the STEAM+, the negative ion technology and the MOHI Hair Serum this straightener give straight, wavy and curly hair a unique soft and natural glow.

The STEAM+ [3 steam modes] heats up quickly and gradually. The temperature is easily adjustable thanks to an effective LCD display which indicates the temperature from 150°C to 230°C. This function makes the Max Pro STEAM+ suitable for each type of hair. In addition to its ease of use, the STEAM+ is also reliable and secure. Due to its shut-off function the straightener shuts down automatically after being unused for 60 minutes. The straightener has dual voltage so it can be used worldwide.

INSTRUCTIONS

Always make sure that your hair is completely clean and dry before using straightener. Make sure there is no water on the floor or on other surfaces (except from the bottle demineralized water) near the outlet or the hair styling tool. Before you start styling, the reservoir, which is located on the STEAM +, has to be filled with demineralized water to make the steam effect possible. The reservoir is easy to disconnect from the steam straightener by pulling the slide button at the end of the tool. Open the rubber lock of the reservoir. Fill the blank bottle with demineralized water, now you can fill the reservoir of the STEAM+. The Hair Serum should be used as indicated on the bottle. It is important that the reservoir should be carefully clipped into the steam straightener after being filled. Note: the lock can break off or become lame. But lucky you, from now the reservoirs are available at www.maxprohair.com. The STEAM + is now ready for use. Unlock the tool by clicking the switch at the end of the pliers.

Insert the plug of the straightener into the outlet. The straightener could have a polarized plug, which has one pen which is wider than the other. If this is the case, this plug will only fit into an outlet when it is placed correctly. When the plug does not fit into an outlet, make sure that you have the large pin stabbed into the correct hole. If you cannot plug in the plug without any problems, please contact an electrician; never try to force stabbing the plug into an electrical outlet.

Press the power button on the inside of the steam straightener to turn the tool 'on'. The hair styling tool will become very hot immediately, but it will take about 40 seconds before it has an optimal uniform heat distribution. In the meantime, brush your hair, divide the hair. Spray 1-2 pump doses of Hair Serum in each lock of hair [distance: 15-20 cm] on the hair lengths. Style or curl this lock with a styling tool. Repeat this process with all hair locks. (!) Do not combine with other liquids and never fill the reservoir with the Hair Serum!

The hair styling tool becomes very hot, so make sure it does not make contact with the skin. Allow your hair to cool down before touching or brushing it. After styling your hair, switch off the hair styling tool by putting the switch on the inside to the "OFF" position, unplug the power cord and allow the hair styling tool to cool down completely on a heat-resistant surface before storing it. Never leave the styling tool in the outlet or turned on if you are not around.

HAZARDS

- Never use the styling tool near water or while bathing, showering or washing. If the styling tool is in the water while it is running, do not pick it up unless the power is turned off.
- Never use styling tools with bare or wet feet, as this may cause an electric shock or injury.



BURNS

- Always use a heat resistant glove if you have one nearby.

- The styling tool is very hot and can cause burns. Do not touch the heated element while the styling tool is connected. Make sure that the styling tool has enough time to cool down.

When you burn yourself, stop with styling your hair and take care of the burn immediately.

- Make sure you switch off the styling tool after each use. Never leave a styling tool unattended if it is connected or switched on.

- Keep the styling tool away from flammable surfaces, plastic or other materials that are sensitive to heat.

- If you have to put the styling tool down while it is turned on, only do it on a heat-resistant surface. It is best to use a heat-resistant mat or holder for your MaxPro straightener/curling iron to prevent damage to your furniture. This heat-resistant mat can be ordered via www.maxprohair.com

DEFECTS

- Please check your styling tool before each use and do not use it if the styling tool is (partially) damaged.

- For all kinds of repairs within the warranty, contact an authorized Max Pro retailer or manufacturer.

- Max Pro is not responsible for any damage caused by incorrect of improper use. For the warranty you must have the original proof of purchase (receipt, order email) and the original box from your styling tool.

STORING

- When you're done with your styling tool, unplug the power cord and give the styling tool the time to cool down before storing it.

- Never wrap the cord around your styling tool, there is a chance that it will tear.

Avoid sharp bends and twisting.

- For future usage, keep the styling tool in a safe, dry place.

Store it out of reach of children (and pets).

WARRANTY

Thank you for purchasing a Max Pro hair styling tool. This warranty is valid for two years from the date of purchase. To show our appreciation for your purchase and the dedication to our products, we hereby offer you to extend your warranty for free to a lifetime unlimited warranty! To register for this exclusive warranty, you can visit us at www.maxprohair.com and fill in the registration form.

Please make sure you keep your proof of purchase (receipt, order email) and the original box from your styling tool as a proof of purchase. This warranty is only valid for styling tool purchased from an authorized Max Pro retailer. If your product is not working properly due to a manufacturer's shortcoming and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer. This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty expires if the product is used for commercial purposes. The warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro vendor or manufacturer. For questions about the warranty, please contact our customer service or visit us at www.maxprohair.com If the device does not work properly, we need digital images of the styling tool, as well as a copy of your original purchase receipt. In case of replacement or repair, a payment is required to cover the shipping and administration costs (depending on your place of residence). Feel free to contact us if you have questions or comments. We are happy to help you!



GOODBYE TO BAD HAIR DAYS

Max Pro Tel: +31 (0)20 261 0907 Email: info@maxprohair.com

