



MAX PRO × MOHI

**HOT AIR STYLER SETS : JL-1002**  
**220-240V~ 50/60Hz 1200W**  
**Instruction Manual**

*Dear Customer,*

*Thank you for buying this hot air styler .*

*You may already be familiar with using a hot air styler but do please take time to read these instructions. They are designed to familiarize you with the unit's features and to ensure you get the very best out of your purchase.*

***Safety is important!***

*Your safety and the safety of others is important. Please, therefore, ensure you read the safety instructions before you operate this hot air styler*

*Kind regards,*

*Team Max Pro*

*Read all the safety instructions before first use of your hot air styler*

**WARNING: THIS HOT AIR STYLER UNTIL THE POWER IS DISCONNECTED AT THE MAINS. TO AVOID RISK OF ELECTRIC SHOCK: 220-240V~ 5**



Do not use this device in a bathtub, shower, or water-filled reservoir

- 1] WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 2] WARNING: Do not use this appliance near water.
- 3] The airborne noise emitted by the appliance  $\leq 90$  dB(A).
- 4] When the hot air styler is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 5] For additional protection, the installation of a residual

current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

6] The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

7] Children being supervised not to play with the appliance.

8] If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

9] Always unplug the hot air styler after use.

10] Do not use or store the hot air styler where it can come into contact with water.

11] If the appliance falls into water, UNPLUG IT IMMEDIATELY. Do not reach into the water until the power

has been disconnected.

12] This hot air styler should never be left unattended when plugged in.

13] Do not pull or wrap power cord around the hot air styler.

14] Close supervision is necessary when this appliance is used by, on , or near children.

15] Do not use attachments not recommended by the manufacturer.

16] Never operate the hot air styler if it has a damaged cord or plug or if it has been dropped into water. Return the appliance to a service centre for examination and repair.

17] Keep the cord away from heated surfaces.

18] Never block the air vents at the rear of the hairdryer, or place it on a soft surface where the air vents free of dust, hair, etc. Do not insert any objects into the air vents.

19] Do not use outdoors, or where aerosol products are being used.

20] Do not direct hot air toward eyes.

21] Attachments may get hot in use. Use care when handling them.

22] Do not put the hot air styler down while it is operating.

23] Check that the voltage rating of this appliance matches that of your supply.

24] If the appliance falls into water, UNPLUG IT IMMEDIATELY. Do not reach into the water until the power has been disconnected.

25] Do not use the appliance if the power cord is damaged. It must be replaced by the manufacturer, the aftermarket service or by a sufficiently qualified person in order to prevent any risk of an accident.

-

**IMPORTANT**

The mains lead of this appliance is not replaceable by the user. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Safety considerations: Position the power supply lead so that it is not likely to be walked on or pinched by things placed on or against them. Do not use the hot air styler in humid or damp conditions. Do not allow the appliance to get wet i.e. dripping or splashing, as this may be dangerous.

Ventilation: The slots and openings on the appliance are for ventilation. Do not cover or block them as it could lead to overheating. NEVER let children push anything into the holes or slots on the hot air styler .



- 1) 0-I-II Switch
- 2) I-II-III Switch
- 3) Handle
- 4) Power cord
- 5) Release button
- 6) Round roll brush
- 7) Pad air brush
- 8) Concentrator
- 9) Big roll brush



**ASSEMBLY** | Clip the concentrator onto the front of the hairdryer (if required).

**SWITCHING ON** | Mains power \* Unwind the power cable and plug into the mains socket and switch on \* Set the On/Off switch to the required settings (1 or 2) \* Position 2 is more heater than position 1.

**SWITHING OFF** | When you have finished, set the On/Off switch to the off (0) position.

### **OPERATION STYLING GUIDE** |

- 1] Shampoo and condition your hair. Rinse the hair thoroughly. Towel blot hair to remove excess moisture. Divide your hair into sections. Using the dryer along with a styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that hot air passes through hair. Direct air flow at hair, not scalp.
- 2] Keep dryer's air intake vents unobstructed and free from hair while dryer.
- 3] To avoid over-drying, do not concentrate heat on any one section for any length of time. Keep the dryer moving

as you style.

4] For quick styling, dampen hair with a mist of water before styling with the dryer.

5] When using the dryer to create curls and waves, dry hair almost completely on the warmest setting, then finish styling using the lower setting. This will set the style in your hair.

6] This dryer includes a concentrator attachment. Use the concentrator when you need to focus the drying power in a small area (such as a curl or a wave) or when you want to relax curly hair.

**IMPORTANT** | Before you do any of the following, make sure the hot air styler is unplugged from the mains supply.

**CLEANING** | Do not use liquid or aerosol cleaners.  
Clean your appliance with a soft, damp (not wet) cloth.

### **The Multi Airstyler doesn't work?**

1] Make sure it is plugged into the main supply and switch on.

2] Make sure the ON/OFF button is on.

3] Check the fuse in the plug (see Electrical Information).

If the hairdryer still does not work properly, please send an e-mail to [info@maxprohair.com](mailto:info@maxprohair.com).

## DISPOSAL

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



**[www.maxprohair.com](http://www.maxprohair.com)**

[info@maxprohair.com](mailto:info@maxprohair.com)

+31 (0)20 261 0907