

Aeromatic / Tauchmeister automatical movements

Features:

- Automatic movement,
- 21,600 oscillations per hour
- Oscillator mutual winding
- Indications of date
-

Time Setting:

Pull the crown out to the position (2) to reset the time. (crown must be screwed out "against the hour time")

Date Setting:

Pull the crown out to the position (1) and turn it anti-clockwise to reset the date.

Points in general:

Since the adjustment of date with mechanical watches takes place between 11pm-4am, please

don't adjust the watch within this period because you would interfere in the wheel balance causing damages.

An automatic watch is self-winding, caused by the motion of the oscillator below the movement.

Please take note of the fact that the specification of the water resistance is only value for the new

watch not being a permanent condition.

The accuracy of the movement of a mechanical automatic timepiece is naturally not to compare with the

accuracy of Quartz watches. Slight differences are normal, mainly in case of high different in

temperature. Please wind up your watch approx. 20 times after you have not worn it for a longer time.

Maintenance your watch:

Clean your clock with a dry or with a dampened cloth. This watch contains precision parts, therefore the soil may be opened only by

an authorized person. If you do not carry the watch, these at a dry place keep.

We wish you would enjoy your daily life with your functional timepiece.

Helium valve and crown:

Very important:

Please hold the crowns under water "Helium valve and crown" be closed "screwed against the case"!

Otherwise the water resistance is not possible!