
TW STEEL® BIG IN OVERSIZED WATCHES

MANUAL

INSTRUCTIONS FOR THE USE OF THE TW STEEL MODELS/ CANTEEN STYLE

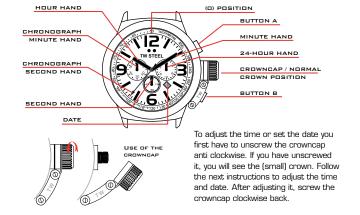

ADJUSTING THE TIME ADJUSTING THE DATE

USING THE



ANGING THE TIME

ADJUSTING THE TIME

Pull the crown out to the 2nd click position so that the second hand stops at (O) position. Turn the crown to set. the hour and minute hands





position.



The chronograph is able to measure and display the time in 1/1 second united up to an maximum of 1 hour. The chronograph can be started and stopped each time button A is pressed. Pressing button B resets the chronograph. All hands return to their (O) position. If the chronograph second hand does not return to the (O) second position after the chronograph has been reset or after replacing the battery, you should do the following: Pull the crown out to the 2nd position. Press button A to set the chronograph second hand to the (O) position. The chronograph hands can be advanced rapidly by continuously pressing button A or B. Once the chronograph second hand has returned to the (O) position, return the crown to its normal position.



INSTRUCTIONS FOR GRANDEUR DIVER / GOLIATH GRANDEUR COLLECTION / TECH COLLECTION



GOLIATH

To set the time and date you can directly pull out the big crown to its 1st or 2nd position.

GRANDEUR COLLECTION

If your model has a crowncap, please follow the instructions of the Canteen style. If your model has NO crowncap, you can directly pull out the big crown to its 1st or 2nd position to set the time and date.

GRANDEUR DIVER

To set the time and date you first have to unscrew the big crown anti clockwise. You can now pull out the crown to its 1st or 2nd position.

For al models follow the instructions of the Canteen Style for the use of the chronograph.

USING THE CHRONOGRAPH OF THE TECH MODELS

TECH COLLECTION

To adjust the time and date of the Tech, you first have to unscrew the big crown anti clockwise. You can now pull out the crown to its 1st or 2nd position. Check the manual of the Canteen Style for further instructions on how to set the time and date.

USE OF THE CHRONGRAPH FOR ALL TECH MODELS The chronograph is able to measure and display the time in 1/20 second united up to a maximum of 59 min and 59 sec. The retrograde chronograph 1/20 second hand keeps running continuously

for 30 seconds after starting and then stops at (o) position. Press button B to change the watch to the chronograph mode. The second hand stops at the (O) position and changes to the chronograph 1/20 second hand. The chronograph can be started and stopped each time button A is pressed. Pressing button B resets the chronograph. All hands return to their (O) position. If the chronograph second hand and the chronograph 1/20 second hand do not return to the (O) second position after the chronograph has been reset or after replacing the battery, you should do the following: Pull the crown out to the 2nd position. Press button A to set the chronograph second hand to the (O) position. Press button B to set the chronograph 1/20 second hand to (O) position. The chronograph hands can be advanced rapidly by continuously pressing button A or B. Once the hands have returned to the (O) position, return the crown to its normal position an screw the crown clockwise back on to the case.

CAUTION: IF THE CROWN IS NOT PRESSED IN PROPERLY, THE WATCH IS NO LONGER WATER-PROOF AND THE MOVEMENT CAN BE SERIOUSLY DAMAGED!