

Installatio

① Wiring, as shown in Figure 1.

AC input: L (brown or red)- firewire, N (blue or black)- neutral,(yellow-green)-ground line;

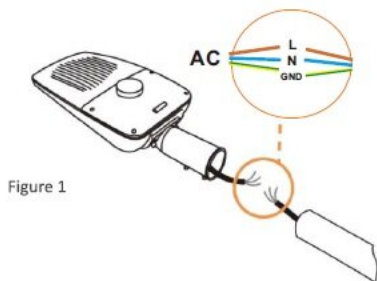


Figure 1

② Install the pole, as shown in Figure 2.

Put the pole into the lamp arm and fix the screw with a hex wrench. Be careful not to lock it;

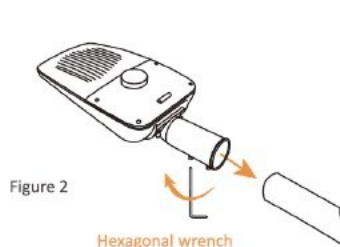


Figure 2

Hexagonal wrench

③ Adjust the angle as shown in Figure 3.

Adjust the lamp body horizontally to make the lamp body and the ground Vertically, tighten the screws with a hex wrench;

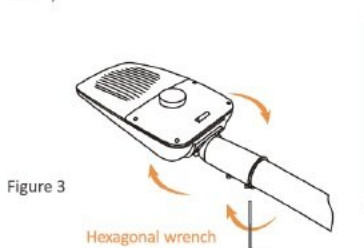


Figure 3

Hexagonal wrench

④ Install the Photocontrol, as shown in Figure 4.

Place the photocontrol on the lamp body and lock it;

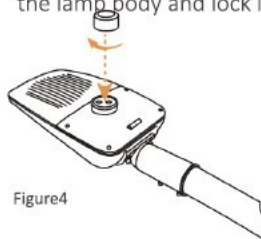


Figure 4

⑤ Assembly is completed, as shown in Figure 5.



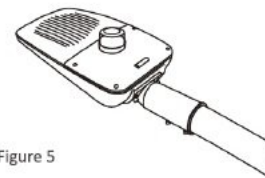


Figure 5

if with light controller

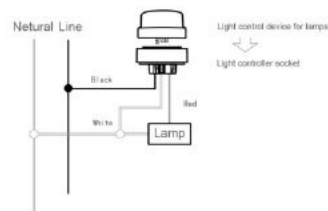

Dimensions(Unit:mm)

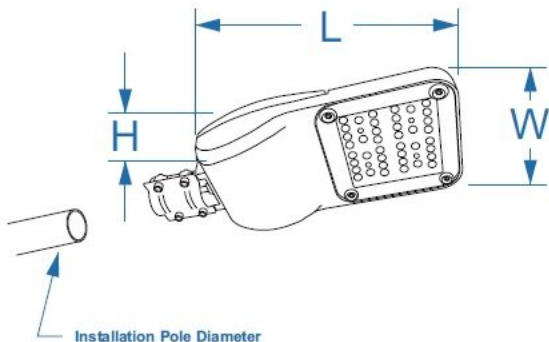

Installation Pole Diameter

Model	Power	Product Size	Installation Pole Diameter
SRSL030W-230V	30W	L260xW150xH65mm	Φ40mm