

# User Manual

## DT332-D



### Barcodescanner – DT332-D



: 0645733500



: [info@diwolar.nl](mailto:info@diwolar.nl)



: <https://www.dtronic.nl/>

---

*Datum : 23-8-2023*

*Versie : 1.0*

## Introduction

Thank you for trusting a product from DTRONIC. Please read the contents of the user manual carefully in order to use the products safely and effectively.

You are advised to keep this manual correctly for your installation and as a reference. Please do not disassemble the product or tear off the seal, otherwise we will not provide warranty or replacement service.

The illustrations in this user manual are for reference only. If there are images that do not match the actual product, please take the actual product as standard.

Updated information is subject to change without notice. All information in this manual is copyrighted and our company reserves all rights. It is prohibited to distribute, copy, compile or sell all or part of this manual without our written permission.

DTRONIC is a BOIP registered trademark and legally protected in cooperation with GS1. Diwolar is the only company with the rights to market this trademark. If you have purchased a product that was not purchased through Diwolar, the warranty is void. When contacting customer service always ask for the order number. This user manual applies to DTRONIC barcode scanners that identify barcodes using a laser scan pattern.

DTRONIC is not liable for damages and defects suffered when the barcode scanner fails, does not work properly or is misused.

Do you have any questions about your product? We will be happy to assist you.

	Mail: <a href="mailto:info@diwolar.nl">info@diwolar.nl</a>	Bereikbaar van 09:00-17:00u
	WhatsApp: +316 45 733 500	Bereikbaar van 09:00-17:00u
	Website: <a href="http://www.dtronic.nl">www.dtronic.nl</a>	Webshop 24/7 geopend

### Kind regards, team Dtronic

- |             |                         |
|-------------|-------------------------|
| - Diederik  | Director                |
| - Arjan     | Operations manager      |
| - Marjolein | Financial employee      |
| - Jaxx      | Administrative employee |
| - Tim       | Customer service        |
| - Hessel    | Customer service        |
| - Roger     | Test center             |
| - Kees-Jan  | Logistics               |

# INHOUDSOPGAVE

## Inhoud

<b>INTRODUCTION .....</b>	<b>2</b>
<b>1. PRODUCT .....</b>	<b>4</b>
1.1 Function .....	4
1.2 Unbox.....	4
1.3 Start .....	4
1.4 Window.....	4
1.5 Reading .....	5
1.6 Picture.....	5
1.7 Led indicator .....	5
<b>2. SYSTEM SETUP .....</b>	<b>6</b>
2.1 System Setup .....	6
2.1.1 Setup code.....	6
2.1.2 Product User Settings.....	6
2.2 Reading mode settings .....	6
2.2.1 Continuous mode (default) .....	6
2.2.2 Pulse trigger mode .....	6
2.3 Communication settings.....	7
2.3.1 Communication settings.....	7
2.3.2 USB keyboard .....	7
2.4 Data format setting.....	8
2.4.1 Custom prefix on/off settings.....	8
2.4.2 Symbologies.....	9
2.4.3 EAN8 Settings .....	9
2.4.4 1D and 2D .....	9
2.4.5 EAN 13 settings.....	9
2.4.6 DM Settings .....	9
2.4.7 QR Settings .....	10
2.4.8 UPC-A settings .....	10
2.4.9 UPC-E settings .....	10
2.4.10 Code 39 Settings.....	10
2.4.11 Code 128 settings .....	10
2.4.12 Code 93 settings .....	11
2.4.13 Codabar Settings .....	11
2.4.14 Interleave 2 of 5 (ITF5) setting .....	11

# 1. Product

## 1.1 Function

- Works with Plug&Play and without installation software.
- Works with most WMS systems.
- Some WMS or POS systems must be set up to use a scanner.
- Device the scanner is connected to will see it as keyboard.
- Basically the scanner scans the 95% of bar codes, remaining 5% can be set as desired with this manual.
- There are patented parts in the scanner, DTRONIC has the rights to sell these items on the Dutch, Belgian and German market

## 1.2 Unbox

After opening the box containing the product, perform the following steps:

- Remove the scanner accessories from the packaging.
- Remove the scanner from the packaging.
- At the packing list, check that everything is complete and in good condition. If there are damaged or missing parts, save the original packaging and contact DTRONIC for customer service.

Packing list:

1. Handheld scanner
2. USB Connection Cable (for wireless scanners, this is the charging cable).
3. Paperclip
4. Abridged user manual

## 1.3 Start

Startup: connect the computer to the scanner. The computer will recognize it as a keyboard and the scanner can be used.

Power off: remove the cable connected to the scanner; remove the USB connected to the computer.

Restart: if the scanner crashes or is unresponsive, turn it off and restart it. Optionally, use the factory setting from this manual

## 1.4 Window

The scanning window must be kept clean, the supplier does not bear the warranty responsibility due to improper maintenance. Prevent the window from wearing out or being scratched by a hard object. Use a soft cloth to remove stain on the scanning window. Clean the scan window with a soft cloth, such as a lens cleaning cloth

Spraying liquid on the scan window is prohibited. Prohibit all cleaning solvents except cleaning water.

## 1.5 Reading






If the bar code is small, it should be closer to the scan window; if the bar code is large, it should be further away from the scan window for easier reading.

If the bar code is highly reflective (for example, the coated surface), you may need to tilt the bar code at an angle to scan the bar code. The best distance to read a bar code is 10-15 cm

## 1.6 Picture



## 1.7 Led indicator

	INDICATOR STATUS	EXPLAIN
	Red light on	Charging
	Red light off	No charging
	Green light on	No decoding
	Green light off	Decode succesfully
	One blue light on	Pairing successful or connect to USB



This icon indicates this information requires extra attention from the reader



This icon indicates handy tips that can help you use or configure the scanner with ease



This icon indicates practical examples that can help you to acquaint yourself with operations



## 2. System Setup

### 2.1 System Setup


Option and function setting mainly by reading a series of special bar codes. In this chapter, we give you a detailed introduction to the options and functions available for user setup and the corresponding setup code.

This method of setting up the scan is direct, easy to understand and user-friendly.

#### 2.1.1 Setup code

	
Startup settings (default)	Exit Settings

#### 2.1.2 Product User Settings

	
Save user default settings	

## 2.2 Reading mode settings


### 2.2.1 Continuous mode (default)

When the reading setting code is switched to this mode, it enters the continuous reading state. In this mode, the "repeat read switch" can be used to prevent the same barcode from being read more than once.


Continuous mode (default)


### 2.2.2 Pulse trigger mode

When the reading setting code is switched to this mode, it enters the pulse-triggered reading state.

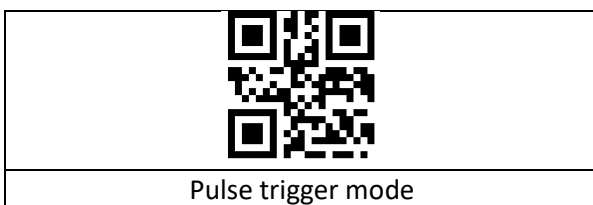

## 2.3 Communication settings

### 2.3.1 Communication settings

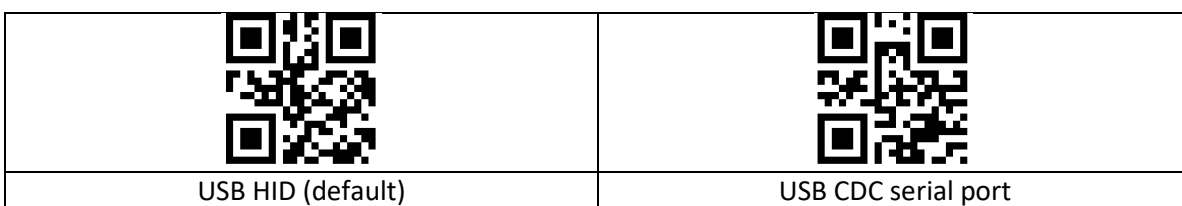

### 2.3.2 USB keyboard

Portuguese (Brazil) cannot output "?" and "/" .

Nederlands	Italian
Spanish (Brazil)	Portuguese
Portuguese (Brazil)	French
German (Austria)	Turkish Q
Turkish F	English (UK)

Japanese	German (Switzerland)
French (Belgium)	

## 2.4 Data format setting

Length of custom prefix and suffix: (0~10) characters, if set to "on", "Code ID prefix", "custom prefix", "end suffix", etc. will be added before and after the decoding information. "Custom suffix", "End suffix", etc.

The maximum number of data cache is 5, and the maximum length of individual data is 7900 characters; the data output is sequential output, and you need to wait for the first barcode output to finish before the second barcode output, and so on.





### 2.4.1 Custom prefix on/off settings

Custom prefixes add a user-defined string before the decoded information. For example, if you allow to add a custom prefix and set the prefix to the string "AB", after reading the barcode with the data "123", the scanner adds the string "AB" before the string "123", and the host side receives "AB123". After the barcode reading data is "123", the scanner will add the string "AB" before the string "123", and the host side will receive "AB123".

If set to "Off", the decoded information will only have the barcode data information, no prefix, and the default value is to turn off the custom prefix output.

The custom suffix adds a user-defined string after the decoded information. For example, it is allowed to add a custom suffix and set the suffix to the string "AB", after reading the barcode with the data of "123", the scanner adds the string "AB" after the string "123", and the host side receives "123AB". After the barcode reading data is "123", the scanner will add the string "AB" after the string "123", and the host side will receive "123AB".

If set to "Off", only the barcode data information will be in the decoded information, no suffix, and the default value is to turn off the custom suffix output.

	
Enable	Disable (default)
	
Enter aan	Enter uit





## 2.4.2 Symbolologies




Each type of barcode has its own unique properties, and the setup codes in this chapter allow you to adjust the scanner to accommodate these property changes.

The fewer barcode types that are turned on, the faster the scanner will Scan. You can turn off the barcode types that will not be used to improve the performance of the scanner.



## 2.4.3 EAN8 Settings

	
EAN8 on (default)	EAN8 off



## 2.4.4 1D and 2D

	
Enable all 1D	Disable all 1D
	
Enable all 2D	Disable all 2D



## 2.4.5 EAN 13 settings

	
EAN13 on (default)	EAN13 off



## 2.4.6 DM Settings

	
Enable	Disable


### 2.4.7 QR Settings

	
Enable	Disable



### 2.4.8 UPC-A settings

	
Enable	Disable



### 2.4.9 UPC-E settings

	
UPC-E on (default)	UPC-E Off



### 2.4.10 Code 39 Settings

	
Code 39 on (default)	Code 39 Off



### 2.4.11 Code 128 settings

	
Code 128 on (default)	Code 128 Off





### 2.4.12 Code 93 settings

	
Code 93 On (default)	Code 93 Off

### 2.4.13 Codabar Settings

	
Codabar on (default)	Codabar Off

### 2.4.14 Interleave 2 of 5 (ITF5) setting

	
ITF5 on (default)	ITF5 off
	
ITF14 Enable	ITF14 Disable