

# INSTRUCTIONS

## ARGL-62



First, you need to disconnect the battery

Remove the handles to set the inside roof down



Remove the document holder in front of the windshield

Remove the 10mm around the roof  
Should check to see them.

Remove all the parts that is needed  
to remove to take the roof off.





The roof is glued all the way  
Remove the glue with scratchers  
Heatgun is not recommended

After removing all the glue.  
Will proceed with the ARGL-62



Grind both surfaces highlighted in red  
Apply the car body glue then insert the roof  
into the positions and apply pressure to fix it.

After the glue dried the car is ready