

Instruction Manual

Place the dispenser in such way that it sprays in free space and the spray doesn't settle on (plastic) surfaces. The spray can have a dissolving effect on some types of plastics.

The dispenser has functions for displaying time and installing operating time and spray interval (1 to 60 minutes).

When the dispenser is turned ON, the LED-light will flash red, then green and than it sprays once and it activates working mode. When the dispenser is turned OFF, all settings will be saved and the time count continues.

LED-light: In standard working mode the LED is green. If the light turns red, a empty-battery-symbol will occur, this means the battery has to be changed. If the counting of sprays reaches 3000, the LED will flash 10 times. This means the refill has to be replaced.

Functions of the buttons

Press the round button to open the housing of the dispenser. You'll see 7 buttons beneath the LCD display.

1RESET

Clear the memory and reset to original settings.

2SPRAY

Meant for testing. When pressed the LED will flash 6 times and than the dispenser will spray once.

3MODE

When pressing this button, the following settings will pass by:

START – STOP – SPRAY – INTERVAL – WEEK – HOUR – MIN

4WEEK

Settings for the current week.

5HOUR


Settings for the current time:(hour).

6. MIN

Settings for current time:(minutes)

7. ON/OFF

On / off button

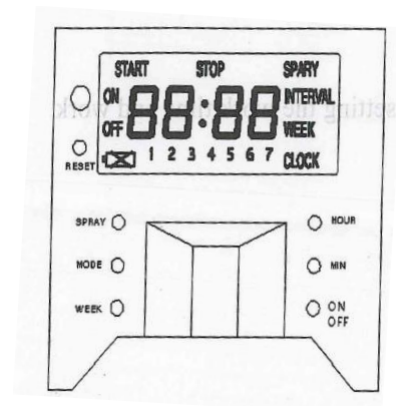

How to use:

ATTENTION: Before installing the batteries, make sure the refill is in place.

1. Time setting for starting and stopping the spray cyclus

Press 'MODE', untill the LCD shows "START", press HOUR and MIN for setting the starttime of the dispenser.

Press 'MODE' again untill the LCD shows "STOP", than press HOUR and MIN for setting the endtime of the dispenser.

2. Resetting the spray counts

Press 'MODE' untill the LCD shows "SPRAY", here are shown how many sprays are used. A new refill can spray about 3000 times. If the ON/OFF button is pressed twice, the number will be reset.

3. Setting the spray interval

Press 'MODE' untill the LCD shows "INTERVAL", than press "MIN" to set the interval time (1-60 minutes).

4. Setting a weekly work mode

Press 'MODE' untill the LCD shows "WEEK", than press "WEEK" to choose the right setting.

There are 3 settings to choose from:

1. Monday till Friday (1-5)
2. Monday till Saturday (1-6)
3. Monday till Sunday (1-7)

5. Setting the time

Press 'MODE' untill the LCD shows "CLOCK", than press "HOUR" and "MIN" to set the time. Than press "WEEK" to set the day of the week.