

## **Ouick Start Guide**

# Dock



Flinchrom ITD -Dock - 07 2018



## CONNECT THE DOCK

Hold the ELB 1200 over the Dock and press the unit firmly down until two clicks indicate that the Dock is connected with the ELB 1200. Please recheck and lock with the security button.



#### RELEASE THE DOCK

To remove the Dock from the ELB 1200 unit, lift the security knob to open and then grab and pull to open and remove the Dock



Ventilation, ensure that the cooling system is not blocked with tape or other materials.

## **DOCK CONNECTION**

The Dock is intended to be used with the ELB 1200 flash unit ONLY.







Press down to lock

Press up to unlock

Grab and pull to open and separate the battery from the unit

### TECHNICAL DATA

Parameter	Specification	Notes
Input	100-240Vac - 50/60 Hz	
Power	480W	600W peak
Dock Voltage (nom)	45VDC	
Socket	C14	
Fuse	8 AT	
ELB1200 Charge time	1.8 sec	2.3 sec if 2 modeling lamp switched ON
Fan	Adaptive	Intelligent temperature controlled fan.
Dimensions	18x13x10.3 cm	Width x Depth x Height
Weight	Approx. 1.9kg	Dock alone

### DOWNLOAD CONFORMITY

Please find the declaration for EC conformity and USA & Canada conformity on the Elinchrom website. http://bc.gs/ec



## Please check all security documents before use!

Elinchrom LTD

Av. de Longemalle 11, P. O. Box -458, CH-1020 Renens, Switzerland, Tel.: +41 21 637 26 77 Fax: +41 21 637 26 81 E-mail: elinchrom@elinchrom.ch www.elinchrom.com