














Elinchrom Flash Unit	Enter Update Mode	Requirements	Information	
D-Lite RX ONE	Hold Modeling button and Power-up button and switch the Elinchrom flash unit ON until the LED shows "Ud" then release the buttons.  +  +  + hold 3 seconds	Updater Software https://www.elinchrom.com/support_downloads.php?q=software+updater	Wireless update procedure via the Elinchrom Updater.	
D-Lite RX 200 / 400				
BRX 250 / 500				
FRX 200 / 400				
Master RX 600				
Ranger Quadra RX (AS) Ranger Quadra Hybrid	Switch the Unit OFF, hold the Modeling button and press also ON until the display shows "Ud" .  +  + hold 3 seconds	+ 	Follow the instructions on the Updater Software to update your Elinchrom unit.	
ELC Pro HD 500 / 1000	Switch the Unit OFF, hold the USER button and press also ON until the display shows "firmware update" .  +  + hold 3 seconds The Update process must run twice, there are 2 Micro controller to be updated.	EL-Skyport USB RX Speed MkII		
ELB 400	Connect the unit via the USB cable to your computer.  +  + hold 3 seconds	Updater Software https://www.elinchrom.com/support_downloads.php?q=software+updater		
ELB 1200	Connect the unit via the USB cable to your computer.  +  + hold 3 seconds		+ 	Update via USB connector and the Elinchrom Updater
ELB 500 TTL	The "Update Mode" is not required, just connect the USB cable to the device and the computer and start the Updater .		USB Cable USB-A to USB-Micro USB-A to USB-Mini for the Transmitter	
Transmitter Pro / Plus HS				

Download the Updater Software:
https://www.elinchrom.com/support_downloads.php?q=software+updater
Firmware Release Notes:
<https://www.elinchrom.com/support/firmware-release-notes.html>