


Handleiding

Kolomboormachine Crimac DC26




6. Onderdelenlijst

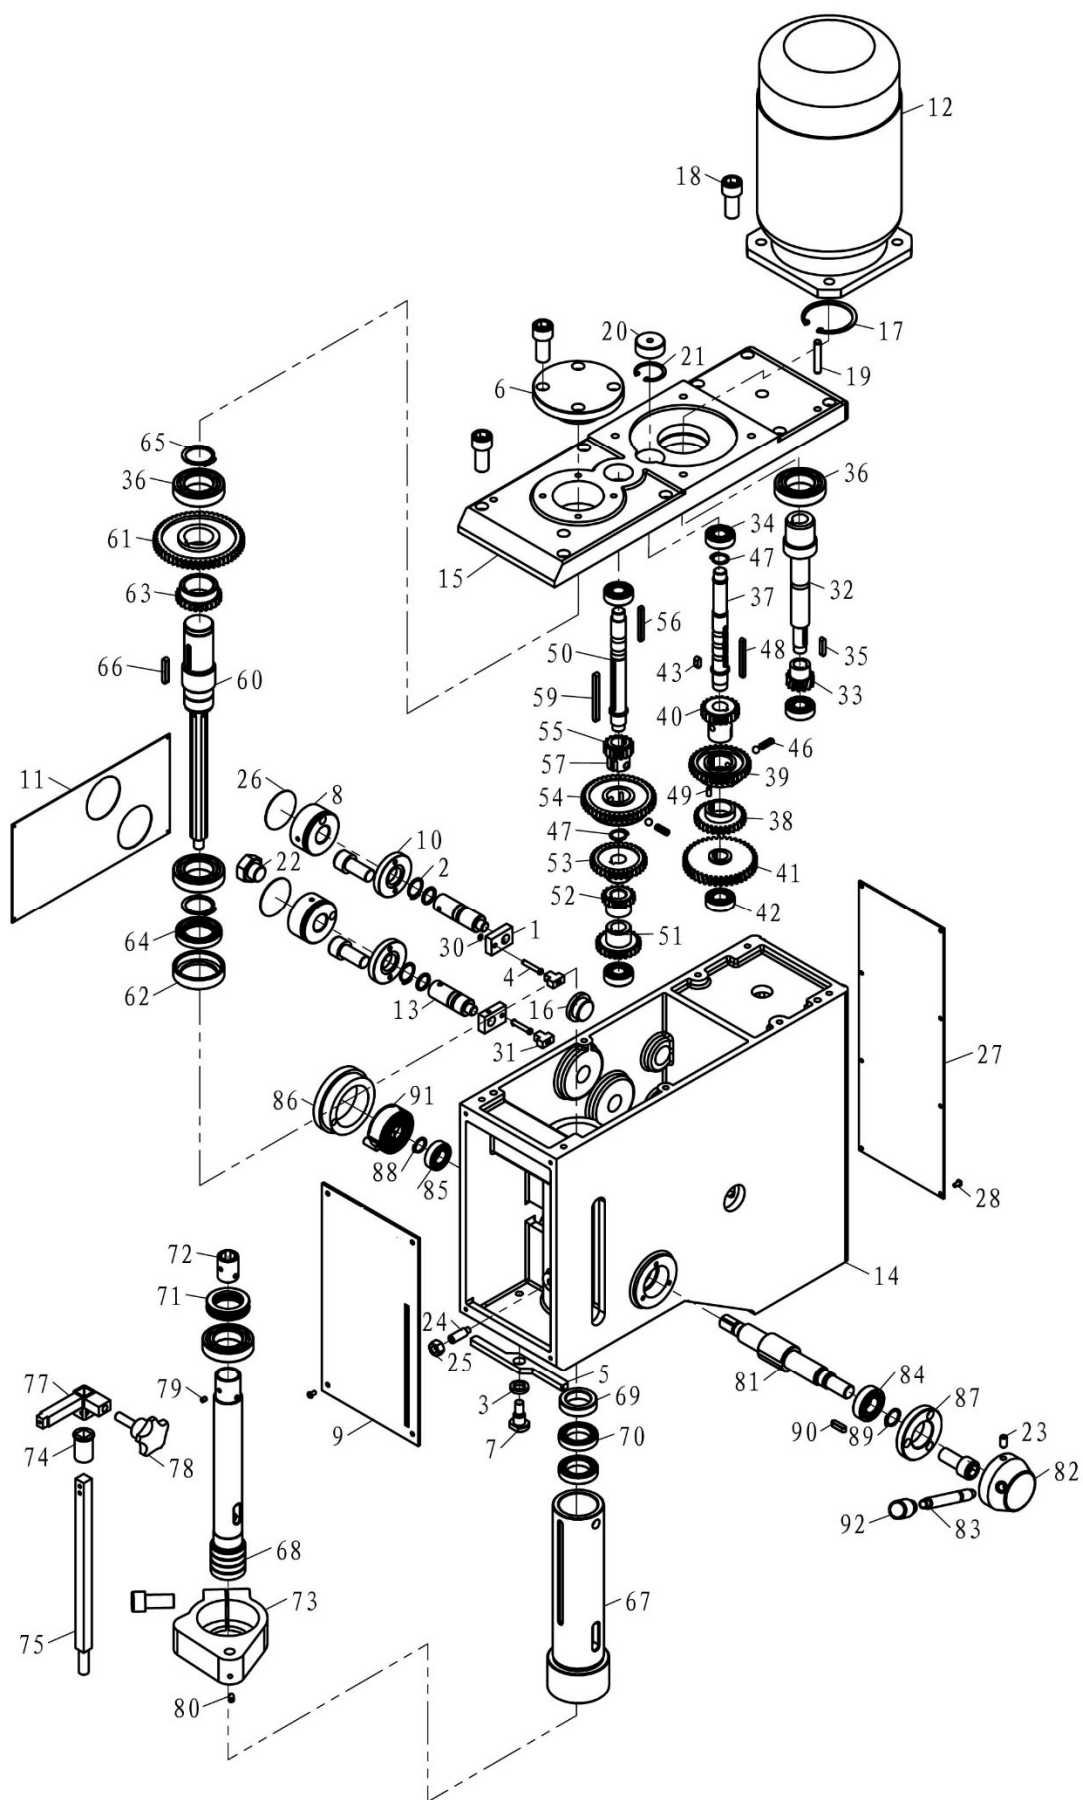

NO.	PARTS NO.	DESCRIPTION	QTY
1	OND07-1001	shift fork lever	2
2	OND07-1002	retaining ring	2
3	OND07-1003	rubber washer	1
4	OND07-1004	shift fork lever	2
5	OND07-1005	thrust bar	1
6	OND07-1006	cover	1
7	OND07-1007	pin	1
8	OND07-1008	handle	2
9	OND07-1009	panel	1
10	OND07-1010	gland	2
11	OND07-1011	speed plate	1
12	OND07-1012	motor	1
13	OND07-1013	shift fork shaft	2
14	OND07-1014	head body	1
15	OND07-1015	body cover	1
16	OND07-1016	oil level	1
17	OND07-1017	retaining ring	1
18	OND07-1018	screw	25
19	OND07-1019	pin	2
20	OND07-1020	plug	2
21	OND07-1021	retaining ring	2
22	OND07-1022	bolt	1
23	OND07-1023	screw	2
24	OND07-1024	screw	1
25	OND07-1025	nut	1
26	OND07-1026	speed lever	2
27	OND07-1027	plate	1
28	OND07-1028	screw	12
29	OND07-1029	O-ring	2
30	OND07-1030	retaining ring	2
31	OND07-1031	shift fork	2
32	OND07-1032	I shaft	1
33	OND07-1033	gear	1
34	OND07-1034	bearing	4

NO.	PARTS NO.	DESCRIPTION	QTY
35	OND07-1035	Key	1
36	OND07-1036	bearing	4
37	OND07-1037	II shaft	1
38	OND07-1038	gear	1
39	OND07-1039	gear	1
40	OND07-1040	gear	1
41	OND07-1041	gear	1
42	OND07-1042	bearing	1
43	OND07-1043	key	1
44	OND07-1044	screw	1
45	OND07-1045	steel ball	2
46	OND07-1046	spring	2
47	OND07-1047	retaining ring	2
48	OND07-1048	key	1
49	OND07-1049	screw	2
50	OND07-1050	III shaft	1
51	OND07-1051	gear	1
52	OND07-1052	gear	1
53	OND07-1053	gear	1
54	OND07-1054	gear	1
55	OND07-1055	gear	1
56	OND07-1056	key	1
57	OND07-1057	key	1
58	OND07-1058	screw	2
59	OND07-1059	key	1
60	OND07-1060	spline shaft	1
61	OND07-1061	gear	1
62	OND07-1062	oil seal base	1
63	OND07-1063	gear	1
64	OND07-1064	oil seal	1
65	OND07-1065	retaining ring	2
66	OND07-1066	key	1
67	OND07-1067	spindle sleeve	1
68	OND07-1068	spindle	1
69	OND07-1069	nut	1

NO.	PARTS NO.	DESCRIPTION	QTY
70	OND07-1070	bearing	2
71	OND07-1071	bearing	1
72	OND07-1072	spline sleeve	1
73	OND07-1073	pointer base	1
74	OND07-1074	sleeve	1
75	OND07-1075	pointer bar	1
76	OND07-1076	pointer	1
77	OND07-1077	adjustment block	1
78	OND07-1078	Deep stop	1
79	OND07-1079	pin	4
80	OND07-1080	screw	1
81	OND07-1081	gear shaft	1
82	OND07-1082	handle base	1
83	OND07-1083	Feed handle	3
84	OND07-1084	bearing	1
85	OND07-1085	bearing	1
86	OND07-1086	spring base	1
87	OND07-1087	gland	1
88	OND07-1088	retaining ring	1
89	OND07-1089	retaining ring	1
90	OND07-1090	key	1
91	OND07-1091	spring plate	1
92	OND07-1092	handle cover	3

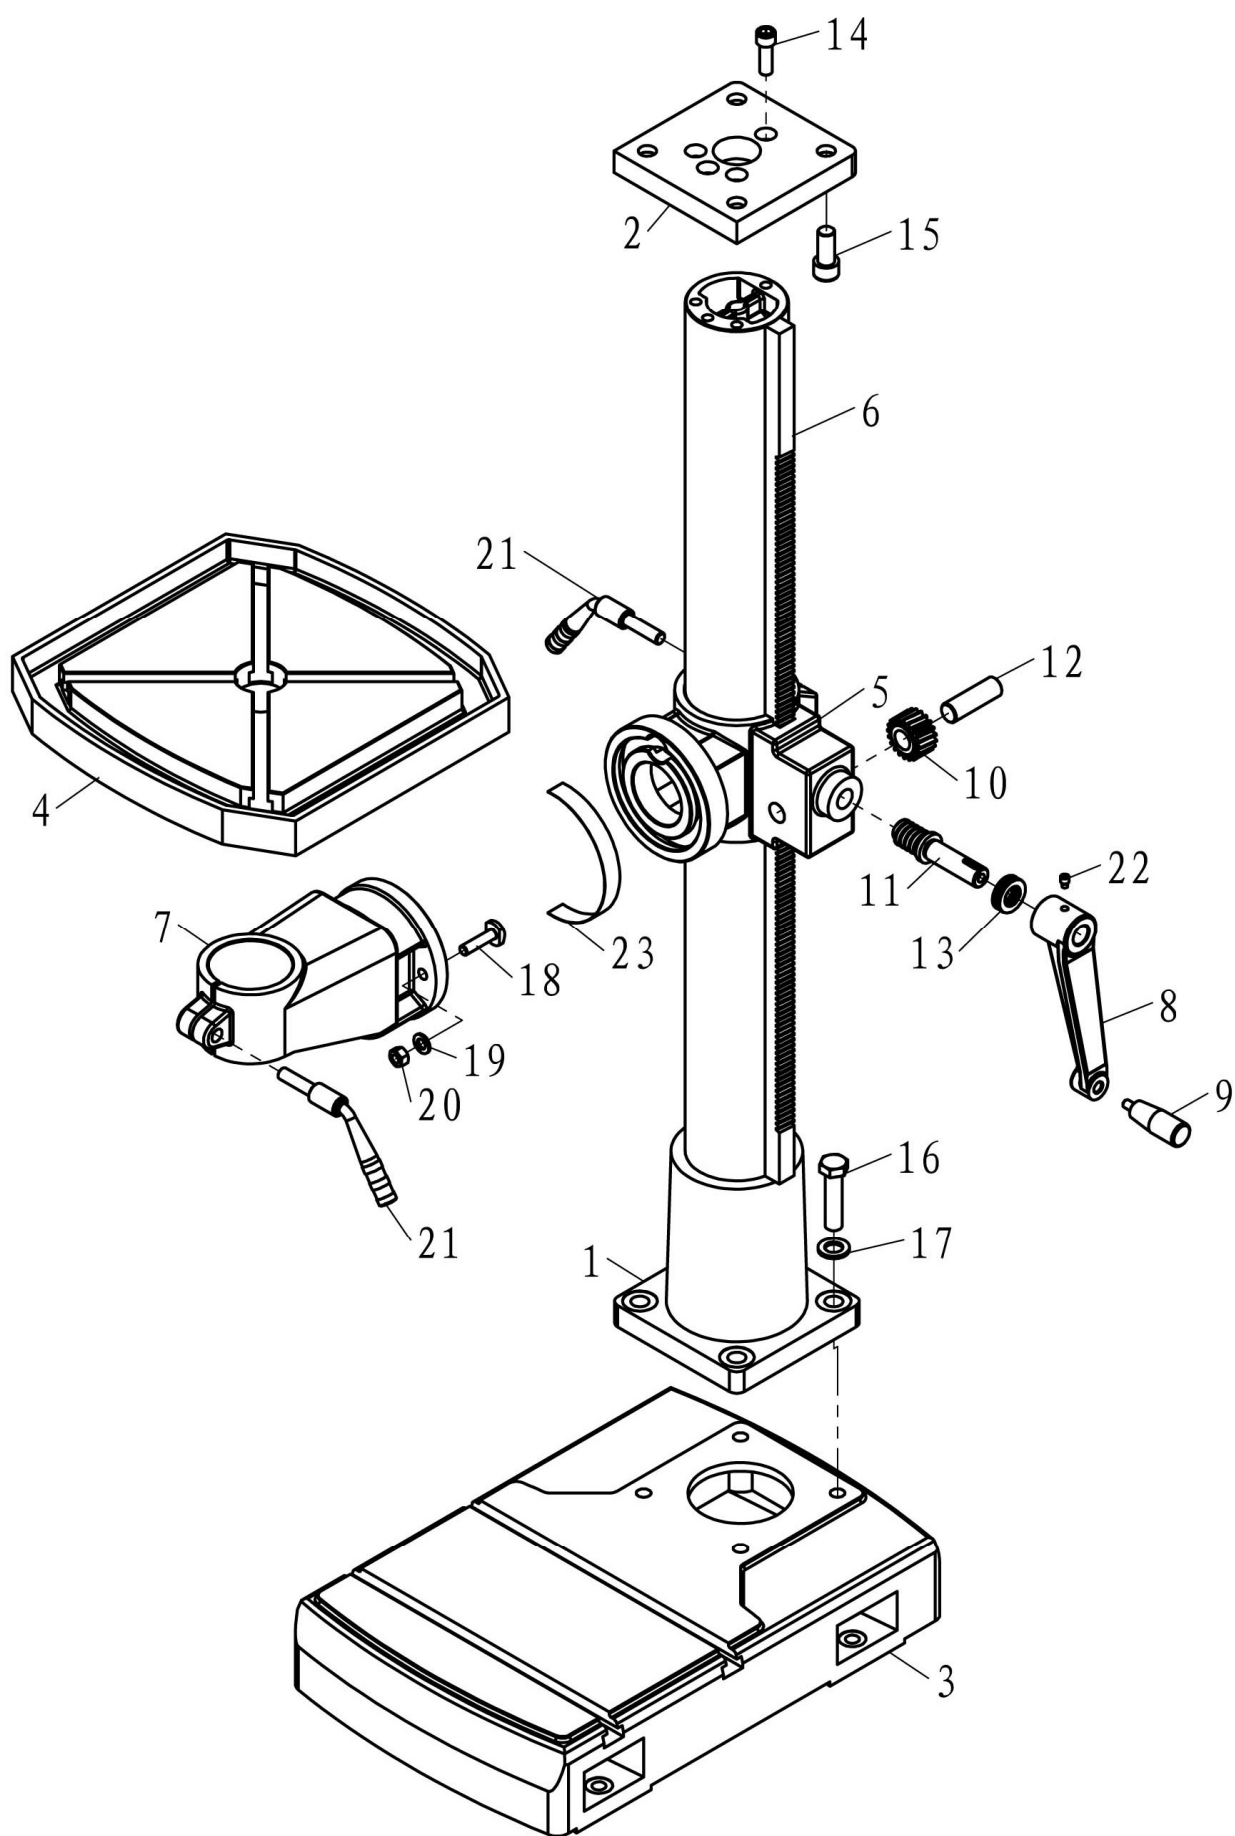

NO.	PARTS NO.	DESCRIPTION	QTY
1	OND07-1093	column	1
2	OND07-1094	connecting plate	1
3	OND07-1095	base	1
4	OND07-1096	worktable	1
5	OND07-1097	elevate sleeve	1
6	OND07-1098	rack	1
7	OND07-1099	rotating base	1
8	OND07-1100	elevate handle	1
9	OND07-1101	turn handle	1
10	OND07-1102	gear	1
11	OND07-1103	worm shaft	1
12	OND07-1104	small shaft	1
13	OND07-1105	bearing	1
14	OND07-1106	screw	4
15	OND07-1107	screw	4
16	OND07-1108	bolt	4
17	OND07-1109	washer	4
18	OND07-1110	T-bolt	3
19	OND07-1111	flat washer	3
20	OND07-1112	nut	3
21	OND07-1113	lock handle	2
22	OND07-1114	screw	1
23	OND07-1115	dial plate	1