


# Handleiding


## Lintzaagmachine Crimac PRO SCP420A



## 6. Onderdelenlijst

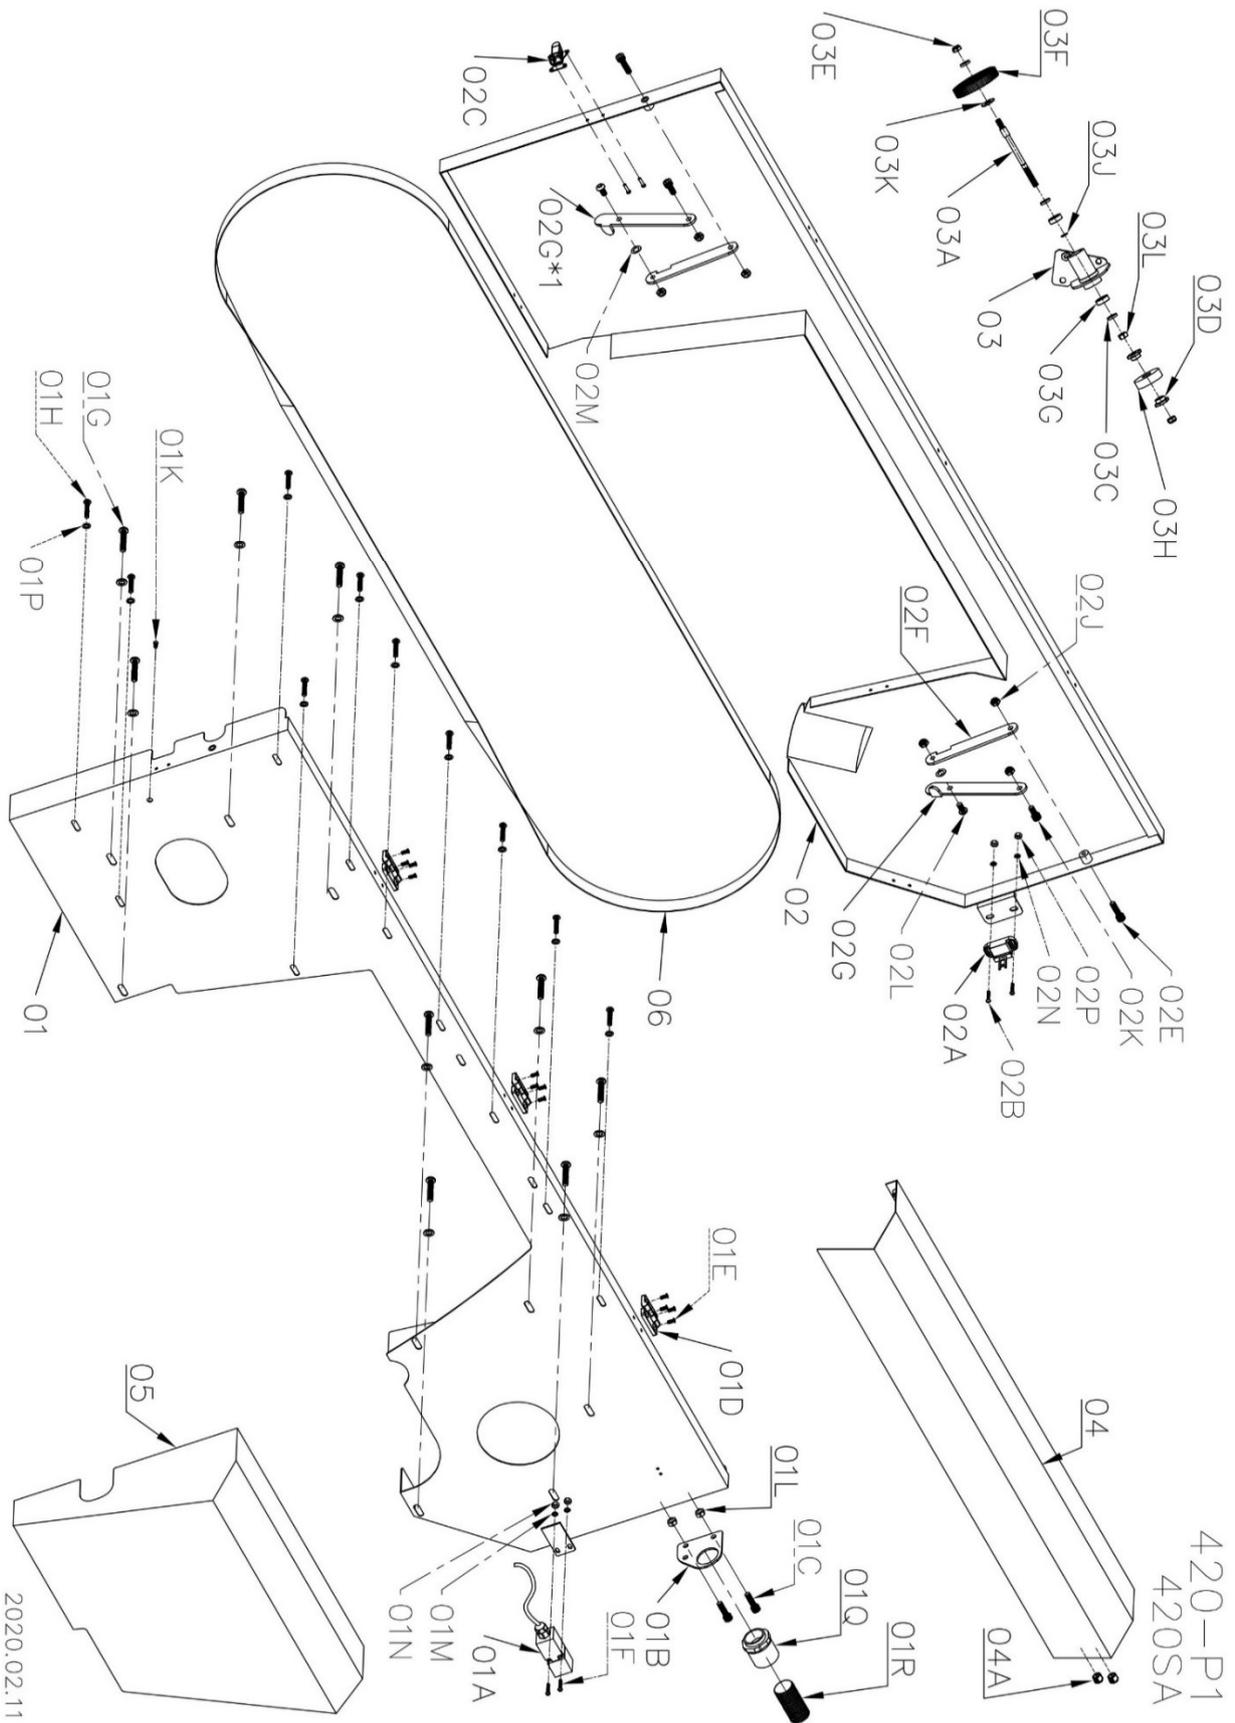

Nummer	Omschrijving	Artikelnummer	Nummer	Omschrijving	Artikelnummer
1	Cover (Saw body)	OND03-6001	02F	Crank support	OND03-6022
01A	Switch	OND03-6002	02G-1	Crank support	OND03-6023
01B	Wire fixing plate	OND03-6003	02H	Nut	OND03-6024
01C	Socket Head Cap Screw	OND03-6004	02J	Nut	OND03-6025
01D	Zinc alloy hinge	OND03-6005	02K	Socket Head Cap Screw	OND03-6026
01E	Screw	OND03-6006	02L	Socket Head Cap Screw	OND03-6027
01F	Socket Head Cap Screw	OND03-6007	02M	Washer	OND03-6028
01G	Socket Head Cap Screw	OND03-6008	02N	Washer	OND03-6029
01H	Socket Head Cap Screw	OND03-6009	02P	Nut	OND03-6030
01K	Screw	OND03-6010	3	Brush Assembly	OND03-6031
01L	Nut	OND03-6011	03A	Brown Brush Spindle Screw	OND03-6032
01M	Washer	OND03-6012	03B	Gasket	OND03-6033
01N	Nut	OND03-6013	03C	Rubber Holder	OND03-6034
01P	Washer	OND03-6014	03D	Nut	OND03-6035
01R	Flexible conduit	OND03-6015	03F	Brush	OND03-6036
02A	Cover	OND03-6016	03G	Bearing 608-2RS	OND03-6037
02B	Switch holder	OND03-6017	03H	C Ring	OND03-6038
02C	Cap Screw	OND03-6018	03J	Gasket	OND03-6039
02G	Flexible conduit	OND03-6019	03K	Nut	OND03-6040
02D	Rivet	OND03-6020	03L	Upper Cover	OND03-6041
02E	Socket Head Cap Screw	OND03-6021			

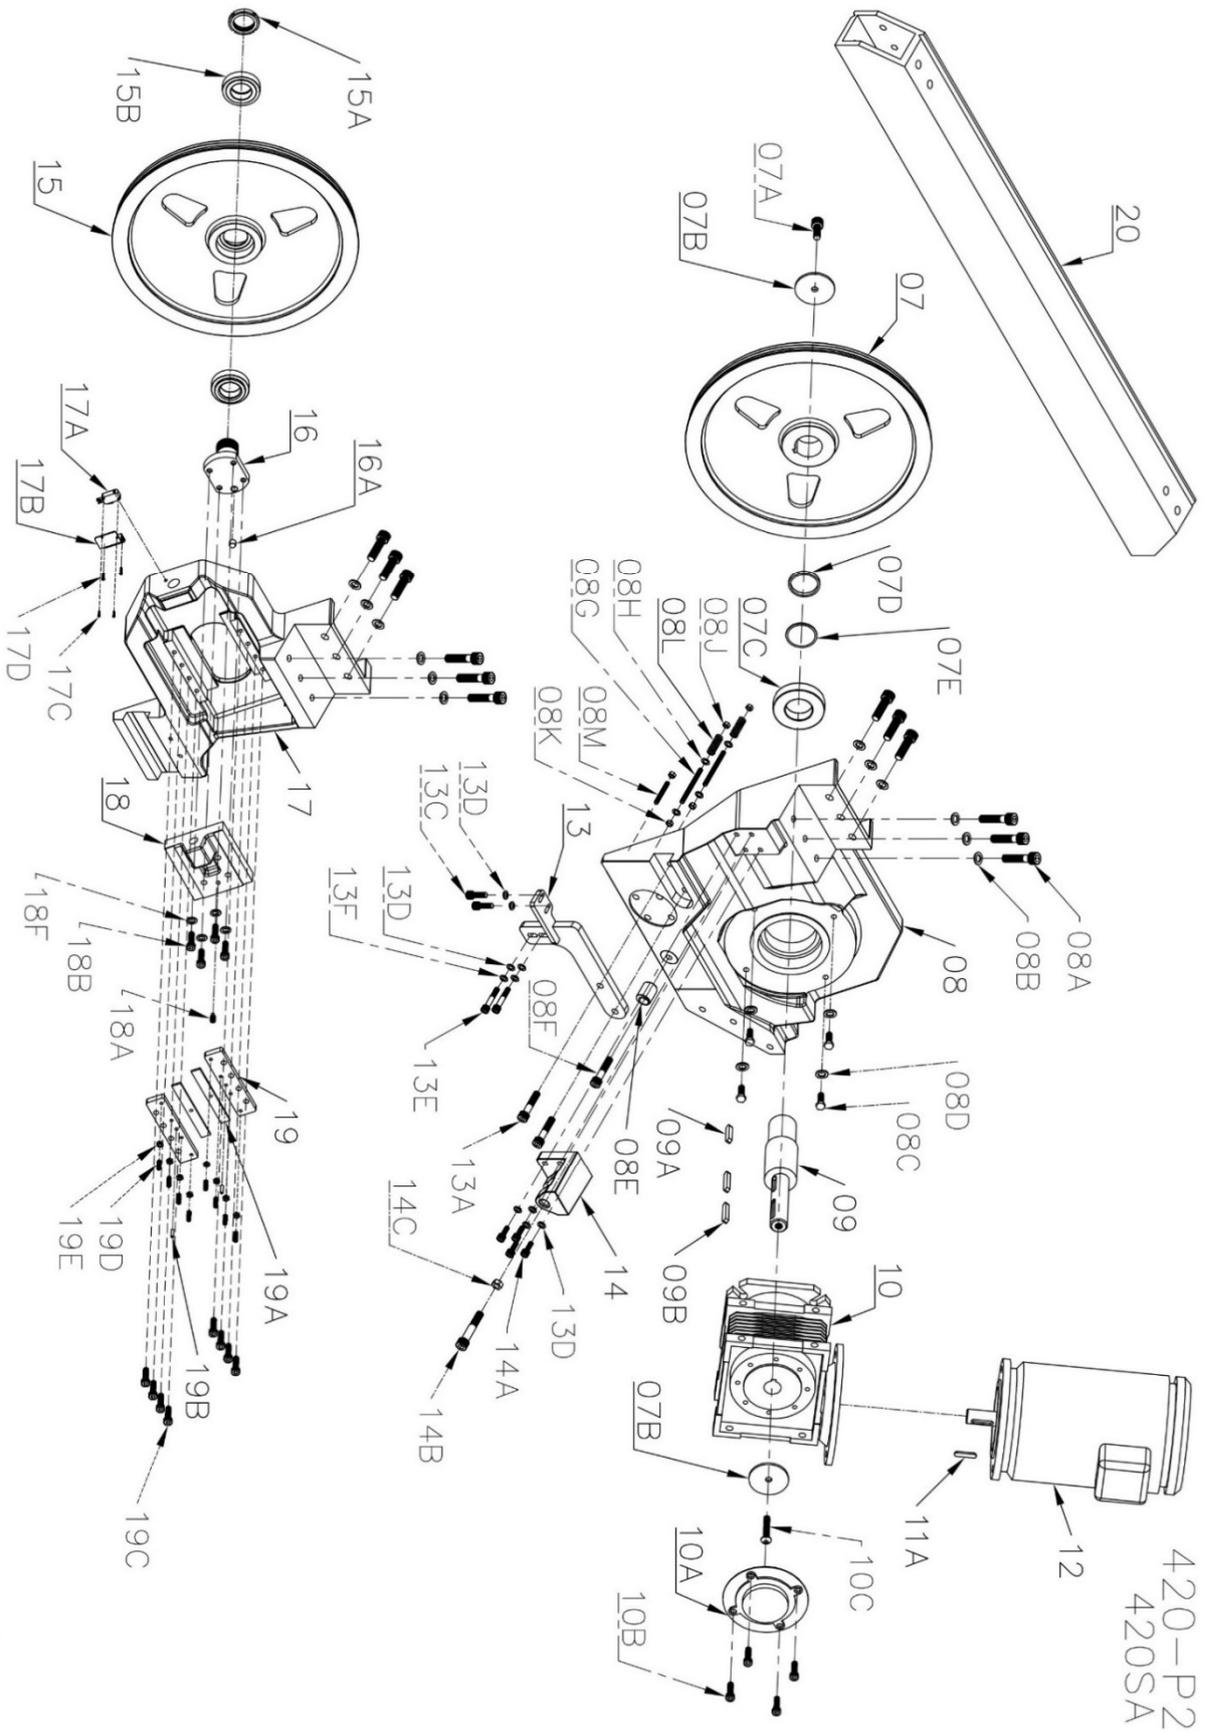


420-P2  
420SA

2020.02.26

Nummer	Omschrijving	Artikelnummer	Nummer	Omschrijving	Artikelnummer
4A	Hollow bolt	OND03-6042	11	Key	OND03-6069
5	Upper Cover (left)	OND03-6043	12	Saw band fixing plate	OND03-6070
6	Driven wheel	OND03-6044	13A	Socket Head Cap Screw	OND03-6071
7	Driving Wheel Screw	OND03-6045	13B	Washer	OND03-6072
07A	Spindle Bearing Gasket	OND03-6046	13C	Socket Head Cap Screw	OND03-6073
07B	Spindle bearing	OND03-6047	13D	Washer	OND03-6074
07C	Gasket 6T	OND03-6048	13F	Socket Head Cap Screw	OND03-6075
07G	Gasket 6T	OND03-6049	14	Spring Washer	OND03-6076
07E	Gasket 2T	OND03-6050	14A	Cylinder Support Shaft	OND03-6077
08A	Socket Head Cap Screw	OND03-6051	14B	Socket Head Cap Screw	OND03-6078
08B	Washer	OND03-6052	14C	Nut	OND03-6079
08C	Screw	OND03-6053	15	Driven wheel	OND03-6080
08D	Washer	OND03-6054	15A	Nylon Nut	OND03-6081
08E	Height Fixing Sleeve	OND03-6055	15B	Roller bearing	OND03-6082
08F	Socket Head Cap Screw	OND03-6056	16	Driven wheel mandrel	OND03-6083
08G	Socket Head Flat Screw	OND03-6057	16A	Bar	OND03-6084
08H	Washer	OND03-6058	17	Saw Bow	OND03-6085
08J	Nut	OND03-6059	17A	Switch	OND03-6086
08K	Nut	OND03-6060	17B	Socket Head Cap Screw	OND03-6087
08L	Spring	OND03-6061	17C	Socket Head Cap Screw	OND03-6088
9	Socket Head Flat Screw	OND03-6062	18	Slider	OND03-6089
09A	Driving Wheel mandrel	OND03-6063	18A	Socket Head Flat Screw	OND03-6090
09B	Washer	OND03-6064	18B	Socket Head Cap Screw	OND03-6091
09C	Key	OND03-6065	19	Side fixing Plate	OND03-6092
10	Gear box (Keying flange)	OND03-6066	19A	Spring Pin	OND03-6093
10A	Flange Cover	OND03-6067	19C	Socket Head Cap Screw	OND03-6094
10B	Socket Head Cap Screw	OND03-6068	19D	Socket Head Flat Screw	OND03-6095




Nummer	Omschrijving	Artikelnummer	Nummer	Omschrijving	Artikelnummer
20	Connecting Rod	OND03-6096	26G	Spring Washer	OND03-6125
21	Rotary Center Cover	OND03-6097	27	Gasket	OND03-6126
21A	Screw	OND03-6098	28	Nylon Nut	OND03-6127
22	Fixed mandrel	OND03-6099	29	Vise Slider	OND03-6128
22A	Steel needle	OND03-6100	29A	Socket Head Cap Screw	OND03-6129
23	Swivel seat	OND03-6101	29B	Socket Head Cap Screw	OND03-6130
23A	Bolt	OND03-6102	30	Connecting shaft	OND03-6131
23B	Socket Head Cap Screw	OND03-6103	30A	Oil seal	OND03-6132
23C	Screw	OND03-6104	30B	Socket Head Cap Screw	OND03-6133
23D	Nut	OND03-6105	31	Connecting seat	OND03-6134
23E	Nozzle	OND03-6106	31A	Switch	OND03-6135
23F	Socket Head Cap Screw	OND03-6107	31B	Socket Head Cap Screw	OND03-6136
23G	Spring Washer	OND03-6108	31C	Bearing	OND03-6137
23H	Steel ball	OND03-6109	31D	Washer	OND03-6138
23J	Steel sleeve	OND03-6110	31E	Nut	OND03-6139
23K	Steel ball	OND03-6111	31F	Washer	OND03-6140
23L	Steel sleeve	OND03-6112	32	Fixed sleeve	OND03-6141
23M	Base Spring	OND03-6113	32A	Switch	OND03-6142
23N	Screw	OND03-6114	32B	Hex Cap Screw	OND03-6143
23P	Nut	OND03-6115	32C	Limit Switch	OND03-6144
24	Vise Support plate (left)	OND03-6116	32D	Socket Head Cap Screw	OND03-6145
24A	Hex Cap Screw	OND03-6117	32E	Washer	OND03-6146
25	Support plate	OND03-6118	33	Spring Fixed seat	OND03-6147
26	Bracket	OND03-6119	33A	Spring Screw	OND03-6148
26A	Hydraulic cylinder	OND03-6120	33B	Washer	OND03-6149
26C	Socket Head Cap Screw	OND03-6121	33C	Washer	OND03-6150
26D	Socket Head Cap Screw	OND03-6122	33D	Socket Head Cap Screw	OND03-6151
26E	Washer	OND03-6123	33E	Nut	OND03-6152
26F	Nut	OND03-6124	34	Spring	OND03-6153

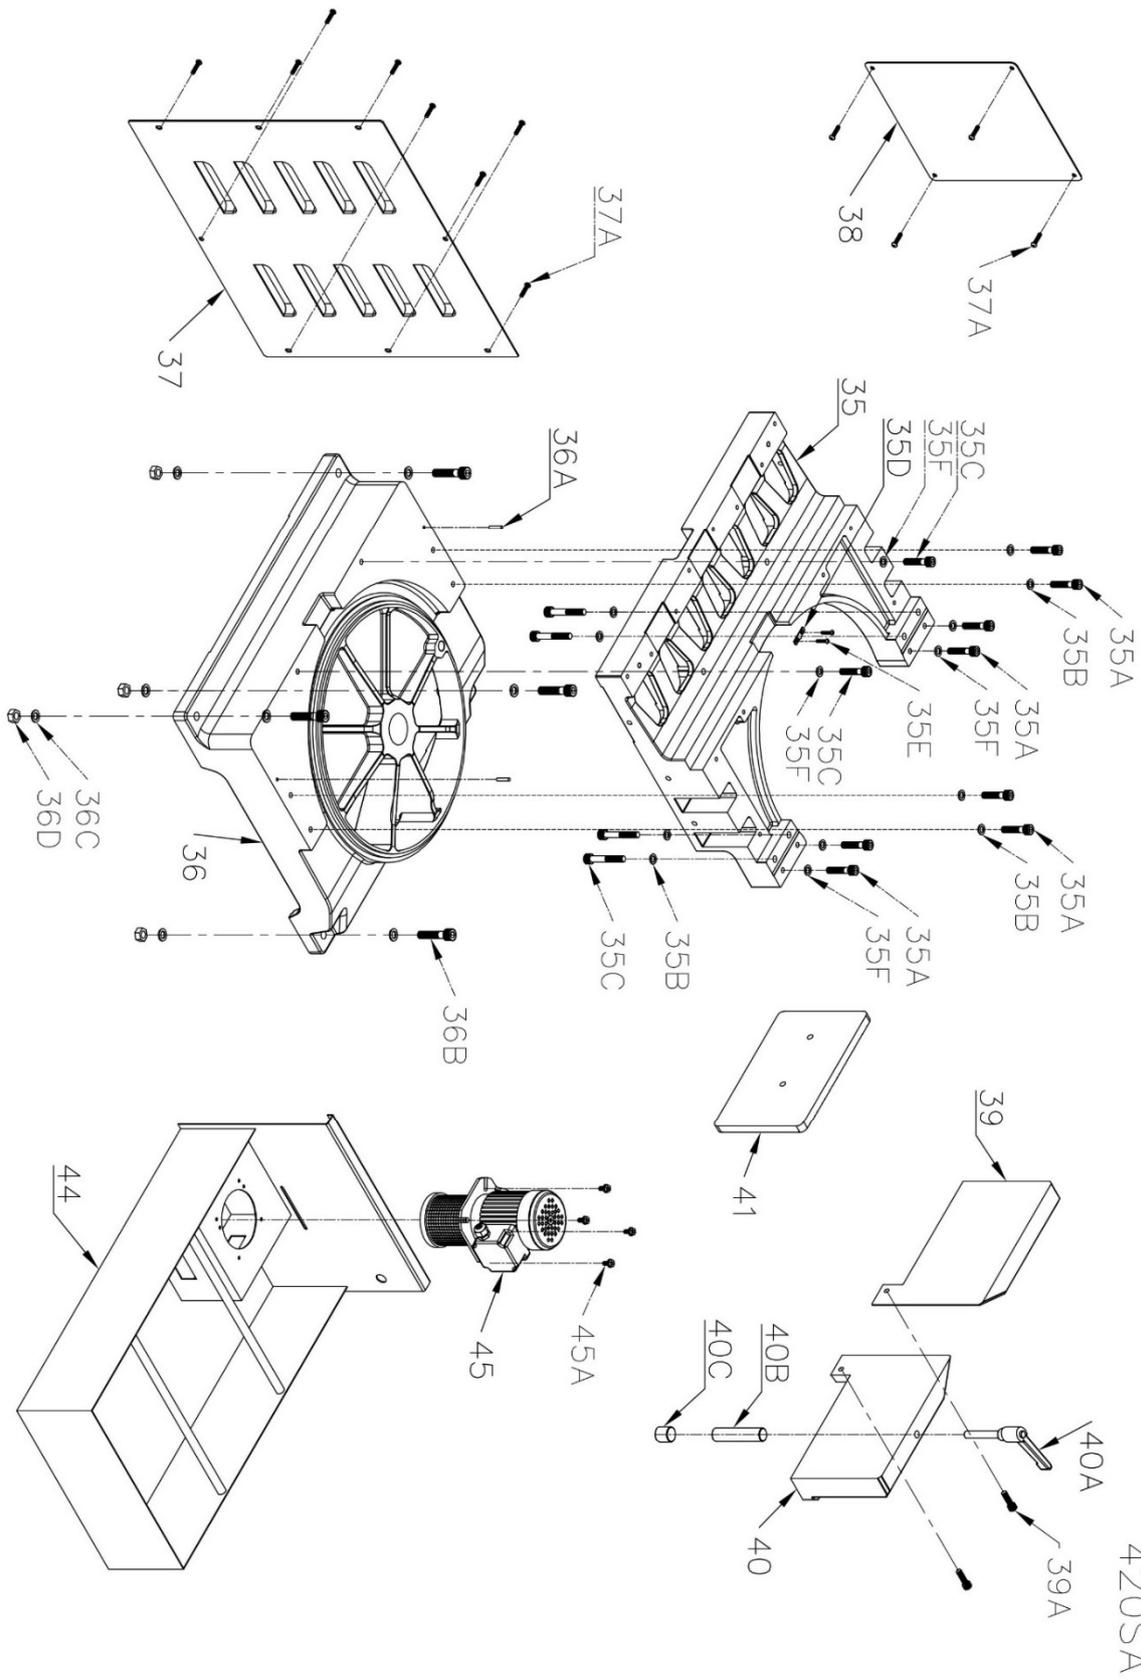

420-P4  
420SA

2020.02.26


420-P8  
420SA  
350SA

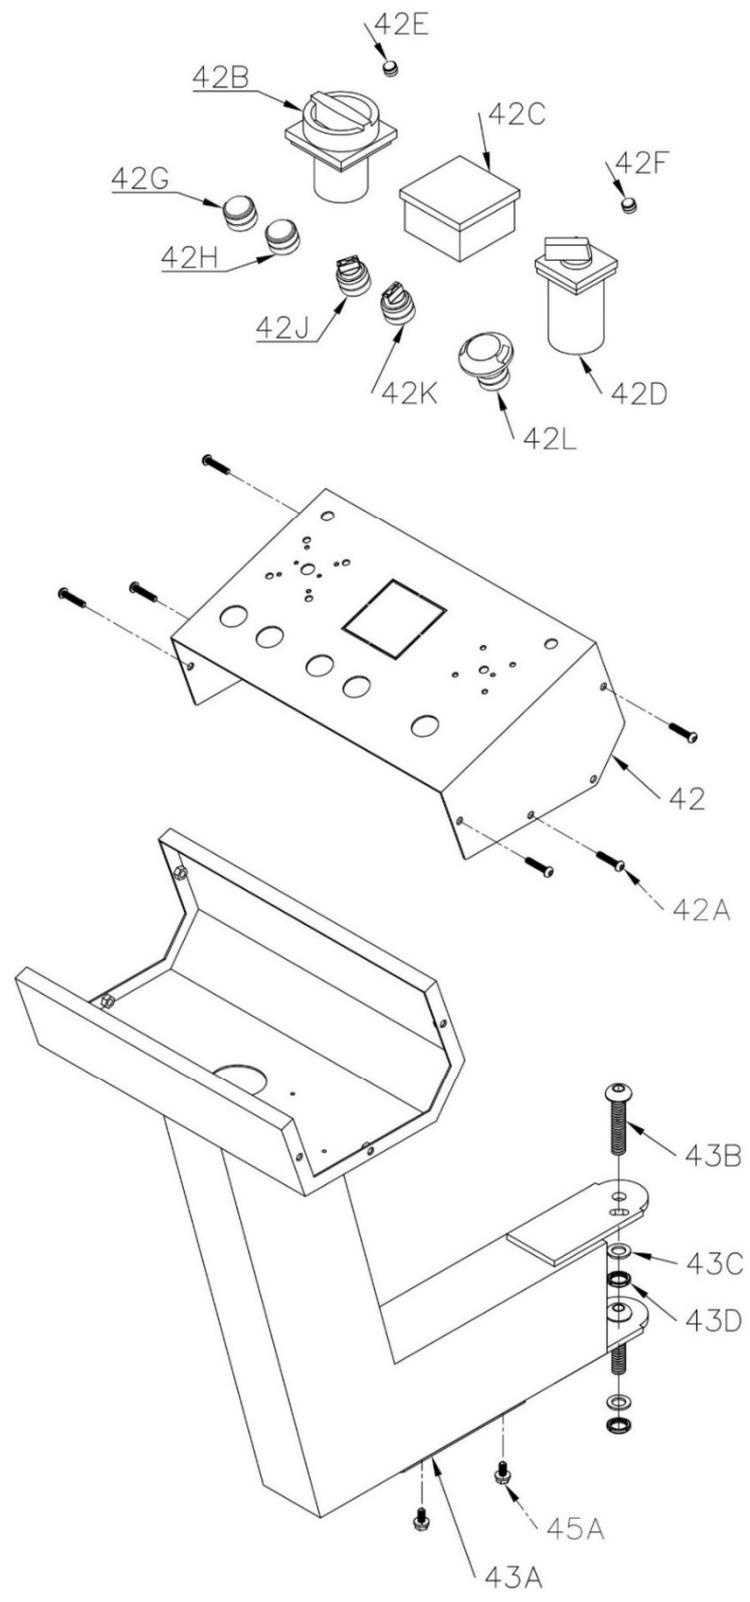

2020.02.27


Nummer	Omschrijving	Artikelnummer	Nummer	Omschrijving	Artikelnummer
35	Upper Base	OND03-6154	41	Vise Plate	OND03-6175
35A	Socket Head Cap Screw	OND03-6155	42	Panel	OND03-6176
35B	Washer	OND03-6156	42A	Socket Head Cap Screw	OND03-6177
35C	Socket Head Cap Screw	OND03-6157	42B	Main power switch	OND03-6178
35D	Needle Fixing plate	OND03-6158	42C	Ammeter	OND03-6179
35E	Socket Head Cap Screw	OND03-6159	42D	Speed switch	OND03-6180
35F	Washer	OND03-6160	42E	Indicator light	OND03-6181
36	Base	OND03-6161	42F	Indicator light	OND03-6182
36A	Bolt	OND03-6162	42G	Hydraulic start button	OND03-6183
36B	Socket Head Cap Screw	OND03-6163	42H	Cutting start button	OND03-6184
36C	Washer	OND03-6164	42J	Clip Selector	OND03-6185
36D	Nut	OND03-6165	42K	Saw bow up and down selector	OND03-6186
37	Cover	OND03-6166	42L	Emergency power off switch	OND03-6187
37A	Socket Head Cap Screw	OND03-6167	43	Bracket	OND03-6188
38	Cover	OND03-6168	43A	Cover	OND03-6189
39	Vise Plate (left)	OND03-6169	43B	Socket Head Cap Screw	OND03-6190
39A	Socket Head Cap Screw	OND03-6170	43C	Washer	OND03-6191
40	Bezel	OND03-6171	43D	Nut	OND03-6192
40A	Knob	OND03-6172	44	Water Tank Drawer	OND03-6193
40B	Steel Bar	OND03-6173	45	Pump	OND03-6194
40C	Copper Bar	OND03-6174	45A	Screw	OND03-6195



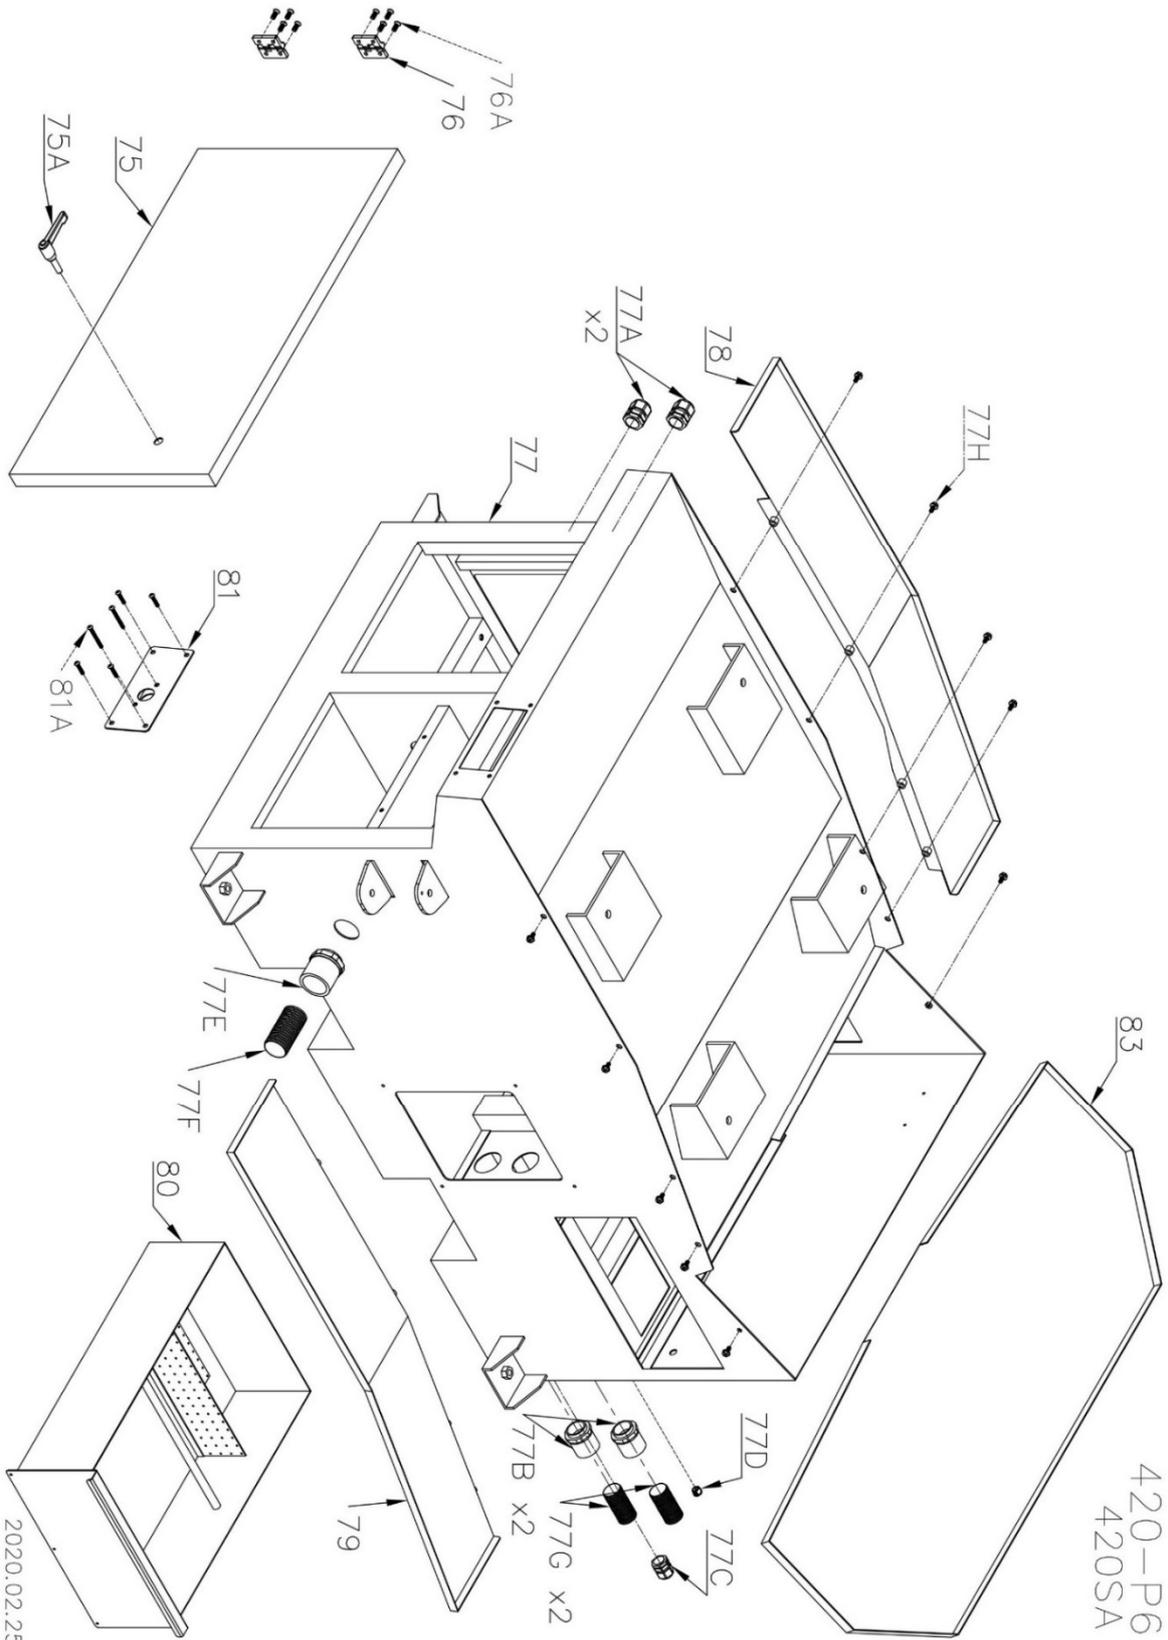

420-P6  
 420SA



2020.02.25

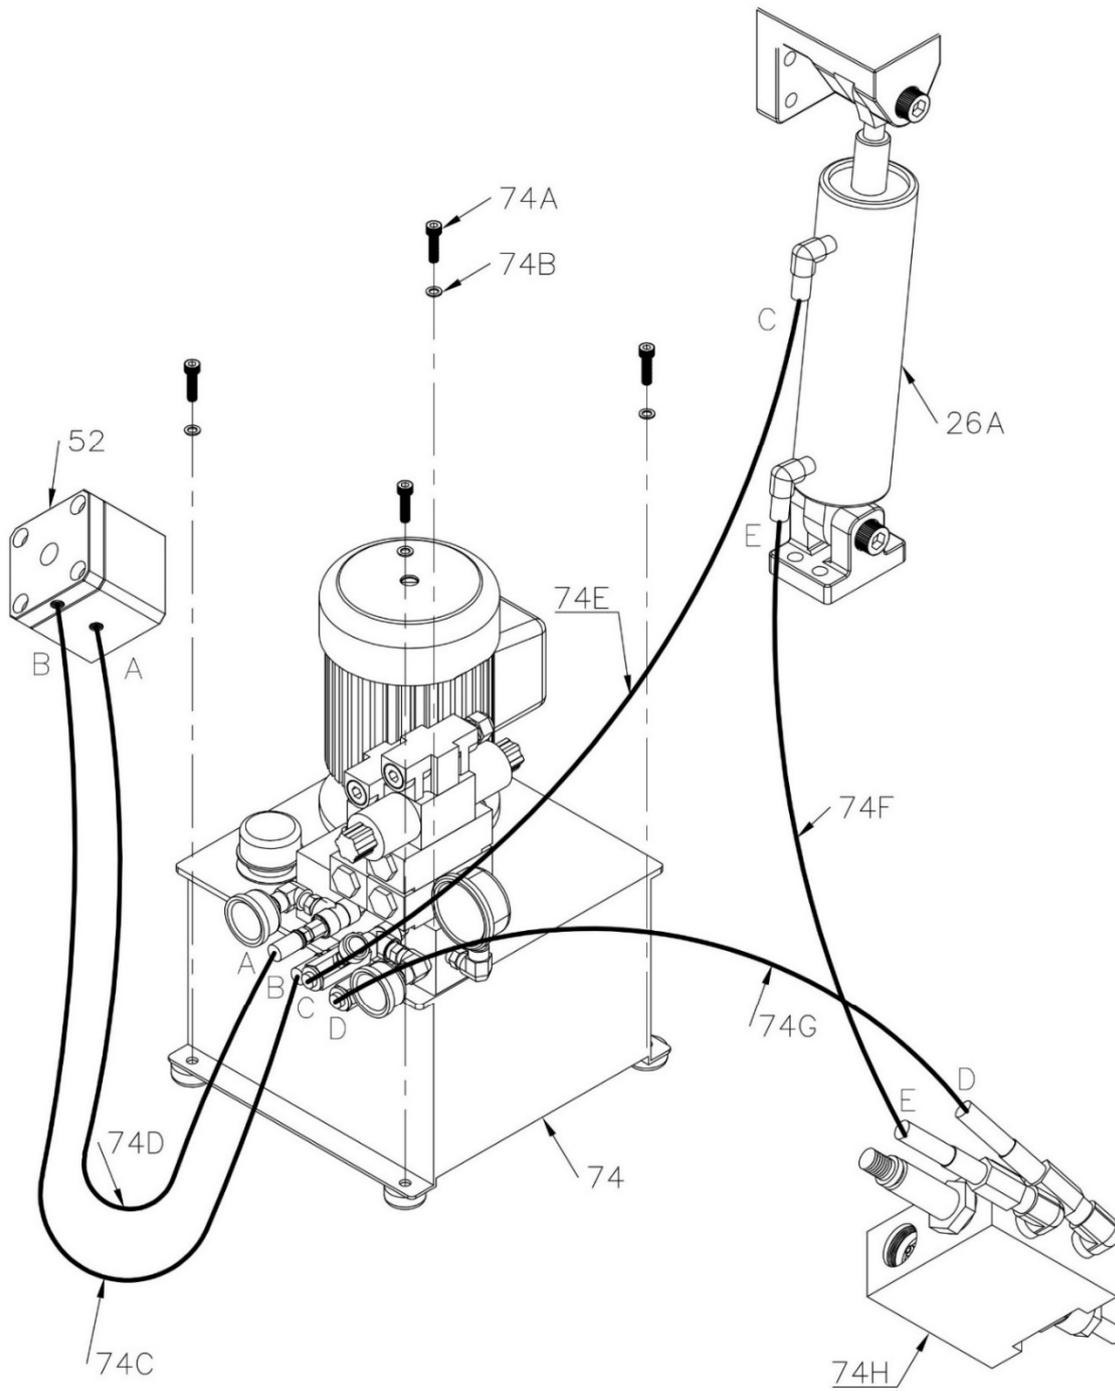

2020.02.18

Nummer	Omschrijving	Artikelnummer	Nummer	Omschrijving	Artikelnummer
46	Vise Cover	OND03-6196	62A	Socket Head Cap Screw	OND03-6235
46A	Screw	OND03-6197	63	Rear blade holder	OND03-6236
46B	Spring Pin	OND03-6198	64	Valve	OND03-6237
46C	Socket Head Flat Screw	OND03-6199	65	Guide Block Base	OND03-6238
47	Screw	OND03-6200	65A	Guide Block (upper)	OND03-6239
47A	Washer	OND03-6201	65B	Socket Head Cap Screw	OND03-6240
47B	Socket Head Cap Screw	OND03-6202	65C	Screw	OND03-6241
48	Steel Plate	OND03-6203	65D	Socket Head Flat Screw	OND03-6242
49	Movable Vise	OND03-6204	66	Bearing	OND03-6243
49A	Copper Screw	OND03-6205	66A	Bearing Casing (Short)	OND03-6244
49B	Spring	OND03-6206	66B	Bushing	OND03-6245
51	Vise holder	OND03-6207	66BA	Bearing Casing (long)	OND03-6246
51A	Socket Head Cap Screw	OND03-6208	66BB	Gasket	OND03-6247
51B	Washer	OND03-6209	66C	Socket Head Cap Screw	OND03-6248
52	Hydraulic Vise Assembly	OND03-6210	66CA	Socket Head Cap Screw	OND03-6249
52D	Socket Head Cap Screw	OND03-6211	66D	Washer	OND03-6250
53	Hydraulic vise fixing block	OND03-6212	67	Front Blade holder	OND03-6251
53A	Socket Head Cap Screw	OND03-6213	67A	Guide block	OND03-6252
54	HandleWheel	OND03-6214	68	Ball valve	OND03-6253
54A	Washer	OND03-6215	69	Protection Sheet	OND03-6254
54B	Socket Head Cap Screw	OND03-6216	69A	Socket Head Cap Screw	OND03-6255
55	Grip	OND03-6217	70	Location Rod	OND03-6256
56	Vise handle	OND03-6218	71	Linear Slide Rail	OND03-6257
56A	Head of Handle	OND03-6219	71A	Bezel	OND03-6258
56B	Bearing	OND03-6220	71B	Socket Head Cap Screw	OND03-6259
56C	Vise handle rod	OND03-6221	71C	Washer	OND03-6260
57	Head of handle	OND03-6222	71D	Nut	OND03-6261
57A	Handle	OND03-6223	72	Connection Plate	OND03-6262
58	Pressure meter	OND03-6224	73	Switch	OND03-6263
59	Bearing	OND03-6225	73A	Socket Head Cap Screw	OND03-6264
60	Long screw	OND03-6226	74	Hydraulic Pump System	OND03-6265
60A	Nut	OND03-6227	74A	Socket Head Cap Screw	OND03-6266
60B	Gasket	OND03-6228	74B	Washer	OND03-6267
61	Bracket	OND03-6229	74C	Oil tube	OND03-6268
61A	Socket Head Cap Screw	OND03-6230	74D	Oil tube	OND03-6269
61B	Socket Head Cap Screw	OND03-6231	74E	Oil tube	OND03-6270
61C	Spring Washer	OND03-6232	74F	Oil tube	OND03-6271
61D	Washer	OND03-6233	74G	Oil tube	OND03-6272
62	Safe cover for blade	OND03-6234	74H	Oil tube	OND03-6273

Nummer	Omschrijving	Artikelnummer	Nummer	Omschrijving	Artikelnummer
75	Door	OND03-6274	78	Base Plate (right)	OND03-6287
75A	Handle	OND03-6275	79	Base Plate (left)	OND03-6288
76	Hinge	OND03-6276	80	Base Drawer	OND03-6289
76A	Screw	OND03-6277	81	Bracket	OND03-6290
77	Base	OND03-6278	81A	Socket Head Cap Screw	OND03-6291
77A	Adaptor	OND03-6279	82	Drawer	OND03-6292
77B	Adaptor	OND03-6280	82A	Socket Head Cap Screw	OND03-6293
77C	Adaptor	OND03-6281	82B	Washer	OND03-6294
77D	Hollow bolt	OND03-6282	83	Water Tray	OND03-6295
77E	Adaptor	OND03-6283	84	Fixed Block	OND03-6296
77F	Flexible conduit	OND03-6284	84A	Screw	OND03-6297
77G	Flexible conduit	OND03-6285	85	Screw	OND03-6298
77H	Socket Head Cap Screw	OND03-6286	86	Copper	OND03-6299

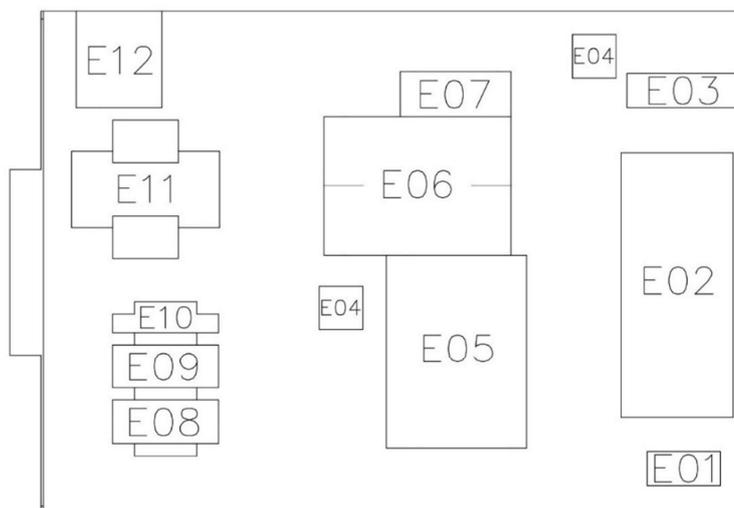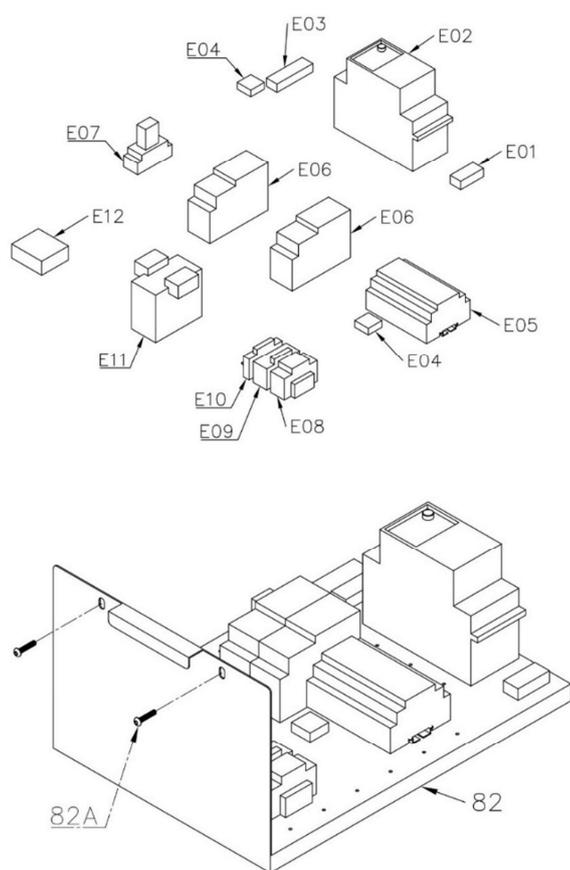

2020.02.27

Nummer	Omschrijving	Artikelnummer	Nummer	Omschrijving	Artikelnummer
E01	Terminal block	OND03-6300	E08	Double terminal block	OND03-6307
E02	Inverter	OND03-6301	E09	2 to 2 terminal blocks	OND03-6308
E03	Terminal block	OND03-6302	E10	Double terminal block	OND03-6309
E04	Bridge rectifier	OND03-6303	E11	Transformer	OND03-6310
E05	PLC	OND03-6304	E12	Fuse Holder	OND03-6311
E06	Electromagnetic contactor	OND03-6305	82	Drawer	OND03-6292
E07	Relay group	OND03-6306	82A	Socket Head Cap Screw	OND03-6293