


Engine re placement manual.

loosen the bolt

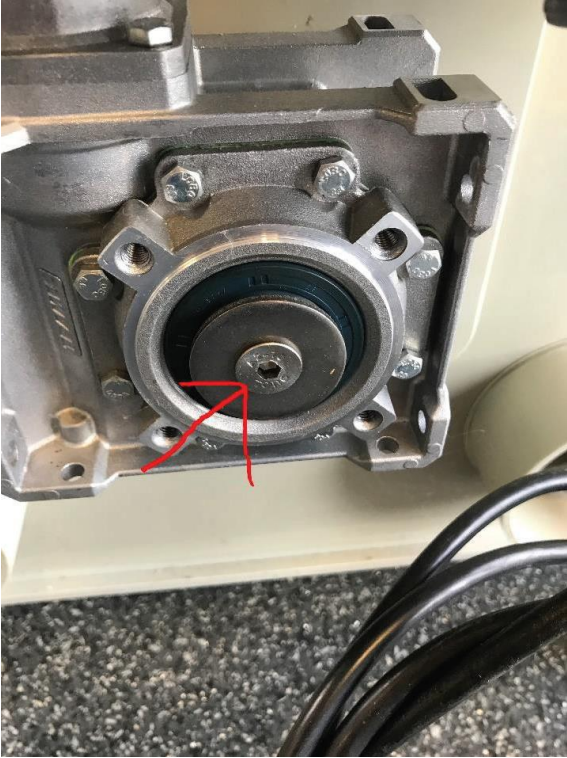

loosen the nuts 4x



remove the motor.



If the engine is old, this may be difficult. then you need one gear puller.

