



Flyer Insert Assembly Instruction

Installing the ZÜCA insert to the ZÜCA frame is easy. You'll need a 4 mm allen wrench and a 10 mm combination wrench.

1. Remove the fabric fastener at the top of the insert, but don't remove the wax paper.
2. Place the insert into the main opening of the frame. Make sure to pull the back flap between the frame and the telescoping handle so that it can be secured later.
3. There are 3 parts to consider to attach the insert to the top of the frame; the two eyelets at the top of the insert, the tension rod on the front of the insert, and the fabric fastener.
 - a. Attached the fabric fastener to the underside of the frame aligning the position to the fabric fastener that's attached to the insert. Thread the tension rod through the front of the insert. You can attach the insert to the frame later.
 - b. There are two screws on each side of the top of the frame that holds the metal tubes to the frame. Lightly loosen the front screws with a 4 mm allen wrench and a 10 mm combination wrench. Remove the back screws with the same wrenches. Place the eyelet at the top of the insert between the metal tube and the frame, and thread the screw through the eye hole. Tighten the front and back screws and do the same on the other side.
 - c. There are two pinholes on the inside of the metal tubes that's near the front screws. Put one side of the tension rod in the hole, and bend the tension rod just enough to get the rod in the pinhole on the other metal tube. The rod should spring back to its normal shape.
 - d. Place your hand inside the insert and attached the two fabric fasteners together, and attaching the insert to the frame.
4. Unzip the zipper tubes located on each side of the main opening and wrap them around the front metal tubes. Be sure the zipper is mated completely before you start zipping. Zip down both zippers a short distance. Then slide into place over the curved section of the metal tubes and finish zipping. Fold over both ends of the zipper tubes with the protective fabric fastener tabs located at the top and the bottom of each zipper tubes.
5. Turn the frame around so that the back panel is facing you. Secure the back fabric fasteners to the frame.
6. From the main opening, set the floor panel down inside the insert. Make any necessary adjustments so that your insert fits perfectly in its frame.

Care

ZÜCAs are hand washable. Close all fabric fastener tabs and hand wash your ZÜCA insert in cold water with mild soap. Rinse well and hang dry or you may also dry in its frame.

Warning

Do not stand on your ZÜCA.

Do not sit on your ZÜCA with the handle up.

Do not ride your ZÜCA or pull someone sitting on your ZÜCA.

The ZÜCA Flyer is designed to hold a normal sitting load of up to 130 kg provided your ZÜCA is on a firm level surface.