


## *PianoDisc Moving Pedal*

Introducing the PianoDisc Moving pedal that works the sustain pedal automatically when the PianoDisc system plays!

This simple connection makes the sustain pedal move while the PianoDisc System plays music. The connection is a piece of Velcro which connects the sustain pedal rod to the PianoDisc sustain lever by a piece of Velcro.

To install the Velcro:

1. Loosen the jam nut on the sustain rod and remove the “dome” nut.
2. Place the hole in the Velcro on the rod and place the dome nut back on the sustain rod. See pictures with and without the ProRecord pedal switch below.
3. After the final adjustments of the sustain rod, place the Velcro over the sustain lever securing the Velcro to itself.

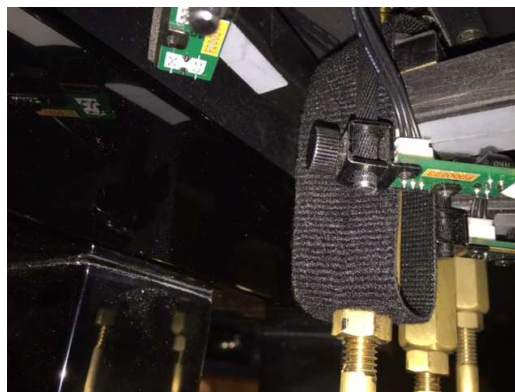

**NOTE:** It may be necessary to place a little clear silicone in the pedal rod connection at the pedal if there is a loose fit.

**CAUTION:** The Moving Pedal requires that **NO SPRING** can be added to the sustain pedal in the pedal box. This would over work the pedal solenoid. If the customer complains the pedal is too light then the Moving Pedal should not be used.