



UNIQBOOM WIRELESS SPEAKER USER GUIDE

To understand correct operating of the speaker, please read this manual carefully before using. Any content revise of the manual invalidates it. We are not responsible for consequence caused by faulty usage or oversight of this manual.

FEATURES


1. 2.1 outdoor Bluetooth Speaker with 4 inch subwoofer;
2. Very clear sound output with dynamic sound effect;
3. With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad;
4. Secure simple pairing for user-friendly operating;
5. 10 meters operating range;
6. USB & Micro SD card supporting;
7. FM radio;
8. Line-in function, suitable for PC, MID, TV and other audio device;
9. Built-in lithium rechargeable battery 1800mAh;
10. With handle, easy to take out;

SPECIFICATION

Bluetooth version:	4.2 Support A2DP and AVRCP profile
Bluetooth range:	up to 10 meters
Horn Size:	1.57 inch
Subwoofer Size:	4 inch
Horn output:	3W*2,4Ω
Subwoofer output:	12W, 4Ω
Aux-in:	3.5mm jack connection
Power supply:	Built-in rechargeable lithium battery 1500mAh
Recharge power:	DC 5V 1A (USB-to-micro USB charging cable included)
Product size:	130.7(W)*142(H)*327.4(L)MM

CONTROL PANEL

1. Previous/volume down
2. Mode (Bluetooth, USB, SD, FM & AUX-IN)
3. EQ
4. Play/Pause
5. Next/volume up
6. USB port
7. Aux-in jack
8. ON/OFF
9. Charging jack
10. Micro SD slot

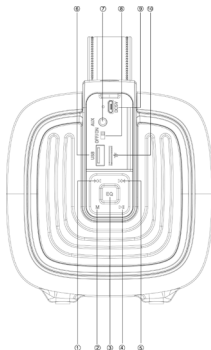

PLAYING MUSIC FROM USB DISK & MICRO SD CARD

1. Turn the Power button to “ON”.
2. Insert SD card or USB flash disk into slot, the music stored will be played automatically and blue LED light keeps lighting.
3. Under playing mode, short press Previous or Next button to select songs you like, long press to adjust the volume.
4. Press PLAY/PAUSE to play or pause.
5. Please turn the Power button to “OFF” while not using.
6. Remark: Under Bluetooth playing mode, insert SD or USB will disconnect the Bluetooth and switch the playing from USB or SD card. You can press the MODE button to switch to Bluetooth mode again.

BLUETOOTH FUNCTION

1. Turn the power button to “ON”, The LED light turns blue and twinkle quickly and beep twice.
2. Activate Bluetooth of mobile phone and search for device name “UNI-QBoom” then connect it. The blue LED light twinkle slowly and beep three times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Short press PREVIOUS or NEXT button on UNI-QBoom or your device to select songs you like.
5. Press Play/Pause button on UNI-QBoom or your device to Play/Stop the music .
6. Long press PREVIOUS or NEXT button to adjust volume up and down. Or adjust the volume on connected device.



FM RADIO

1. Under FM radio mode, the audio cable provided treat as antenna. Please insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button to switch to FM radio mode.
3. While playing, short press "Play/Pause" button to auto search the FM Channels and store it automatically.
4. Press PREVIOUS or NEXT button to change the stored FM channel.

AUX-IN

1. For other music devices or your MP3/MP4 player, use the supplied audio line cable to connect from the device's "Line Out" to the "AUX-IN" of UNIQCube. Then press the "MODE" button to switch to AUX-IN Mode. Enjoy...
2. When using an external device, all functions will be controlled by the external device except the "Play/Pause" button.

CHARGING

1. Power off the unit, put the provided charging cable into the charging slot, connect the other end to PC or other charger with 5V output (Not included). The red charging indicator lights up.
2. Charging time should be 3-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

ACCESSORIES

Charging cable, Audio Cable, USER GUIDE



SAFETY INSTRUCTIONS:

1. To reduce the risk of fire or electric shock, do not expose this speaker to rain or moisture.
2. The speaker should be placed so that its ventilation openings are not blocked.
3. The speaker should be situated away from heat sources.
4. The speaker should be operated only with the type of power supply indicated in this manual.
5. For your own safety, please do not open this speaker for any reason.
6. Please do not use the product if any part of it is damaged.

REMARKS:

1. Press the MODE button to switch the different modes, the order is Bluetooth, USB, Micro SD card, FM radio and AUX-IN.
2. Turn the power button to "off" to cut off the power supply while not in use.

For more information about UNIQBoom (EAN: 8719273146828), please contact UNIQ Surround using the following contact information:

Model: UNIQBoom
EAN: 8719273146828
Tel: 0031 10 229 89 03
Email: info@uniqaccessory.com
Web: uniqaccessory.com
Address: Innsbruckweg 46, 3047AH Rotterdam, The Netherlands

----- WARRANTY FORM -----

Your full name:
Reason:
Product EAN:
Model:
Purchase Date:

MADE IN CHINA

