



UNIQCHANT WIRELESS SPEAKER USER GUIDE



For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by faulty use or oversight of this manual.

FEATURES

1. 2.2ch High Performance speaker
2. With cool appearance, clear treble and deep bass
3. Supporting USB disk, FM Radio and line-in function
4. With karaoke function, one wired microphone supporting
5. With EQ function offering dynamic sound effect
6. 10 meters operating range
7. With strong aluminum handle, easy to take out
8. Build in lithium rechargeable battery 3600mAh

ACCESSORIES:


Charging cable, Audio cable, User manual

SPECIFICATION

Bluetooth range:	up to 10 meters
Bluetooth version:	5.0
Speakers:	Tweeter Size: 3inch x 2
Subwoofer Size:	4 inch x 2
Tweeter Output:	3W x 2, 4Ω
Subwoofer Output:	10W x 2, 4Ω
Connections:	USB and Aux-in 3.5mm jack connection
Power supply:	Built-in rechargeable lithium battery 3600mAh, 3.7V
Play time:	2 hours with max volume
Recharge power:	DC 5V 1A (USB-to-micro USB charging cable included)
Product size:	484(L) * 165(W) * 210(H)MM

INSTRUNCTION FOR APPEARANCE AND KEY:

UNiQ
SURROUND®

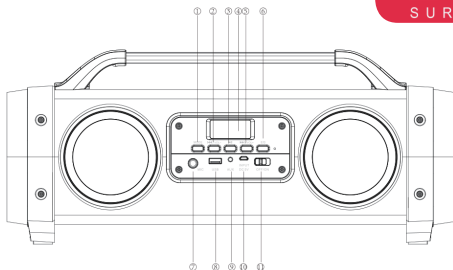

1. MODE (Switch to Bluetooth, USB disk, FM and AUX-IN state)
2. PREVIOUS/VOLUME DOWN
3. PLAY/PAUSE
4. DIGITAL DISPLAY
5. NEXT/VOLUME UP
6. EQ (Short-press to switch EQ modes, long-press to turn on/off RGB light)
7. MIC JACK
8. USB PORT
9. AUX IN JACK
10. DC 5V Charging Port
11. OFF/ON

EQ INTRODUCTION:

This unit offer 6 different kinds of sound effect, short-press EQ button to switch among Normal, Rock, Pop, Classic, Jazz, Country.

USB PLAYING:

1. Turn the power button to "ON".
2. Plug the USB disk into the USB socket. The audio files on the USB disk will start to play automatically.
3. Short press PREVIOUS or NEXT button on the devices to select songs you like.
4. Long press PREVIOUS or NEXT button to adjust volume down and up.
5. Short press PLAY/PAUSE button to play or pause the music.
6. Short press EQ button to switch among Normal, Rock, Pop, Classic, Jazz, Country.
7. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert USB will disconnect the Bluetooth and switch to play USB. Press the "MODE" button to switch back to Bluetooth mode again.



BLUETOOTH:

1. Turn the power button to "ON".
2. Activate Bluetooth of mobile phone and search for device name "UNI-QChant" then connect it. The unit will beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Short press PREVIOUS or NEXT button on the devices or on Mobile phones to select songs you like. Long press PREVIOUS or NEXT button to adjust volume down and up. Or adjust the mobile phones' volume.
5. Press PLAY/PAUSE button on the devices or on Mobile phones to play/stop the music.
6. Short press EQ button to switch among Normal, Rock, Pop, Classic, Jazz, Country.
7. Please turn the Power button to "OFF" while without use. Songs will play automatically after starting up.

FM RADIO:

1. Turn the power button to "ON", press the "MODE" button to switch to FM radio state.
2. The audio cable provided can be used as antenna, please insert the audio cable to get the best FM signal before using.
3. Short press "PLAY/PAUSE" button to auto search and store FM Channels;
4. Short press PREVIOUS or NEXT button to switch the stored FM channels.
5. Short press EQ button to switch among Normal, Rock, Pop, Classic, Jazz, Country

AUX-IN:

Use the supplied audio cable to connect "LINE OUT" of the music players like Phones/MP3/MP4 to the "AUX IN" of this speaker;

Press the "MODE" button to switch to AUX IN state;

Short press "PLAY/PAUSE" button to be mute, second short press to relieve;

Short press EQ button to switch among Normal, Rock, Pop, Classic, Jazz, Country;

When using an external device, all functions can be controlled by the external device.

MICROPHONE INPUT:

This product with one Microphone input. Just plug the 6.5MM microphone jack then you can use.



TWS FUNCTION:

Turn on two identical speakers you want to pair, please noted they must be the same BT pairing name, both under BT mode. Only need to set up one of the two units;

Long press "PLAY/PAUSE" button for around 4 seconds, speaker will show "BU" on the display and make "di" voice once successfully paired;

Then make Bluetooth connection with your phone to play music, one is in left channel while the rest one in right channel.

REMARKS:

1. Press the MODE button to switch the different modes, the order is Bluetooth, USB disk, FM radio and AUX-IN.
2. Turn the power button to "OFF" to cut off the power supply while without use.

CHARGING:

1. The charger is not included in the accessories. Please use the universal 5V/1A charger to charge this devices. Put the provided charge cable into the charging jack, connect the other end to the charger, the charging indicator will keep lighting.
(When playing music during charging, please put the volume to middle,because for some music with heavy bass, the charger may can not afford the high current temporarily under the maximum volume)
2. Charge time should be 5 hours. When charging full, the indicator light will switch off.

Model: UNIQChant
EAN: 8719273149942

Email: info@uniqaccessory.com
Web: uniqaccessory.com
Address: Innsbruckweg 46, 3047AH Rotterdam, The Netherlands

----- WARRANTY FORM -----

Your full name:
Reason:
Product EAN:
Model:
Purchase Date:

MADE IN CHINA

