


■ BAFANG DISPLAY

Control unit


The control unit is located on the left of the bike's steering handle. Press and hold the "On/off" button (1) for a few seconds to turn on.

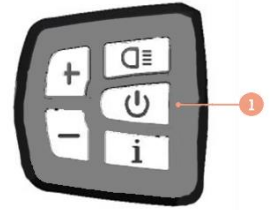

Lights


The lights switch on automatically at dusk, or manually by pressing the button (1) for 2 seconds, this also applies to switching it off.

Attention: When handling the lighting manually, the sensor (located on the back of the display) will no longer function until the display is turned on again. The symbol appears on the display to indicate the lights.

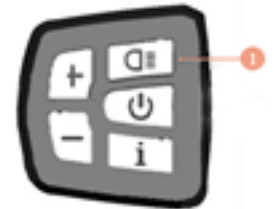


Switching between the 5 Levels of electric support

The electric support has 5 positions. Current support setting is shown at the bottom of the display. You can switch between these settings by briefly pressing the "+" (1) or "-" (2) button.

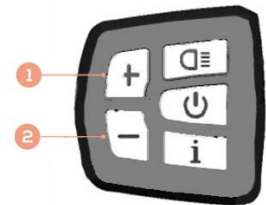

Walk assist


Press and hold the "-" button (1), the **walk assist** will be activated (which give support up to 6 km/h). The "Walk" symbol lights up. Release the "-" button (1) to deactivate.

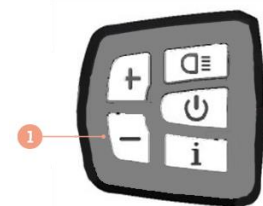

Other options


Briefly pressing the button (1) in succession scrolls through the display for different data:

- TOTAL = Total milage
- TRIP = Trip mode
- RANGE = Range in support mode
- MAX = Maximum speed

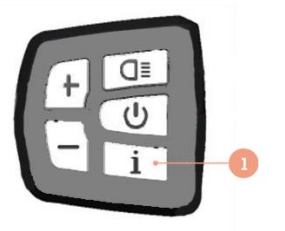

Reset Trip mode

To reset Trip mode, press "i" button twice. You entered the Trip mode menu. Change the value to "Y" using the "+" button. Wait 8 seconds, after which the display returns to normal operation. The Trip mode is now reset.

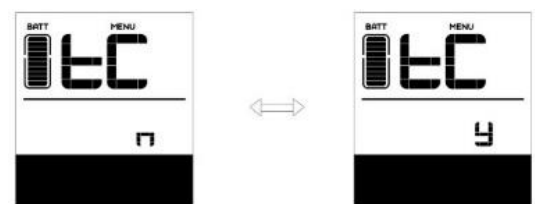

Symbols display

- (A) – Battery indicator
- (B) – Lights
- (C) - Walk assist
- (D) - Maintenance
- (E) – Menu
- (F) – Speed
- (G) - Error symbol
- (H) – Mileage
- (I) – Current support setting

