# **Quick Reference Card replacing the hose clip**

Replacing the hose clip is not that difficult. Please follow the instructions below. For this part no tools are required to replace.



Before starting the replacement of the hose clip, make sure the water mains are closed.





Stide the hose connector of the tap in the connector of the heater hose.



<u>Step 2A</u>
Attach the clip to the connector by allowing the paws to fall into the slots.



Step 2B Make sure that the clip is neatly connected to the connector.



Step 3
For control pull both hoses to confirm that the hoses are connected to each other through the clip.





# Warranty period

• 12 months on the hose clip from day of purchase.

## Warranty conditions

• The purchase invoice indicating the date of purchase must be submitted.

# The warranty applies only if:

- There are material and construction faults (all this at the discretion of the manufacturer);
- no constructive changes or modifications have been made to the tap;
- the defect is not a consequence of own fault, negligence or improper use.

### Liability

Neither HotSpot Titanium nor your installer/retailer accept any liability for damage or bodily injury of any kind resulting from:

- failure to follow the instructions in this manual;
- carelessness during installation, use, maintenance and repair of the system;
- use not in accordance with the application;
- · the use of components not supplied by the manufacturer;
- consequential damage due to leakage.



The HotSpot Titanium 3-in-1 taps only operate with an original HotSpot Titanium boiler. See the user and installation manual of the boiler.

#### Service

Do you need any help? Please feel free to contact us.



service@hotspot-titanium.com



www.hotspot-titanium.com