Quick Reference Card replacing the 8L mixing valve knob

Replacing the 8L mixing valve knob is not that difficult. Please follow the instructions below. For this part no tools are required to replace.







Step 1
Remove the knob from the mixing valve, if it is still present. Best option is to use a towel for extra grip.



Step 2
Look closely how the flat sides from the spindle are oriented and place the new knob on the mixing valve (there are also flat sides in the button hole).





Warranty period

• 12 months on the knob from day of purchase.

Warranty conditions

• The purchase invoice indicating the date of purchase must be submitted.

The warranty applies only if:

- There are material and construction faults (all this at the discretion of the manufacturer);
- no constructive changes or modifications have been made to the tap;
- the defect is not a consequence of own fault, negligence or improper use.

Liability

Neither HotSpot Titanium nor your installer/retailer accept any liability for damage or bodily injury of any kind resulting from:

- failure to follow the instructions in this manual;
- carelessness during installation, use, maintenance and repair of the system;
- use not in accordance with the application;
- the use of components not supplied by the manufacturer;
- consequential damage due to leakage.



The HotSpot Titanium 3-in-1 taps only operate with an original HotSpot Titanium boiler. See the user and installation manual of the boiler.

Service

Do you need any help? Please feel free to contact us.



service@hotspot-titanium.com



www.hotspot-titanium.com