

DIP Switch Setting 拨码设置

|  | | ● 向上拨 Switch UP ○ 向下拨 Switch DOWN | | | | | | | | | | | | | |
|---|----------------------------------|--|--|----------------------------------|----|----------------------------------|-----------------------|-----|-----------------------|----------------------------------|------|-----------------------|-----------------------|-------|--|
| 守候亮度设置 Stand-by dimming level | | <input checked="" type="radio"/> 10% <input type="radio"/> 30% | The definition of low output in the standby period. De “standby dimming stand” van 10% of 30% | | | | | | | | | | | | |
| 守候时间设置 Stand-by period | | <input checked="" type="radio"/> 0s <input type="radio"/> 1min | The period of light keeping low output before it's completely switched off. De tijd dat de “standby dimming stand” is ingeschakeld voordat de lamp volledig uitschakelt. | | | | | | | | | | | | |
| 日光阀值设置 Daylight Threshold | | <input checked="" type="radio"/> Disable <input type="radio"/> 50lux | Definition of the ambient brightness; only when the ambient brightness is lower than the preset specific lux amount, the sensor will work; when it's preset as “disable, the sensor works every time it detects motion regardless of the ambient brightness. Daglicht sensor werkt en is ingeschakeld wanneer het aantal lux in de kamer onder de 50 lux komt. De bewegingssensor werkt ook op dat moment. Als de daglichtsensor is uitgeschakeld dan werkt alleen bewegingssensor. | | | | | | | | | | | | |
| 延迟时间设置 Hold-Time | | <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td><input checked="" type="radio"/></td><td><input checked="" type="radio"/></td><td>5s</td> </tr> <tr> <td><input checked="" type="radio"/></td><td><input type="radio"/></td><td>30s</td> </tr> <tr> <td><input type="radio"/></td><td><input checked="" type="radio"/></td><td>1min</td> </tr> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td>10min</td> </tr> </table> | <input checked="" type="radio"/> | <input checked="" type="radio"/> | 5s | <input checked="" type="radio"/> | <input type="radio"/> | 30s | <input type="radio"/> | <input checked="" type="radio"/> | 1min | <input type="radio"/> | <input type="radio"/> | 10min | The period of light keeping 100% brightness after moving objects leave the detection area. De tijd dat de lamp 100% aan gaat na beweging in de kamer. |
| <input checked="" type="radio"/> | <input checked="" type="radio"/> | 5s | | | | | | | | | | | | | |
| <input checked="" type="radio"/> | <input type="radio"/> | 30s | | | | | | | | | | | | | |
| <input type="radio"/> | <input checked="" type="radio"/> | 1min | | | | | | | | | | | | | |
| <input type="radio"/> | <input type="radio"/> | 10min | | | | | | | | | | | | | |
| 探测范围设置 Detection Area | | <input checked="" type="radio"/> 100% <input type="radio"/> 50% | In this area, movement will be detected and able to trigger the sensor. 100% detection area is also known as the strong sensitivity. In de mate hoe sterk de lamp reageert op beweging in de kamer. Aan te raden om dit op 50% in te stellen. | | | | | | | | | | | | |