
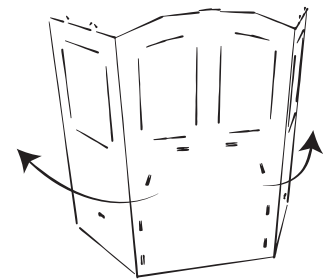
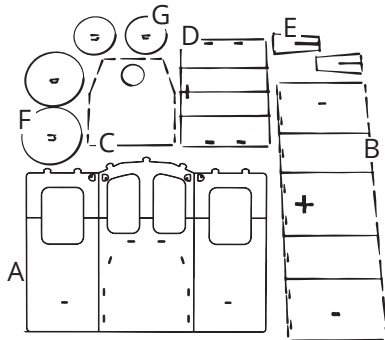


# TRAIN



## WHAT'S IN THE BOX?

- 1x Body train A
- 1x Front part B
- 1x Front end C
- 1x Roof D
- 2x Chimney E
- 2x Back wheel F
- 2x Front wheel G

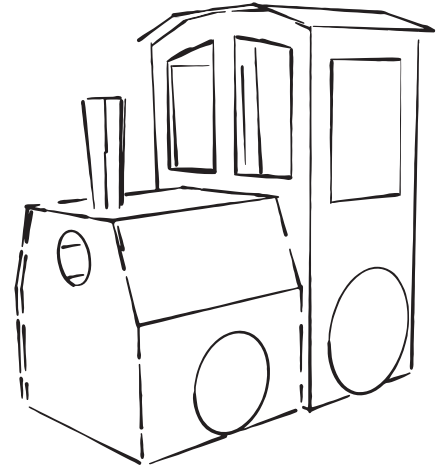



1. Check if you have all parts.

2. Fold the sides of part A. The visible folding line is always on the inside of the folds.

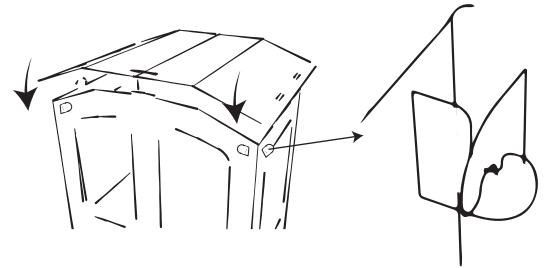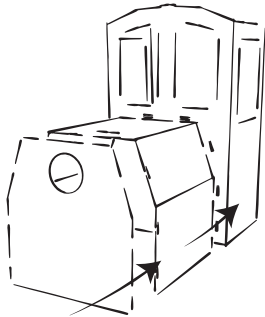

3. Fold B into the front part and fasten into the incisions of A. Close the front by clicking part C into B.

4. Connect the hooks in the top corners of body train A together as indicated on the image. Make sure these are folded inwards. Then fold roof D along the folding lines and fasten on top of part A.

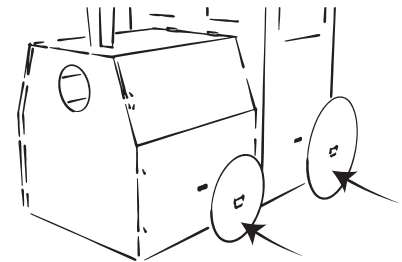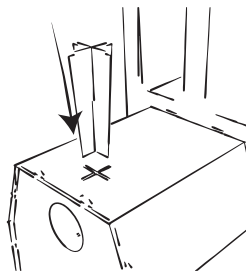

5. Slide the two E Chimney parts together and fasten on top of front part B.

6. Click the back wheel F and front wheel G into the back and front of the train's side, respectively. Do the same on the other side.