



x  
neverdark

## Thermobox Room Divider Standard Installation (TRD)

for fireplaces Automatic, Firetec  
Installation instructions

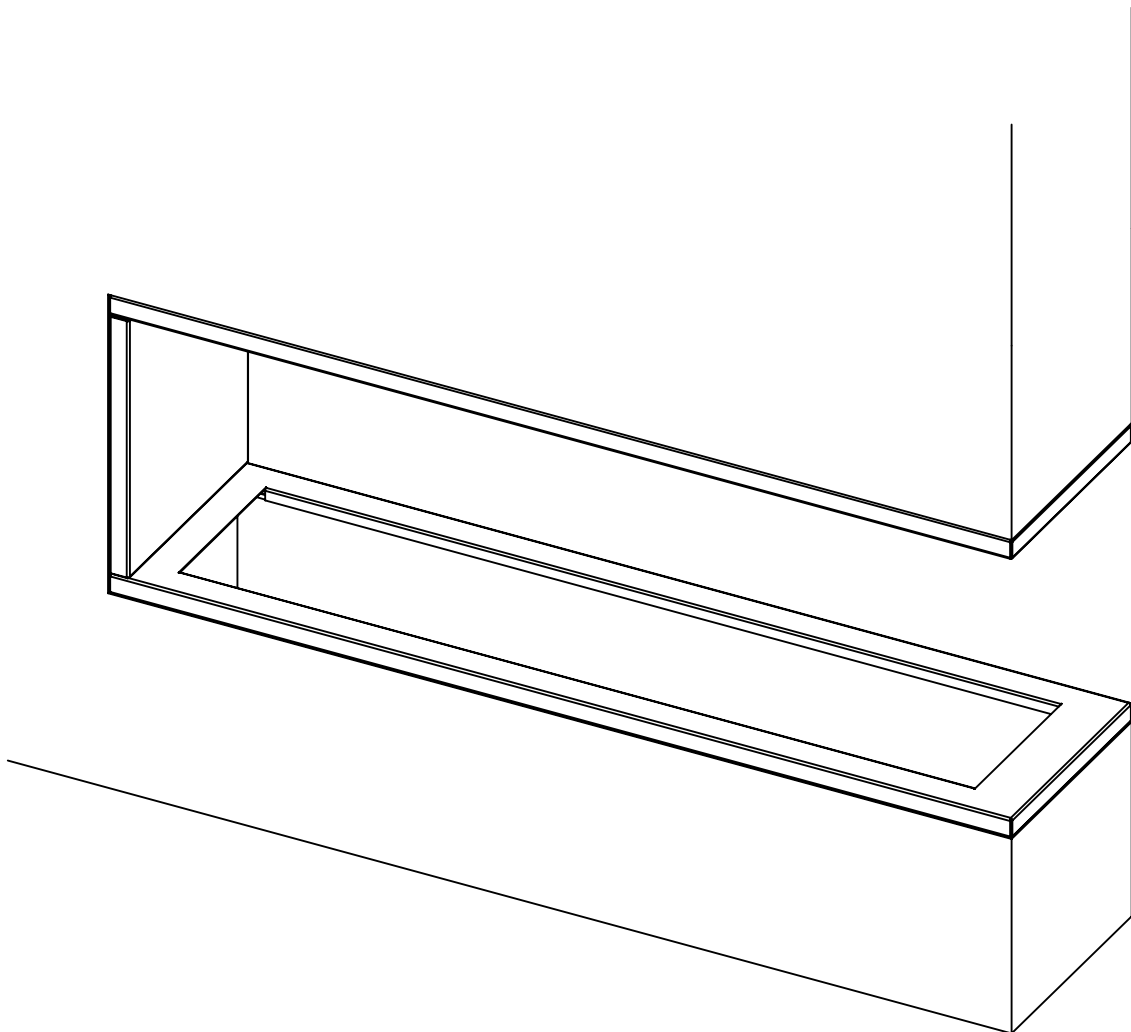

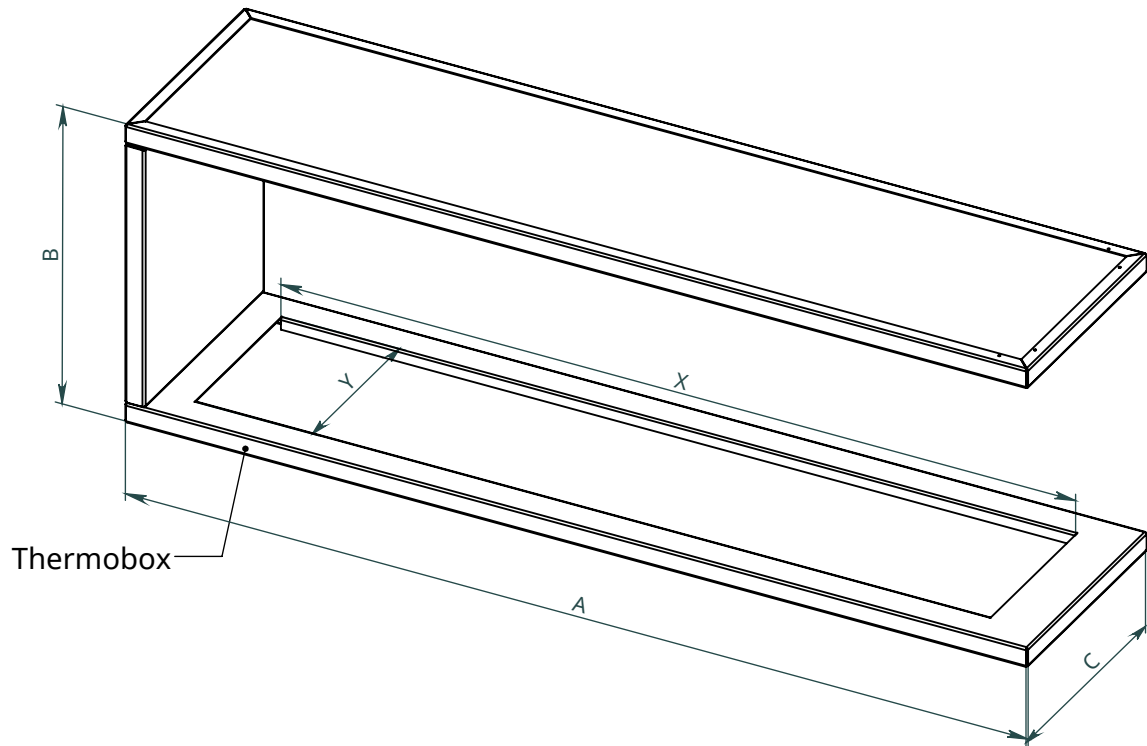

Model	Thermobox			Fireplace	
	A	B	C	X	Y
	Length of the thermobox	Height of the thermobox	Depth of the thermobox	Burner length	Width of the fireplace
TRD-800	800	460	340	700	250
TRD-900	900			800	
TRD-1100	1100			1000	
TRD-1300	1300			1200	
TRD-1600	1600			1500	
TRD-2200	2200			2000	
TRD-2700	2700			2500	

Thermobox with options

