


Neverdark CHALET-II (IN) EFT

Smart fireplace

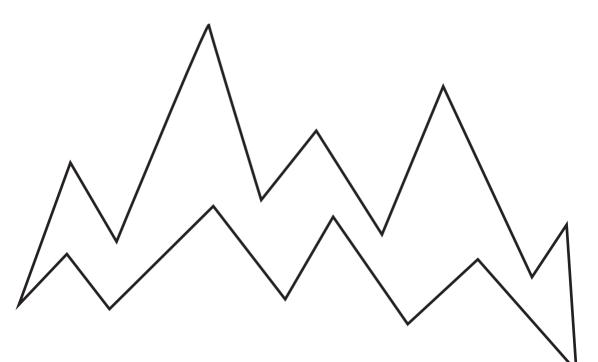

TECHNICAL DOCUMENTATION

CONTENT

04 04 05	CONFIGURATION Standard configuration Optional Extra	FIREPLACE
06	THERMOBOXES	
07	FIREPLACE INTERFACES	
08	DIMENSIONS	
09	NICHE PREPARATION	
09 10	Niche dimensions Niche requirements	INSTALLATION
09	Niche dimensions	INSTALLATION



ATTENTION! This document, along with the User Manual, is part of the device and is being delivered along with the fireplace (hereinafter collectively referred to as «Instructions»). If one or both of these documents weren't delivered with your fireplace, please contact the manufacturer prior to the installation and / or use of the fireplace.

- Make sure to read this Technical Documentation (hereinafter «Documentation») before using the fireplace!
- Keep this Documentation in a safe place for the lifetime of the fireplace!
- This appliance by design, method of operation, consumer properties and technical safety fully complies with the requirements of the European Standard EN 16647:2015



ATTENTION! Please follow local laws when using the appliance.

SYMBOLS



FIRE AND BURN HAZARD SIGN

A WARNING SIGN indicates a potential for property damage, personal injury, or death




AN ATTENTION SIGN indicates important information

Standard configuration

	Smart fireplace (Standard top panel Black matte)	nevertiger	Documentation
	1 pc		1 set
	Power cable: Euro Plug — WAGO (fireplace length + 0.1m)		Packaging
£37 £ 7	1 set		1 pc
	Fuel hose		Decorative elements:
	1 рс		decorative stones, ceramic firewood, fiber for glow
11	Mounting handles		effect
¥ Ų	2 рс		1 set

Optional extra

You can add any option listed below:

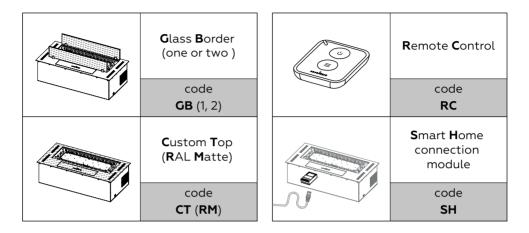



THERMOBOXES

You can also choose the Neverdark Thermobox for your fireplace. The Thermobox can withstand temperatures up to 200°C, allowing you to choose any material for lining the niche.


Single-Sided		Three-Sided
code TSS		code TTS
R ight Co rner		R oom D ivider
code TRC		code TRD
Left C orner		S ee- T hrough
code TLC		code TST

FIREPLACE INTERFACES

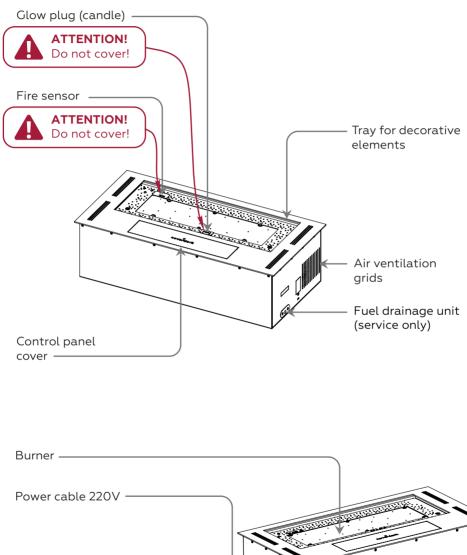

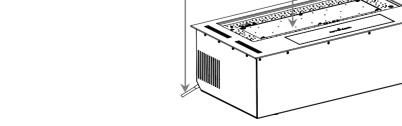


DIMENSIONS

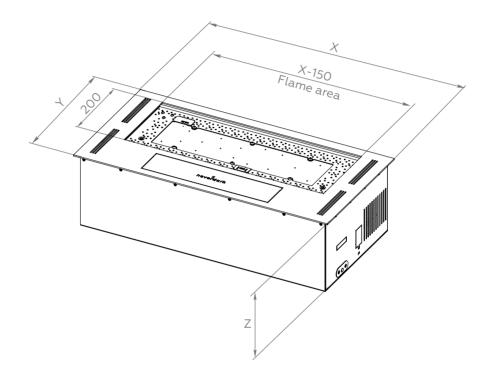

Standard range		х	Y	Z	
Model	Code	Length, mm	Depth, mm	Height, mm	Weight, kg
Chalet-II 700 (in)	C2-700-in.EFT	700			29
Chalet-II 950 (in)	C2-950-in.EFT	950	350	260	38
Chalet-II 1200 (in)	C2-1200-in.EFT	1200			48


NICHE PREPARATION

Niche dimensions

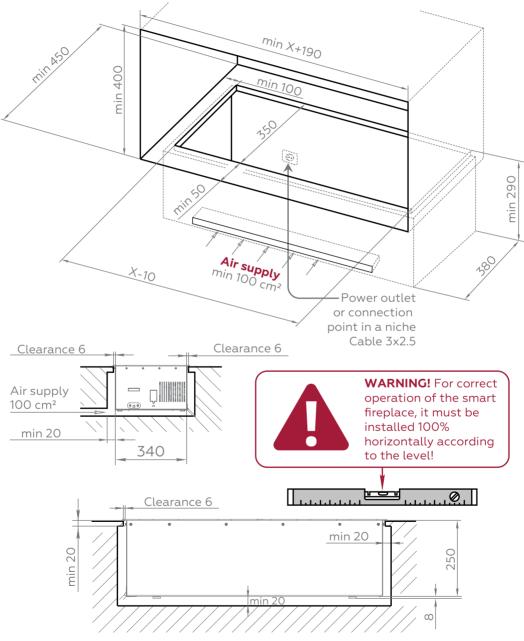

09 | niche dimensions

Niche requirements

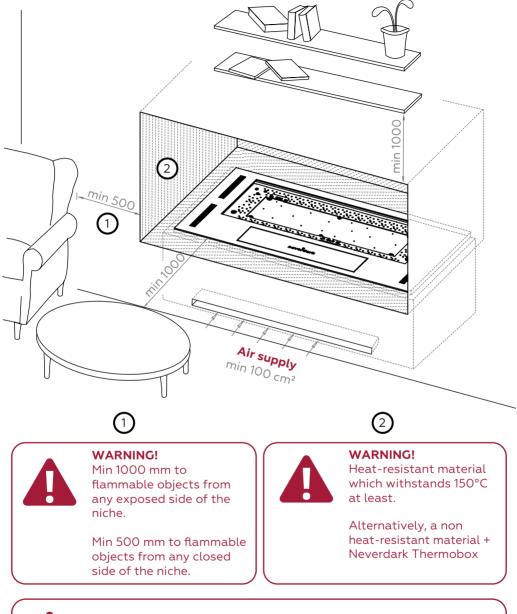





WARNING! For safe and correct operation of the fireplace it is mandatory to provide an air supply opening (100 cm² at least) in the lower part of the niche.

INSTALLATION



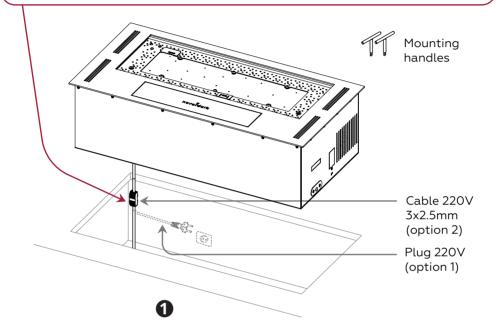

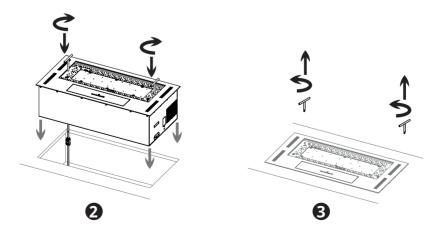

Technical information

	Fireplace model			
Parameters	Chalet-II (In) 700	Chalet-II (In) 950	Chalet-II (In) 1200	
Tank volume, l	8,45	12,2	16,0	
System volume, l	9,5	13,7	17,9	
Consumption, I/h (min max)	0,4 0,7	0,6 1,0	0,8 1,3	
Average consumption, I/h (min max)	0,6	0,8	1,1	
Burning time, h (min max)	12,1 21,1	12,2 20,4	12,3 20,0	
Room size, m ² (with I without ventilation system)	19 48	27 68	35 88	
Max power consumption, kW	0,9	0,95	1,25	
Heat power, kW (min max)	2,6 4,6	3,9 6,5	5,2 8,5	
Air consumption, m³/h (min max)	0,7 1,3	1,1 1,9	1,5 2,4	
CO2 release, m³/h (min max)	0,3 0,6	0,5 0,8	0,6 1,0	





Warnings



The manufacturer does not recommend placing objects that are sensitive to high temperatures above or next to the fireplace as this may significantly shorten their service lifetime.

In case the Technical Documentation and User Manual were not followed, the manufacturer would not be responsible for any damage to objects above or next to the fireplace.



ATTENTION! Kindly follow next rules while using the Neverdark fireplace:

- Keep away from children;
- Ensure that the wall/table/floor on which you place the appliance can withstand its weight;
- Install in a place protected from draughts only;
- Do not cover top or side ventilation grids;
- Do not place flammable objects on the appliance;
- Keep a carbon dioxide fire extinguisher within sight;
- The use of a separate electricity line with a fuse and/or circuit breaker is mandatory;
- For comfortable use of the fireplace it is necessary to ensure the supply of a fresh air into the room, as well as removal of a cobustion products. It can be a ventilation extractor, recuperator or an opened window;
- Keep this Documentation in a safe place for the lifetime of the fireplace!

NEVERDARK LLC

11 Kopernika St. Kyiv, Ukraine

neverdark.one