
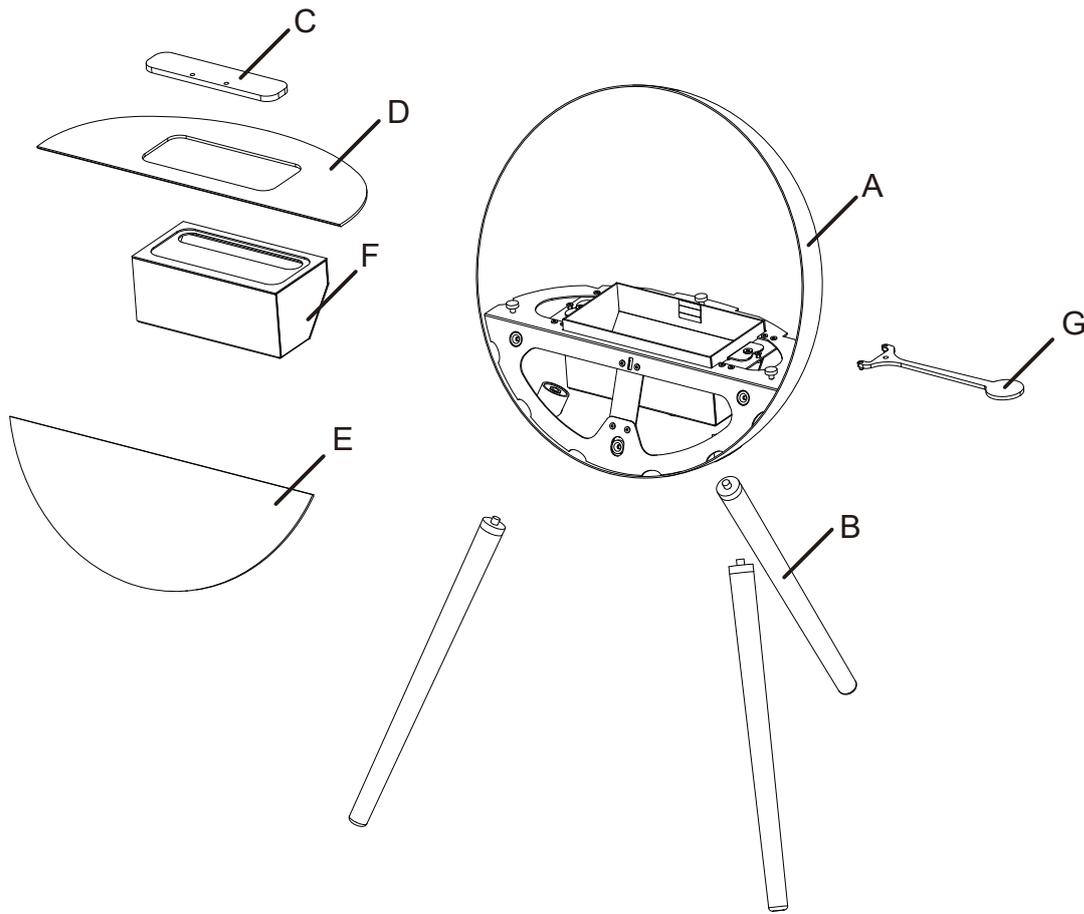
 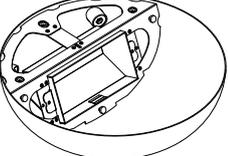

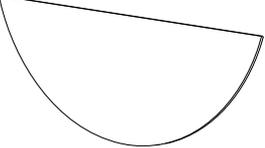



# Explore View & Part list

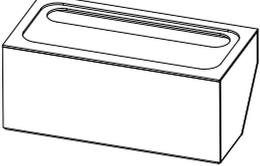

<p>A.Main body.....1pc</p> 	<p>B.Leg.....3pcs</p> 	<p>C.Cover plate.....1pc</p> 	<p>D.Top plate.....1pc</p> 
<p>E.Front plate.....1pc</p> 	<p>F.Burner.....1pc</p> 	<p>G.Hook.....1pc</p> 	<p>H.Hex key.....1pc</p> 


**STEP 1**

Install B(Leg) onto the A(Main body) as shown.

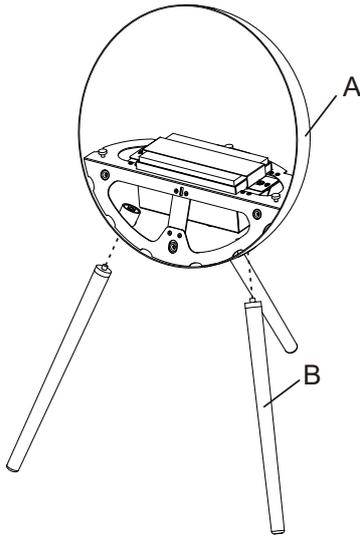
**STEP 2**

Use the H(Hex key) to unpacking the F(Burner) in main body as shown.


Note: The transport fixation plate is to be disposed of.

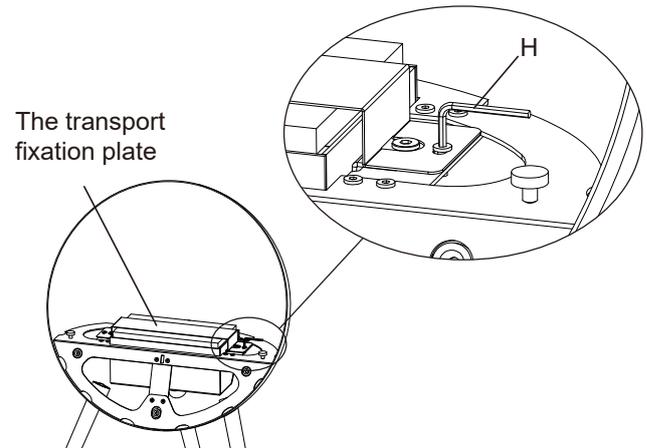**STEP 3**



Assemble D(Top plate) and E(Front plate) onto the main body as shown.

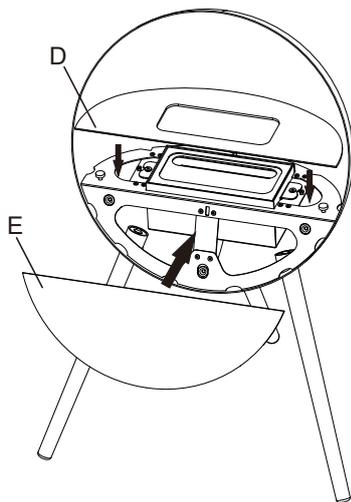**STEP 4**


Place C(Cover plate) into the main body as shown.

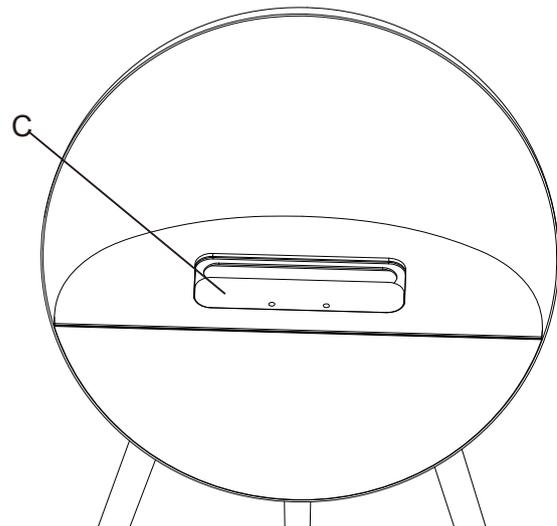**Note: 1**

Use G(Hook) to control the opening and closing the burner as shown.

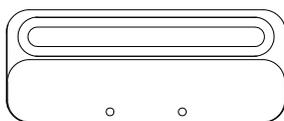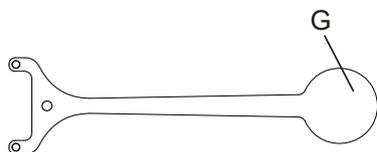

**OPEN**

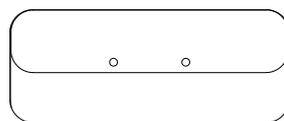

**CLOSE**

**Note: 2**

A. Take the combustion box out of the furnace when adding fuel

B. Do not add fuel to the combustion box when burning

C. Do not add fuel to the combustion box when it is hot

D. Do not fill the fuel beyond MAX

