


HOW TO SEPARATE THE DIAL FROM BASE

2018.06.12

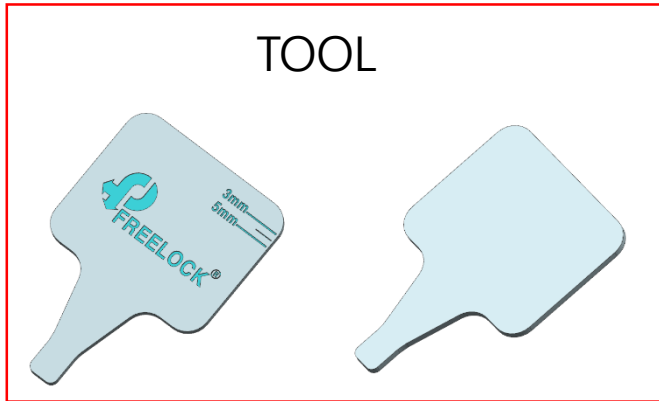


* You can use Minus Driver instead of the tool



INSTRUCTIONS

1. PUT IT IN APPROPRIATE POSITION

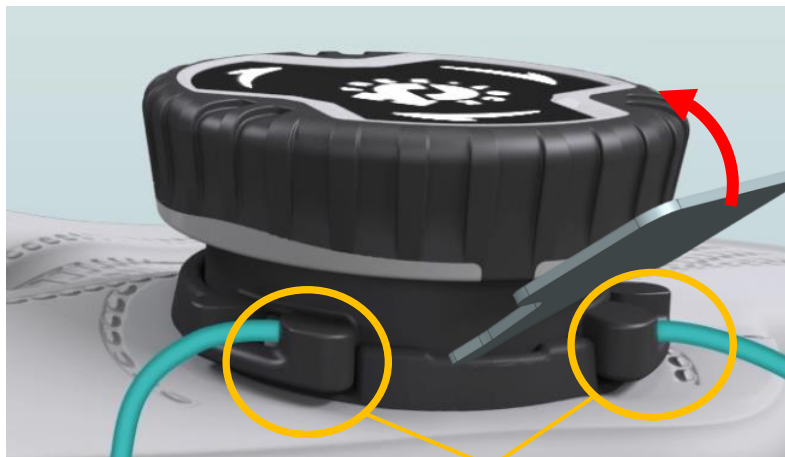

PUT IT BETWEEN THIS TWO PARTS

2. PUSH IT TO DIAL DIRECTION LIKE THE LEVERAGE

