










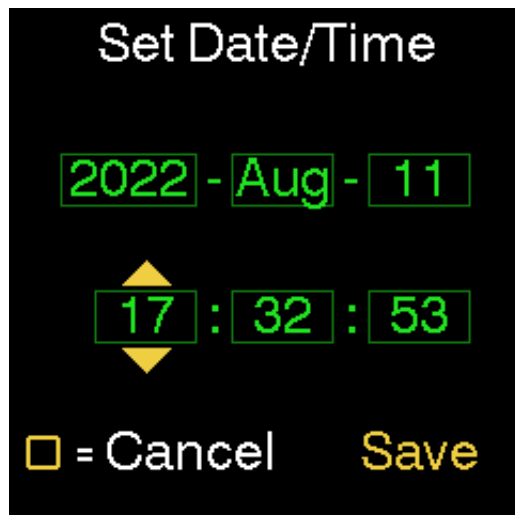






Setting/Checking the Clock

Check if the date and time displayed on the status screen are correct.

To change the clock:



1. Enter the menu 
2. Enter **Preferences**, , , 
3. Enter, , ,  **Set Date/Time**
4. Using, , , ,  correct the value of each field
5. Navigate to **Save**, , , and **execute**, ,
6. (optional) Return to the Status Screen using, , (2x).

The clock cannot be set to a date further back than the build date of the software. This is a trigger to detect an empty clock battery (which is rechargeable).

This battery will only keep time for about a week when there's no power connected. The build date is 2022-07-27 as of software version 1.7.3.