


User Interface

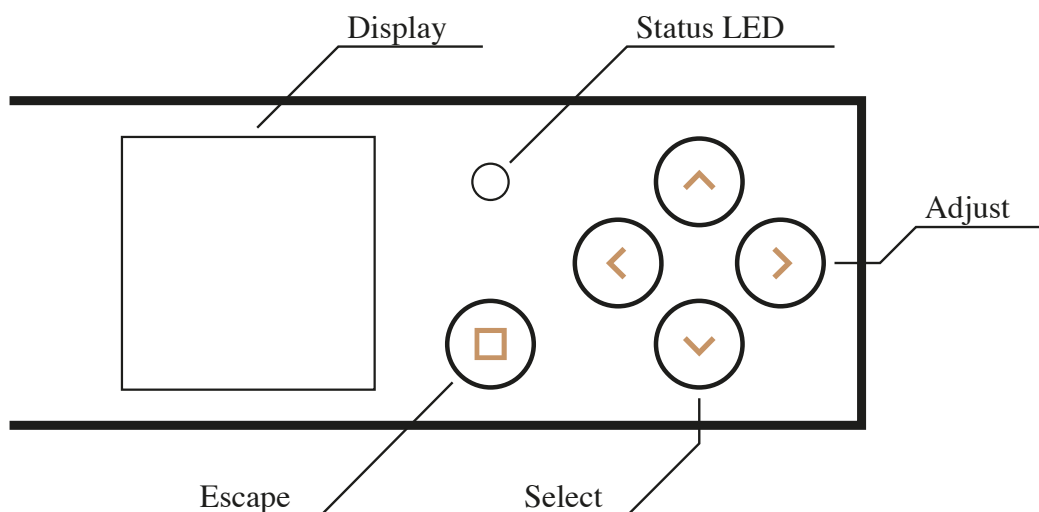

The display is a 1.54" 240x240px IPS panel. It shows a live color spectrum of the light output in the top half, and status, controls, and the menu in the lower half.

There are five buttons to control the fixture and navigate the menu:

Escape: Used to toggle between status screen and menu, and to navigate up (out of) the menu.

Select (2x): Mainly used to move the selection up or down.

Adjust (2x): Mainly used to change values. The button is also used to enter submenus perform actions.

Most actions can be categorized as the following:

White 416

⬅️ ➡️ will adjust the value. When the end is reached, the Status LED will briefly blink red.

Power unit PPF

⬅️ ➡️ will adjust the selection. When the end is reached, the Status LED will briefly blink red.

Enable

➡️ will turn on and ⬅️ will turn off the setting.






Preferences

➡️ will enter the submenu, which can be exited by □

Select program 



will open a full-screen dialog for that action.

When these symbols (    ) appear on the screen, the corresponding button(s) will perform a specific action that might otherwise be not too obvious.