



Setting the time until the Revomax display automatically turns off


1. Click on **Start** and double-click on **"Documents"**.
Navigate to **C:\Users\Revomax** and double-click on **"kill md"**.
This will close the air conditioning program.

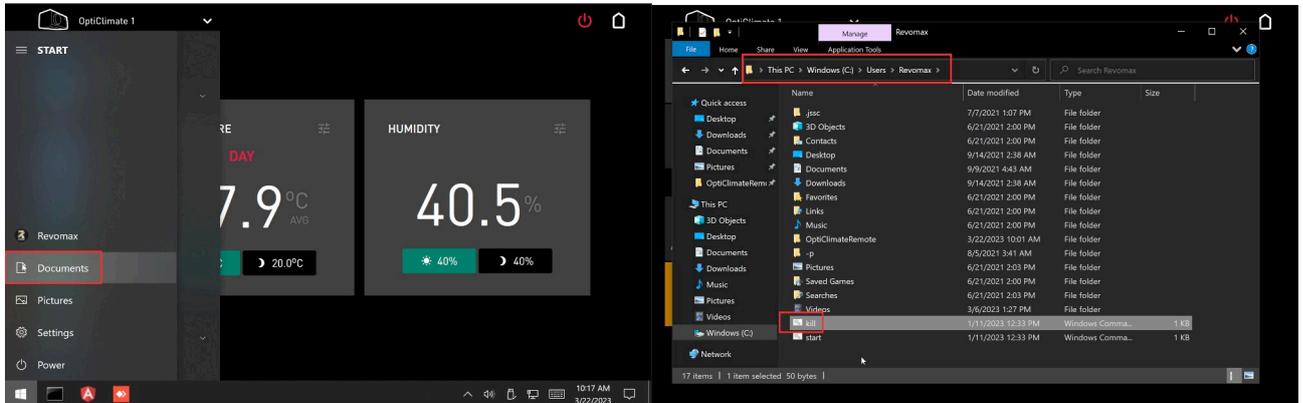


2. Navigate to **C:\Users\Revomax\optiClimateRemote**, right-click on **"RemoteController.preferences"**, and select **"Open with Notepad"**.
Notepad will now open.

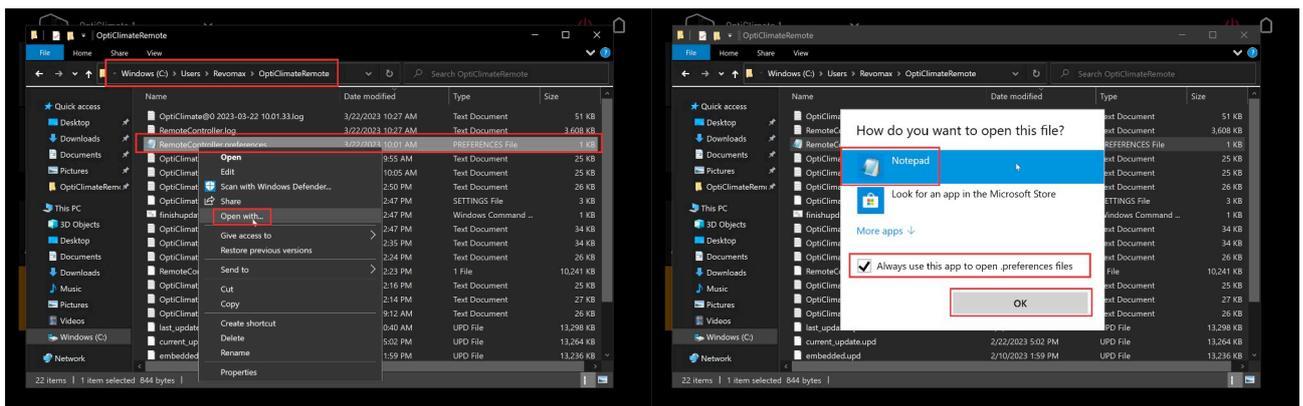


3. Change the line **"DisplayTimeout=0s"** to the desired time.
 - a. **300s** means **5 minutes**.
 - b. **0s** means the display will always stay on.Save the file.

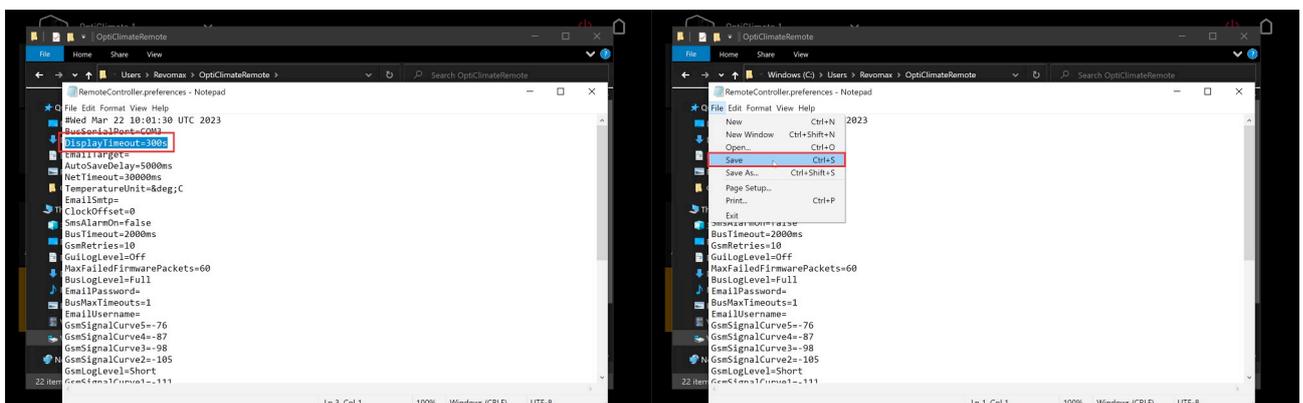

4. Navigate to **C:\Users\Revomax** and double-click on **"start.cmd"**.
This will start the air conditioning program.

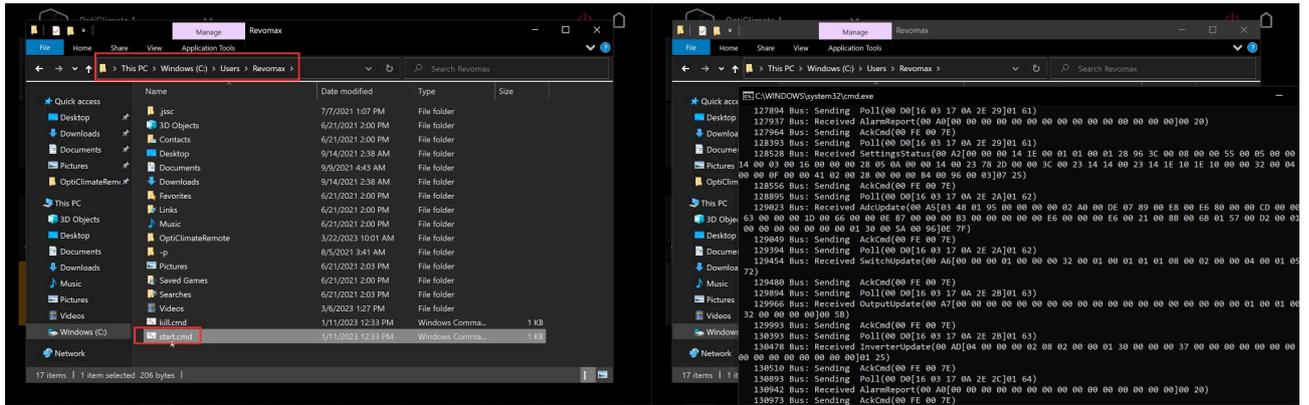

5. Press the **Start** button and then click on the air conditioning program icon.
The window of the air conditioning program will now be visible again.

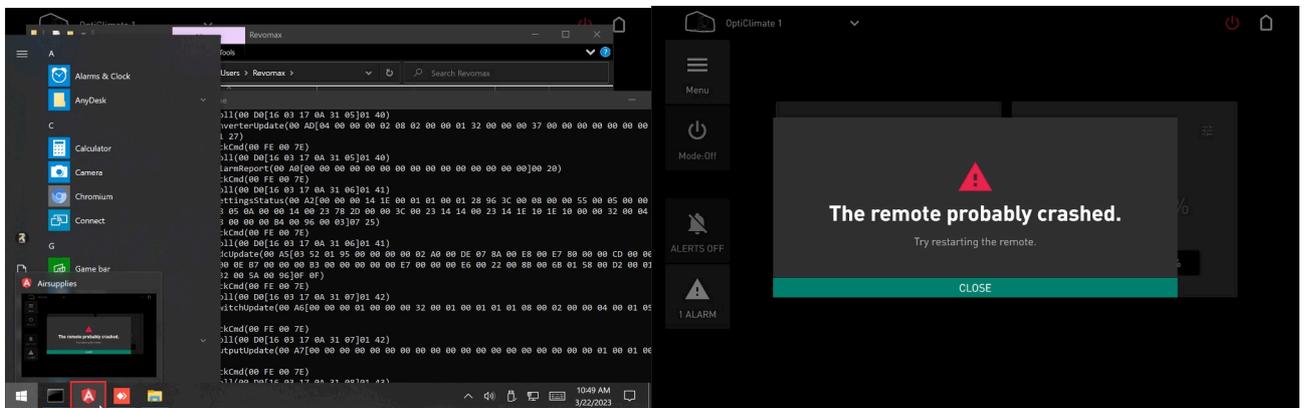

6. Press **"Close"**.
The remote control will now function normally again, and the display will turn off after the time set in **Step 3**.

