


Mount and accessories

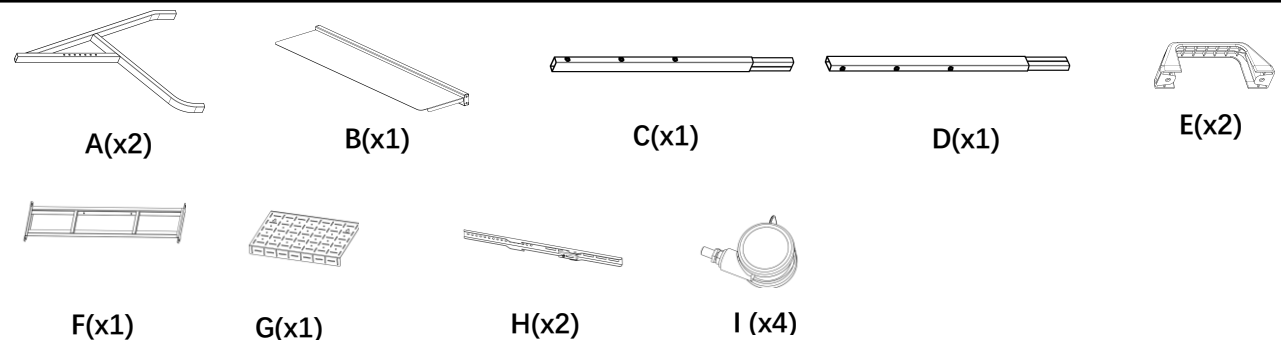

Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct mounting hardware suitable for your installation.

CHOKING HAZARD. Package includes small parts.
Not for children under 3 years. Adult supervision is required.

Missing Parts? Call us at xxxxxxxxxx and we will ship replacement parts free of charge.

Mounting Screw Bag for Stand (#M-x)

M-A
M8x60
Hexagon head x4



M-B
M8x25
Hexagon head x8



Mounting Screw Bag for TV (#X)

A
Sleeve Ø15-
Ø8.5*15mm *4



B
Washer Ø12-
Ø6.0*1.5 *4pcs



 
C
Washer Ø16-
Ø8.0*1.5 *4pcs




D
Screw M6*14
* 4pcs




E
Screw M8*20
* 4pcs



F
Screw M6*30
* 4pcs

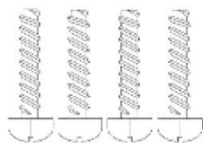

G
Screw M8*45
* 4pcs

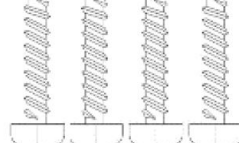


H
Hexagon
Wrench



Step 1

Assemble Extended Pillar


- Use screw M-B to secure handle E to pillars C and D.

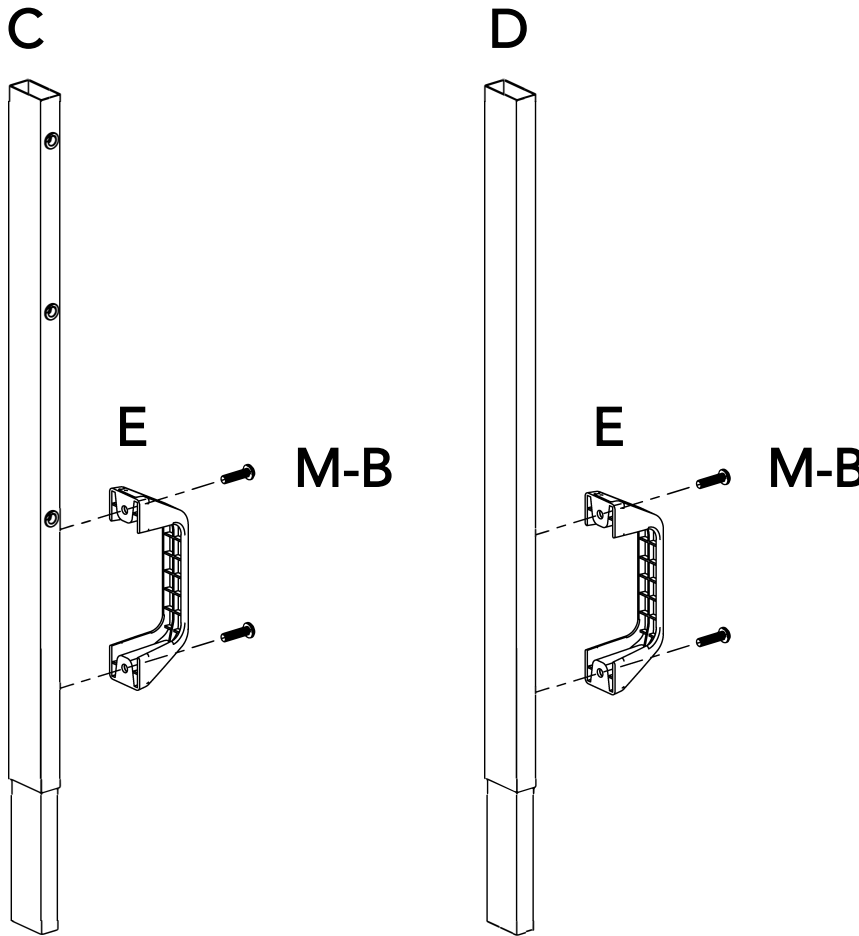

Step 2

Assemble the wheels on side stands


- Screw on wheel on stands, lock the wheel by press down the lock plate, then screw it upon stands
- Can fine-tune the wheel height by adjust the nut on wheel.

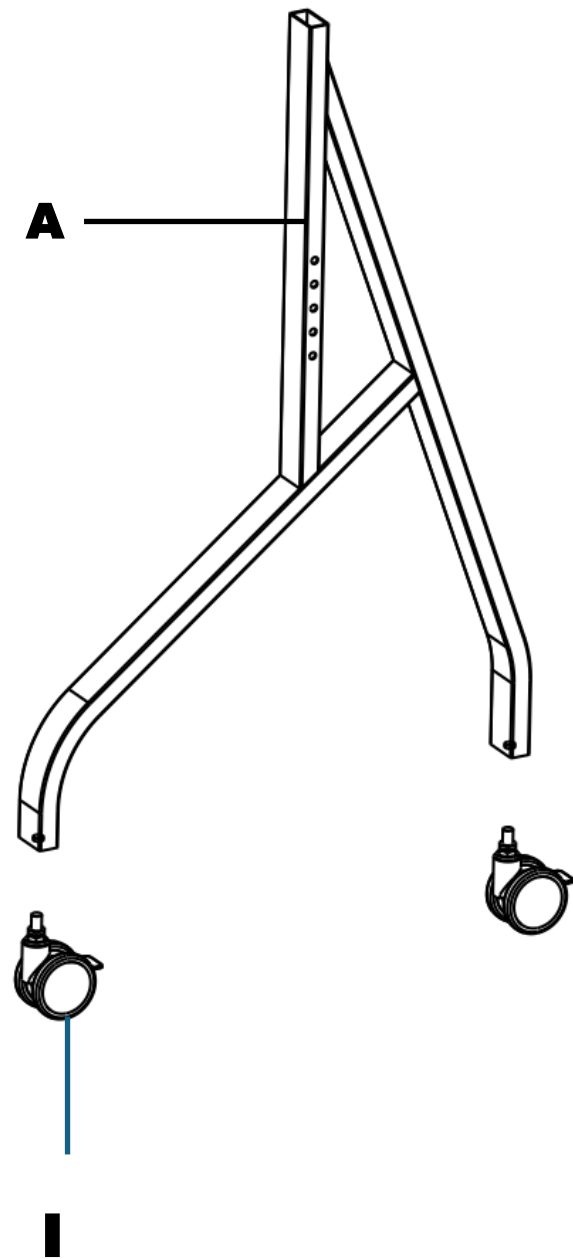

Step 3

Assemble TV stand


- Assemble two side stands and middle table, fix them by screw.

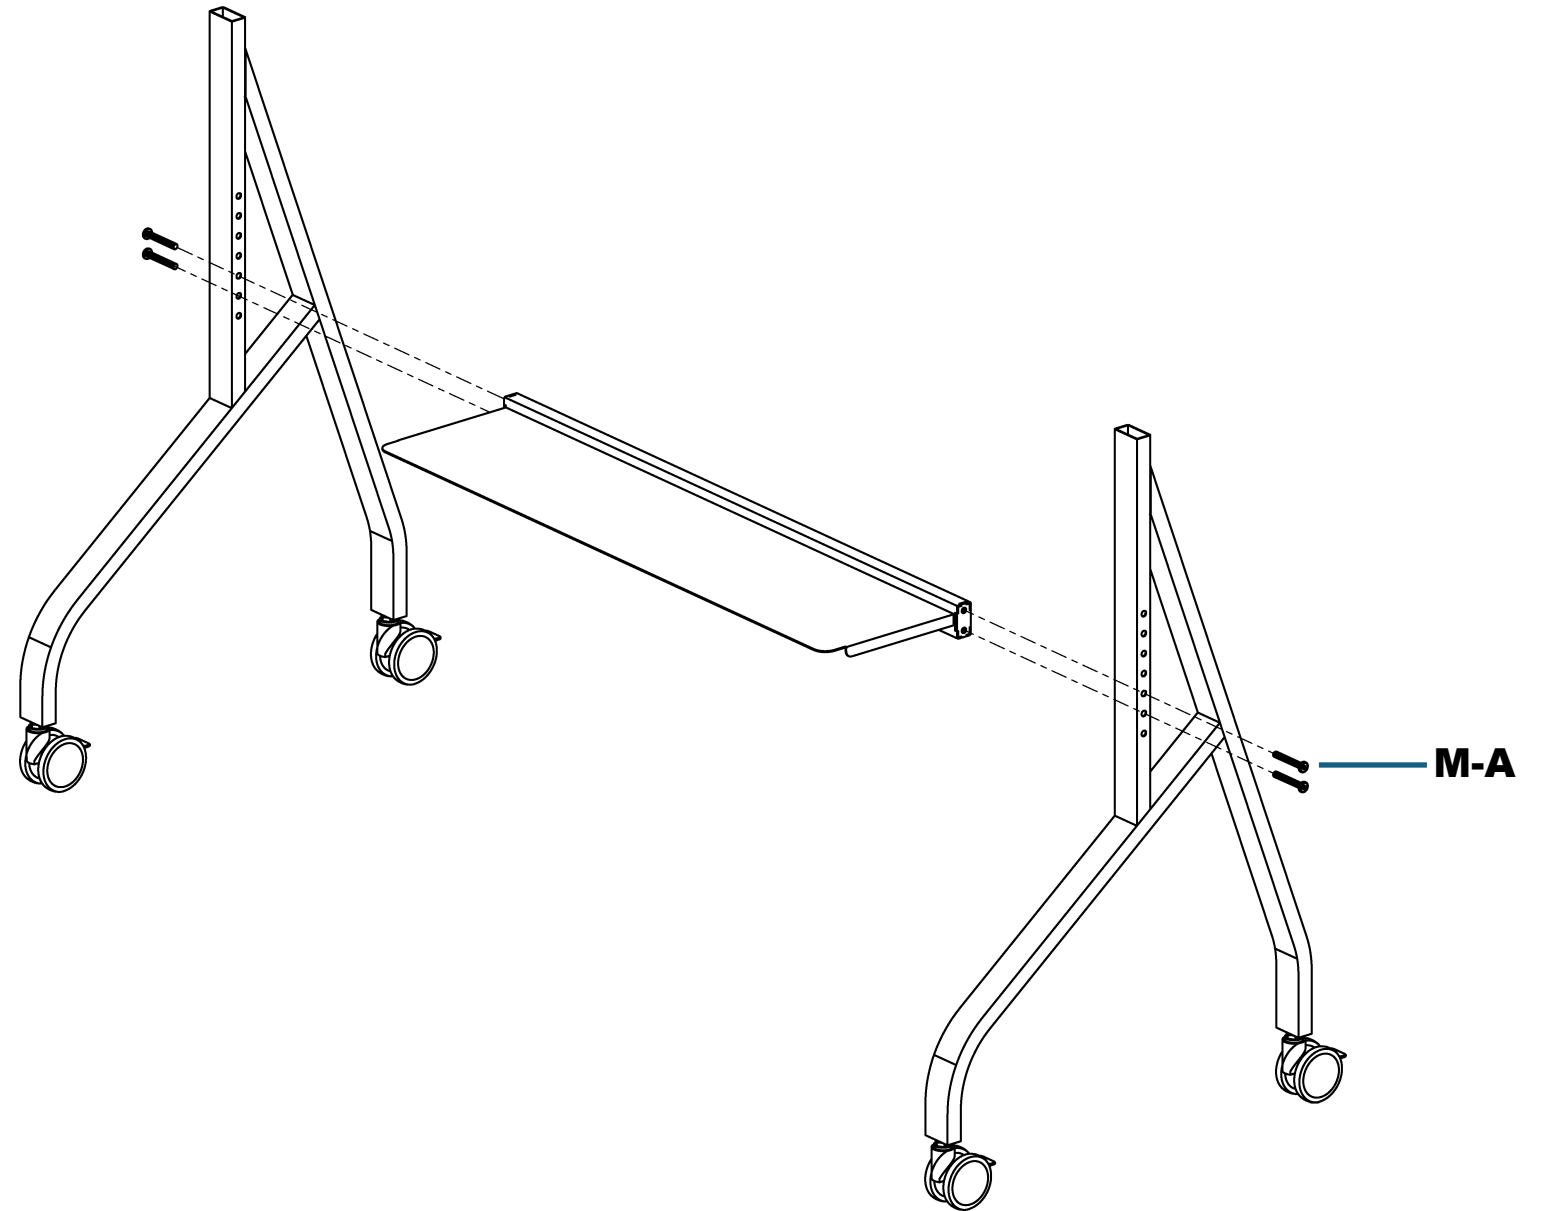

Step 4

Insert into Left & Right extension tubes


- Insert Left & Right extended pillar to stand

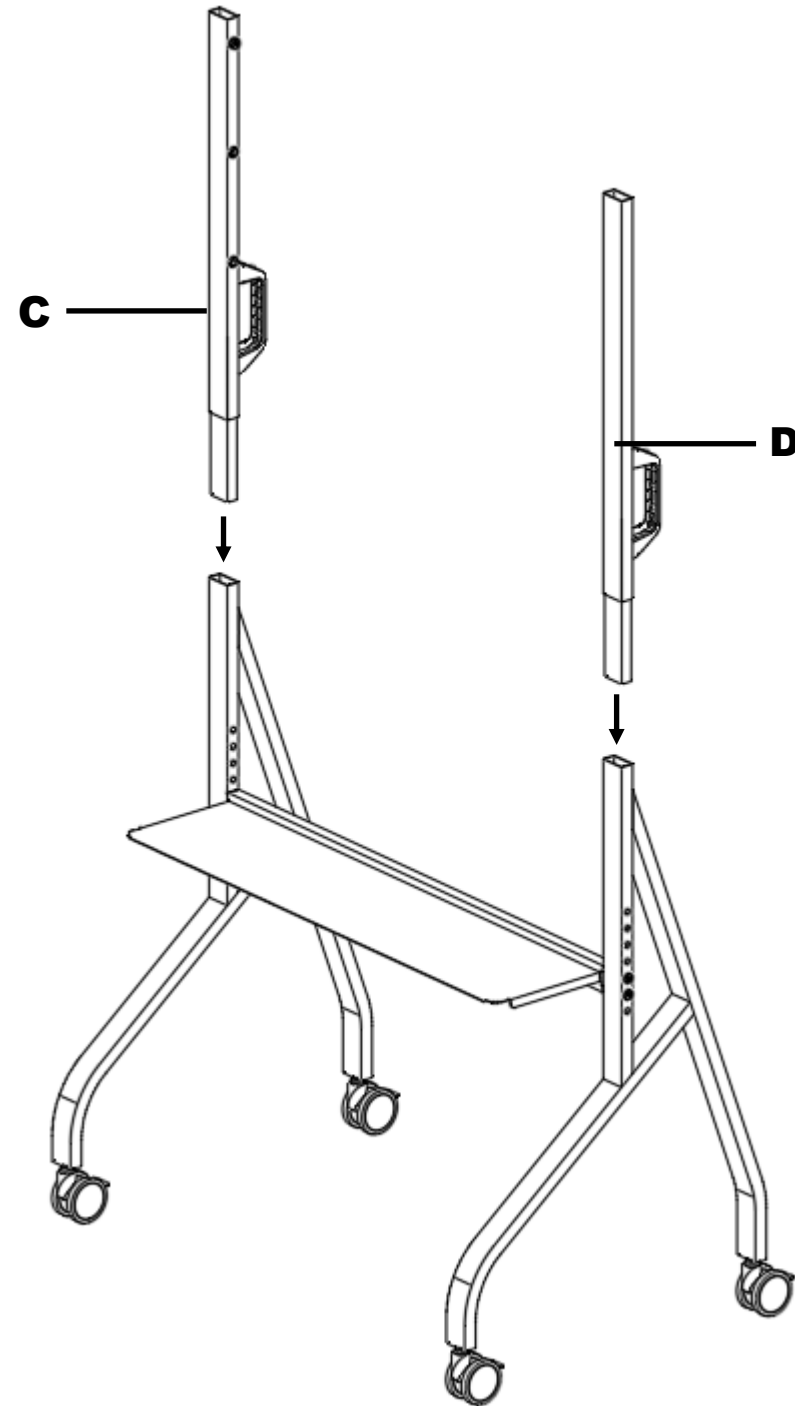

Step 5

Assemble TV hook bracket


- With four screws to fix TV hook bracket upon TV floor stand

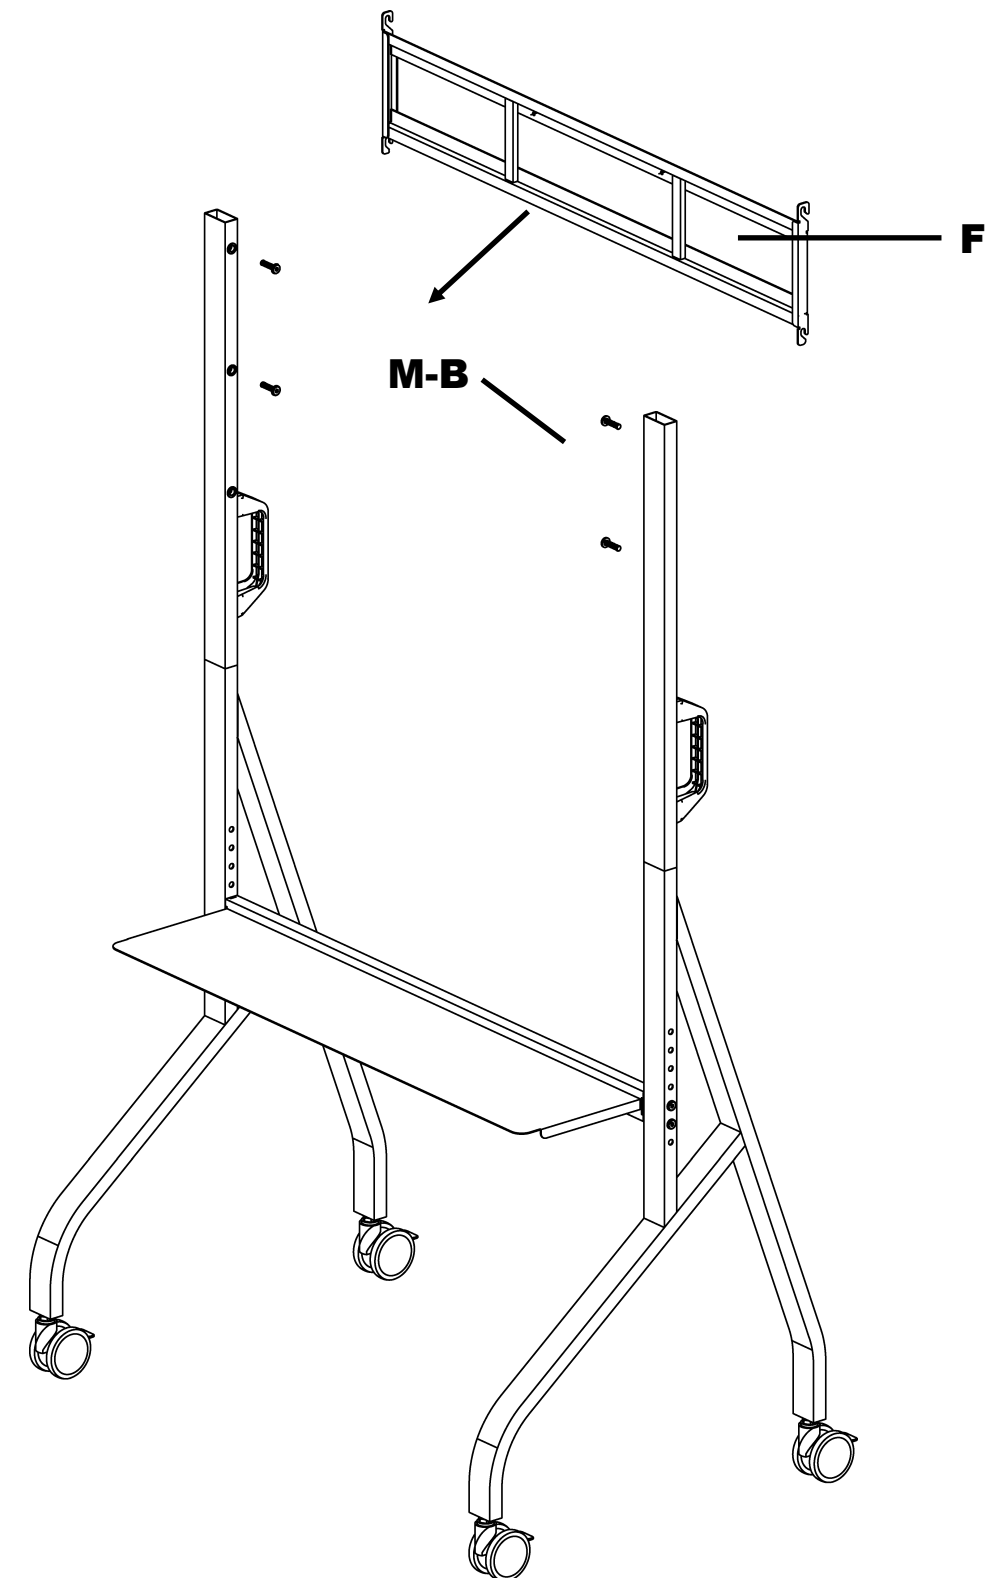

Step 6


Assemble Hook and device panel

- Hang the TV hook on bracket
- Flip the lock plate and secure TV hook with screws
- Hang device panel on bracket and tighten it with two screws

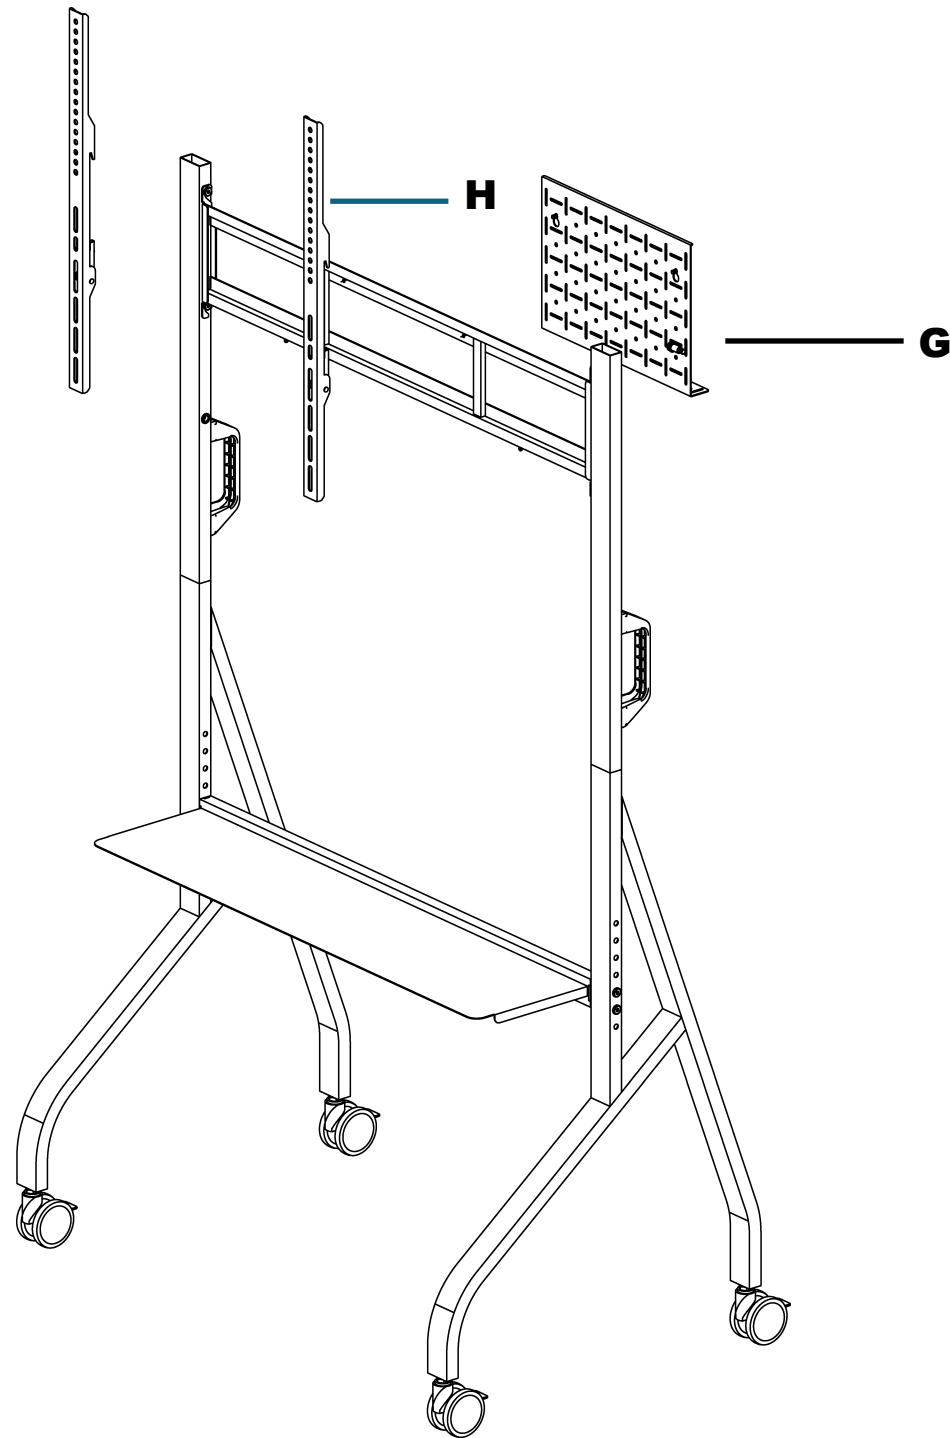


Some assembly details

- Flip the lock and screw it up, to lock the hook on bracket

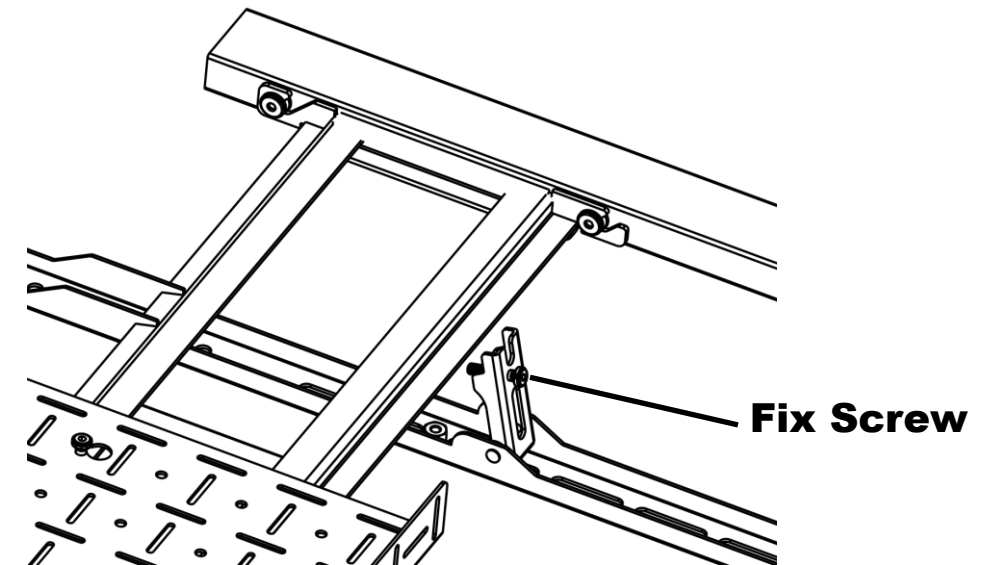

- Use the key holes to easily hang the panel on TV bracket
-

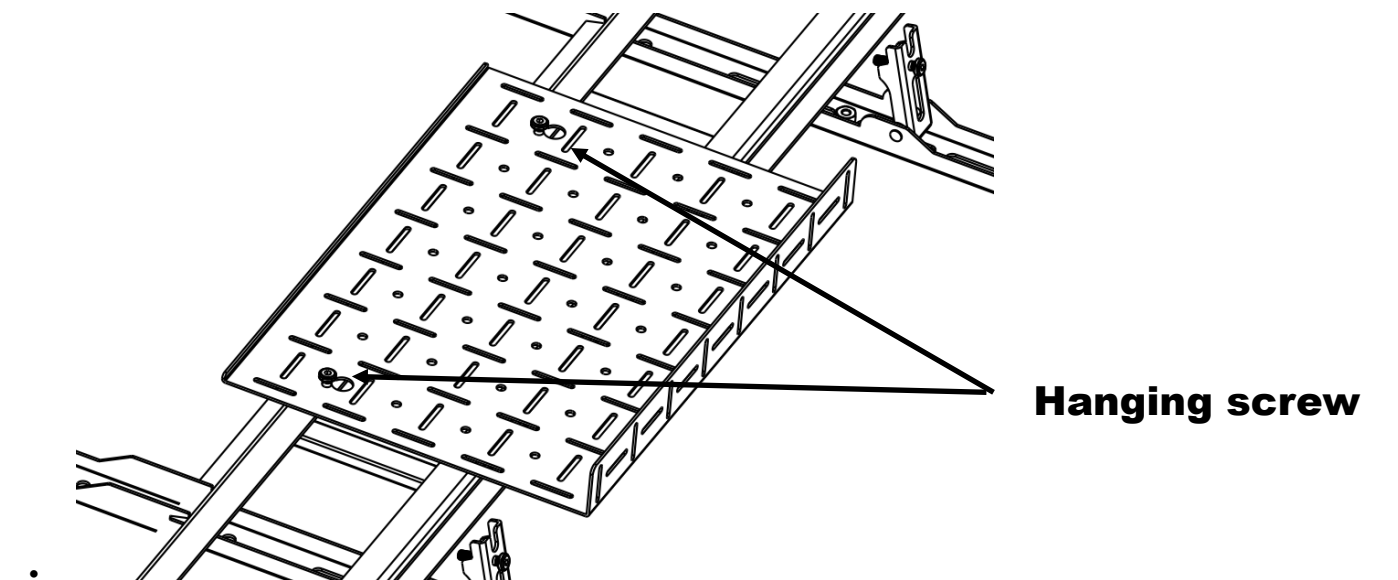

Warning:
Don't hang TV screen until completely assemble the stand