



I. match the power supply with the remote control

1. First, correctly install 2 AAA batteries in the remote control and connect the power supply to the light.
2. After turning on the power, press middle (Set up) button **"6"** within 3 seconds. The light will flash a few times, indicating that the remote control and the power supply have been paired successfully. The function buttons of the remote control can be used normally;

II. Function of the remote control

1. Pressing the light-on button **"I"** the light will turn on 100%. Pressing the light-off button **"O"** the light will turn off 0%.
3. Pressing the button **"3"**, the light will dimming from 0% to 100% increasing
4. Pressing the button **"7"**, the light will dimming from 100% to 0% reducing
5. Pressing the button **"4"**, the light CCT increasing from WW to CW for CCT lightings
6. Pressing the button **"5"**, the light CCT reducing from CW to WW for CCT lightings
7. The buttons of **"8", "9", "10", "11"** are time setting
8. The Button **"%"** is for step dimming 10%-25%-50%-75%-100%-75%-50%-25%-10%
9. When you dimming the light to off 0% by button **"7"**, please dimming the light on by **"3"** after you turn on the light

Remark

Button **"3"** & Button **"4"** is not working for single color light