



Aeotec

Single Nano Switch with measuring

SKU: AEOEZW116



Quickstart

This is a **On/Off Power Switch** for **Europe**. To run this device please connect it to your mains power supply following action:

1. Install the device according to the instructions.
2. Press the button 2 times quickly on the Nano Switch.

Important safety information

Please read this manual carefully. Failure to follow the recommendations in this manual may be dangerous or result in damage to property. The manufacturer, distributor and seller shall not be liable for any loss or damage resulting from failure to comply with the instructions. This equipment is intended for use as a power switch only for its intended purpose. Follow the disposal instructions. Do not dispose of electronic equipment in the general waste.

What is Z-Wave?

Z-Wave is the international wireless protocol for communication in the Smart Home. This device is suited for use in a Z-Wave network.

Z-Wave ensures a reliable communication by reconfirming every message (**two-way communication**) and every mains powered node can act as a repeater for other nodes (**meshed network**) in case the receiver is not in direct wireless range of the transmitter.

This device and every other certified Z-Wave device can be **used together with any other certified Z-Wave device regardless of brand and origin** as long as both are suited for the same frequency range.

If a device supports **secure communication** it will communicate with other devices secure as long as this device provides the same or a higher level of security. Otherwise it will automatically turn into a lower level of security to maintain backward compatibility.


For more information about Z-Wave technology, devices, white papers etc. please refer to www.z-wave.info.

Product Description

Aeotec Nano Switch is a low-cost Z-Wave Switch specifically used to enable Z-Wave command and control (o wattage consumption or kWh energy usage over a period of time. In the event of power failure, non-volatile me unit?s operating status.

It can connect to 2 external manual switches to control the load ON/OFF independently. Its surface has a pin si panel, so you can also use the touch panel to control the Nano Switch.

The Nano Switch is also a security Z-Wave device and supports Over The Air (OTA) feature for the products fir

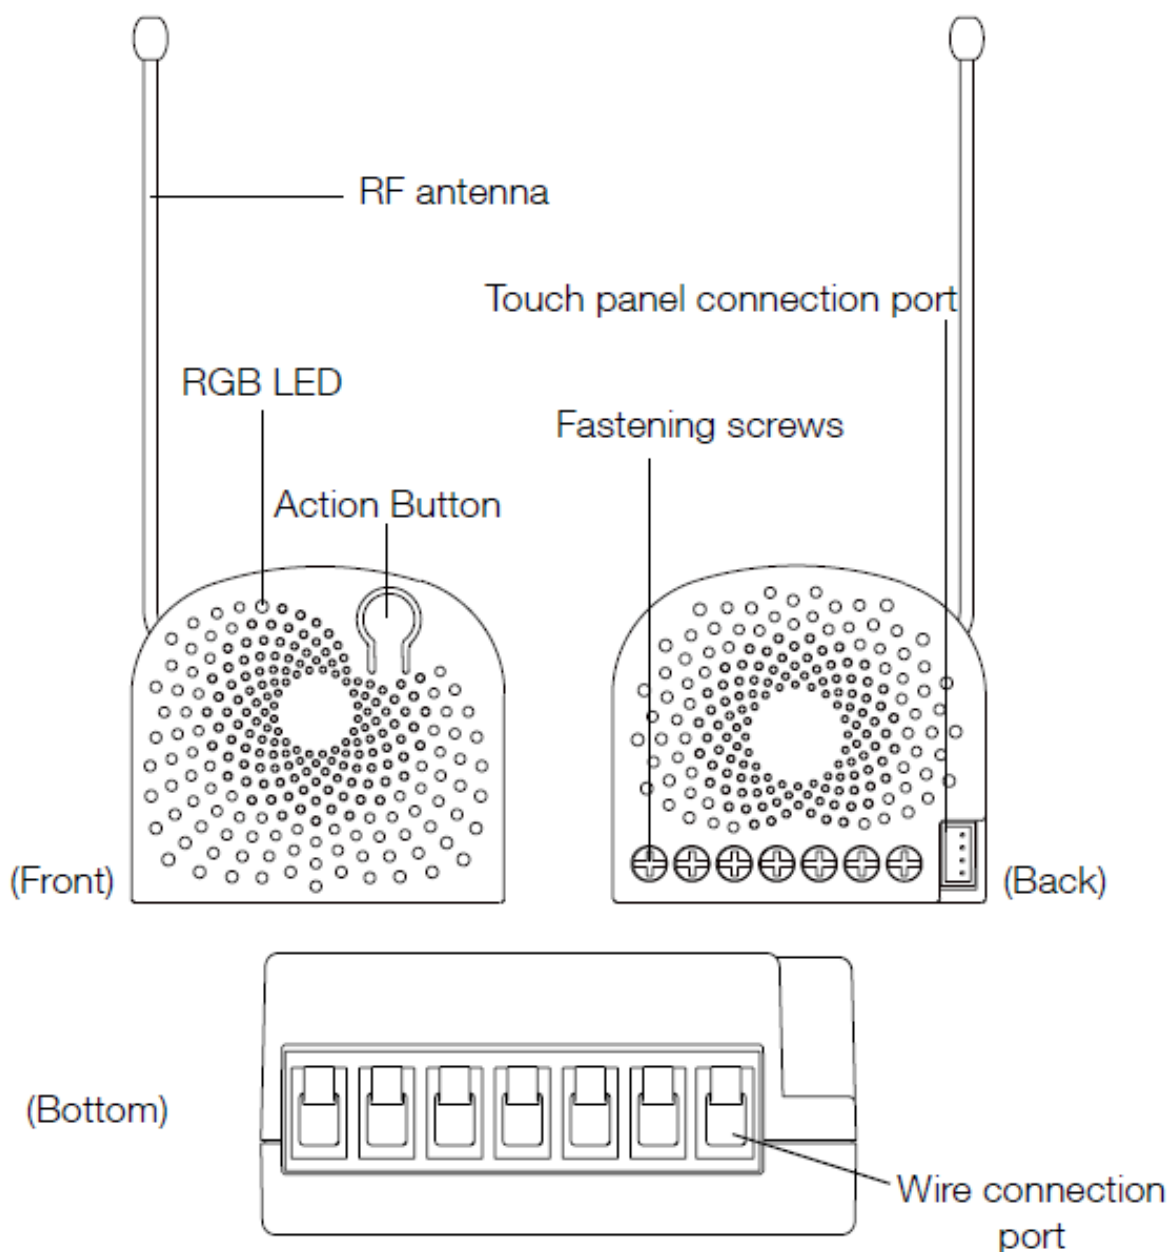

Prepare for Installation / Reset

Please read the user manual before installing the product.

In order to include (add) a Z-Wave device to a network it **must be in factory default state**. Please make sure by performing an Exclusion operation as described below in the manual. Every Z-Wave controller is able to per

the primary controller of the previous network to make sure the very device is excluded properly from this network.

Reset to factory default


This device also allows to be reset without any involvement of a Z-Wave controller. This procedure should only

Set Parameter 255

Safety Warning for Mains Powered Devices

ATTENTION: only authorized technicians under consideration of the country-specific installation guidelines/nor assembly of the product, the voltage network has to be switched off and ensured against re-switching.

Installation

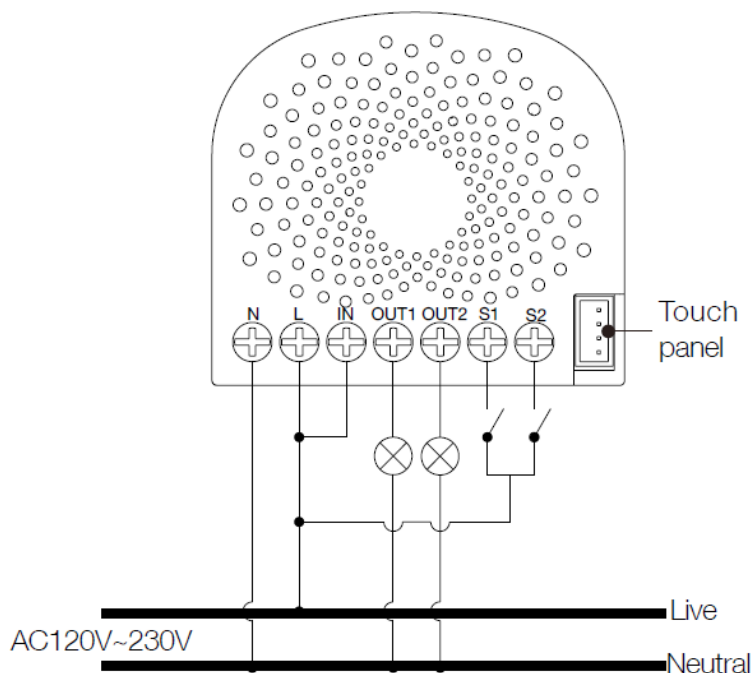

Notes for the wire connection ports:

- N ? Power input for neutral
- L ? Power input for live
- IN ? Input for load power supply
- OUT1 ? Output for load 1
- OUT2 ? Output for load 2
- S1 ? External switch control for load 1
- S2 ? External switch control for load 2


1. Shut off the main circuit breaker of your home for safety during the installation and ensure the wires are not damaged to the Nano Switch.

Note: Your home's main circuit breaker must support the overload protection for safety.


2. Preparing connection wires 14 AWG power wires for Input/ Output. 18 AWG copper wires for external manual control. Strip the connection wire and make sure the length of the metallic part is about 5mm.

Note: All connection wires need to be flexible cable.

Wiring diagram of AC120V/230V power input.

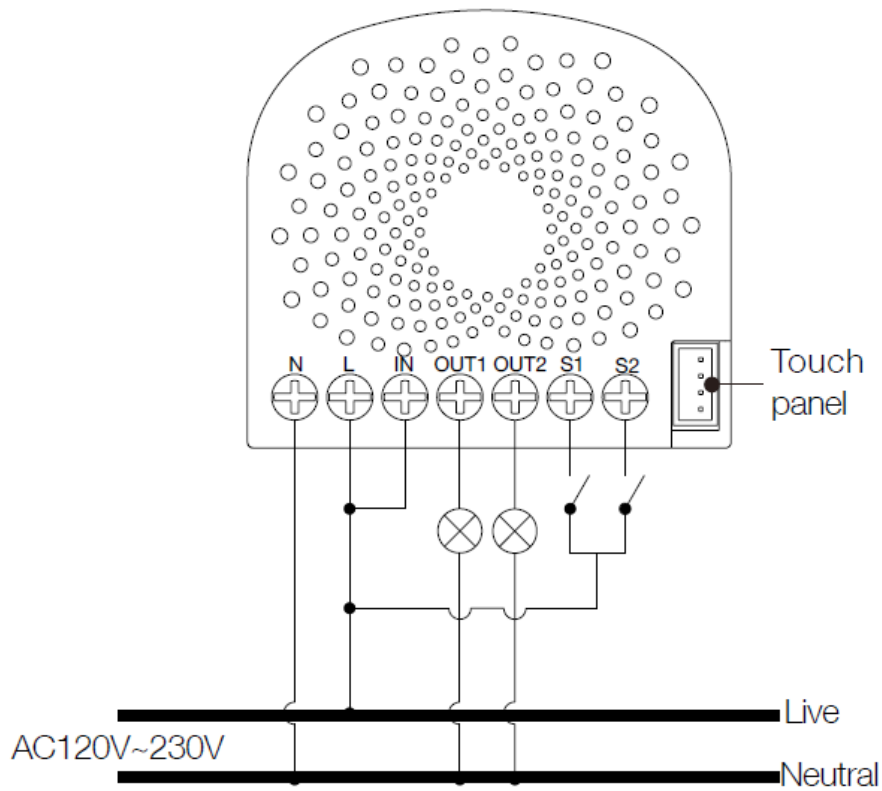


In some cases, you may have some loads just only can be used on the voltage of DC24V and hope that it still (the following diagram to achieve this:

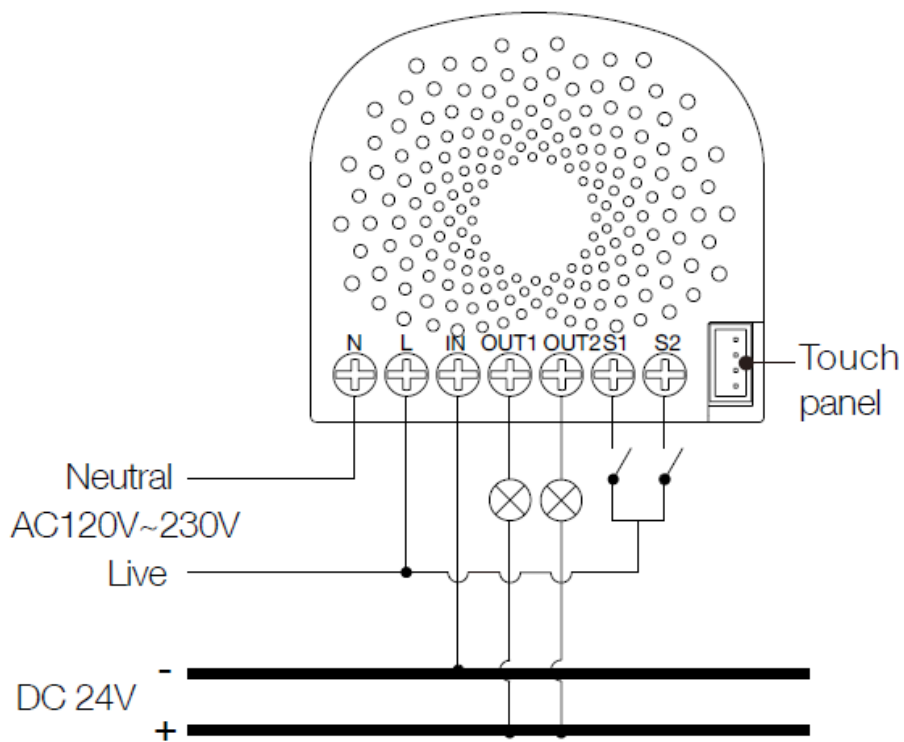


Note: The ?IN? terminal

Wiring diagram of DC24V power input.

Since the Nano Switch also supports the DC24V power input, so you can use it to control the loads that power

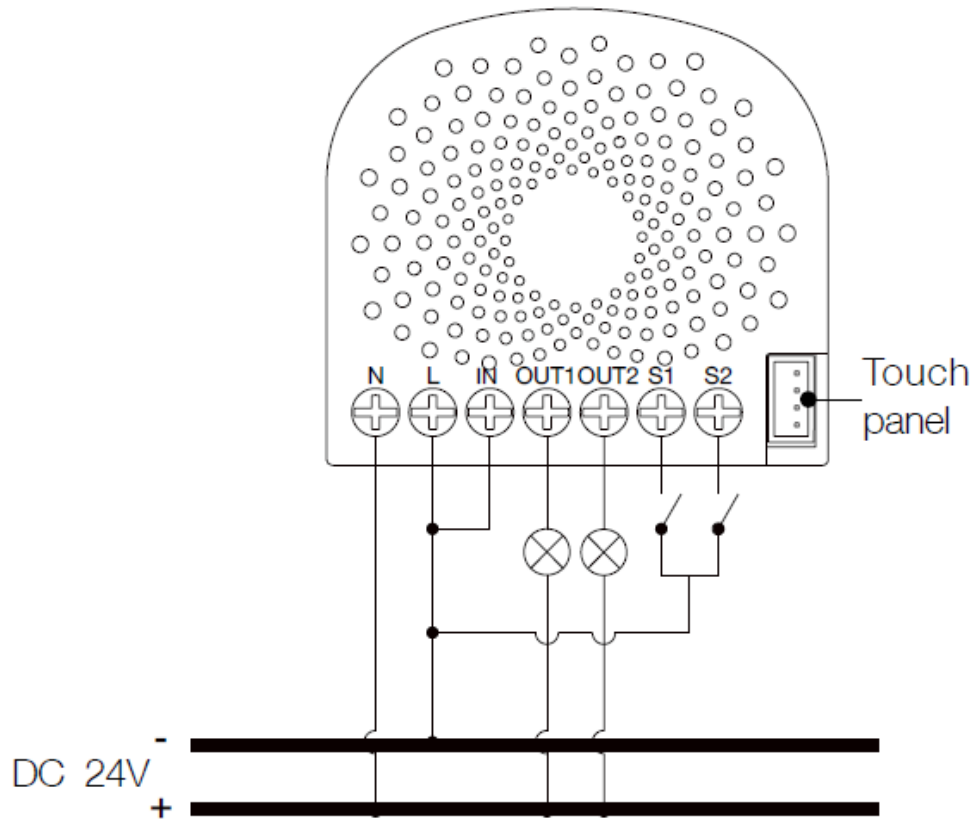


If the output loads should be only powered by AC120V or AC230V, you can change the wire connection as bel

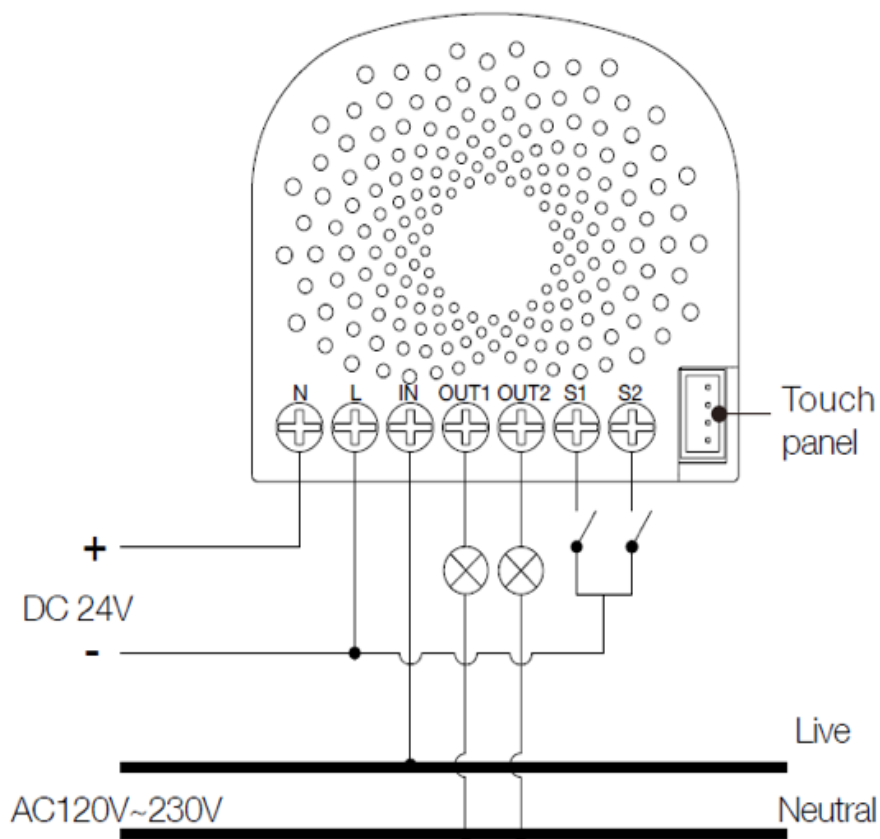

Note: The 'IN' terminal should be connected to the 'Live' of AC 120V/230V power wire.

All above wiring diagrams show that the Nano Switch uses 2-Way or momentary button switches as the external switches. The next diagram will show you that the Nano Switch uses the SPDT (Single-Pole Double-Throw) switches as the external switches.

Wiring diagram of 3-Way connection for the external manual switch.

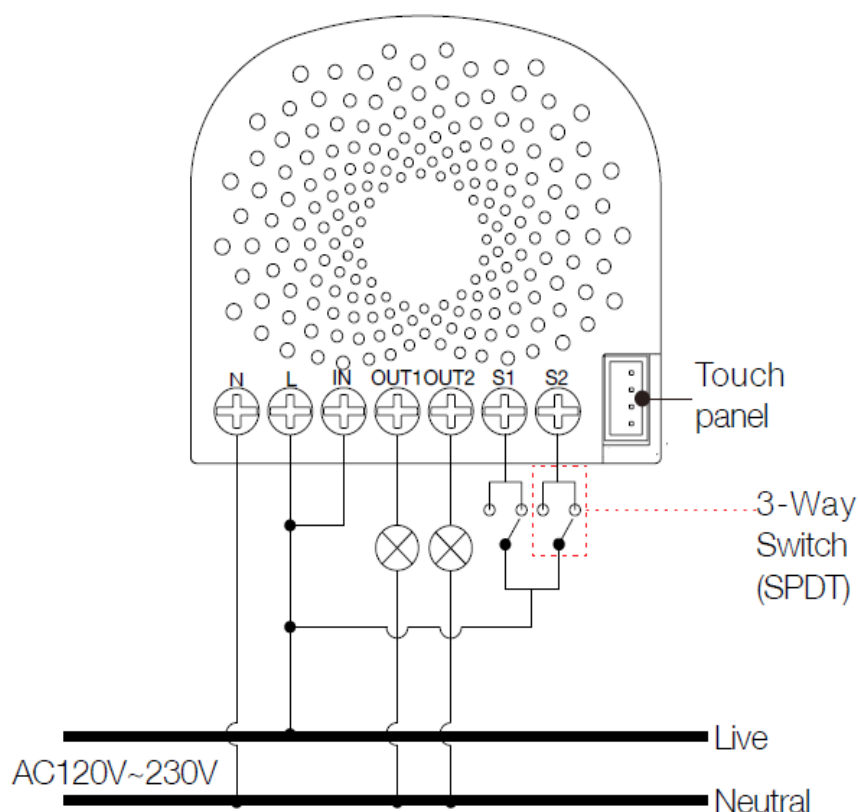

Inclusion/Exclusion

On factory default the device does not belong to any Z-Wave network. The device needs to be **added to an existing** network of this network. This process is called **Inclusion**.

Devices can also be removed from a network. This process is called **Exclusion**. Both processes are initiated by a Z-Wave controller. The controller is turned into exclusion respective inclusion mode. Inclusion and Exclusion is then performed doing a

Inclusion

1. Install the device according to the instructions.
2. Press the button 2 times quickly on the Nano Switch.

Exclusion

1. Press the button once on the Dual Nano Switch.

Quick trouble shooting

Here are a few hints for network installation if things dont work as expected.

1. Make sure a device is in factory reset state before including. In doubt exclude before include.
2. If inclusion still fails, check if both devices use the same frequency.
3. Remove all dead devices from associations. Otherwise you will see severe delays.
4. Never use sleeping battery devices without a central controller.
5. Dont poll FLIRS devices.
6. Make sure to have enough mains powered device to benefit from the meshing

Association - one device controls an other device

Z-Wave devices control other Z-Wave devices. The relationship between one device controlling another device

device, the controlling device needs to maintain a list of devices that will receive controlling commands. These related to certain events (e.g. button pressed, sensor triggers, ...). In case the event happens all devices store same wireless command wireless command, typically a 'Basic Set' Command.

Association Groups:

Group Number	Maximum Nodes	Description
1	5	Z-Wave Plus Lifeline. When the load state of Nano Switch receives the Basic Set, Switch All, Scene Activation Report and Basic Report (configured in this group).
2	5	Forward the Basic Set, Switch All, Scene Activation Report and Basic Report (configured in this group). Nano Switch receives the Basic Set, Switch All, Scene Activation Report and Basic Report (configured in this group).
3	5	Send Basic Set (configured by parameter 82) to switch S1 is operated
4	5	Send Basic Set (configured by parameter 82) to switch S2 is operated

Configuration Parameters

Z-Wave products are supposed to work out of the box after inclusion, however certain configuration can adapt enhanced features.

IMPORTANT: Controllers may only allow configuring signed values. In order to set values in the range 128 ... 255 value minus 256. For example: To set a parameter to 200 it may be needed to set a value of 200 minus 256 = -56 applies: Values greater than 32768 may needed to be given as negative values too.

Parameter 3: Current Overload Protection.

Over current protection. Output load will be closed after 30 seconds if the current exceeds (US: 15.5A, AU or E: 16A).
Size: 1 Byte, Default Value: 1

Setting	Description
0	Disable
1	Enable

Parameter 4: Overheat protection.

Output Load will be turned off automatically after 30 seconds and if the temperature of product inside exceeds 70°C.
Size: 1 Byte, Default Value: 0

Setting	Description
0	Disable
1	Enable

Parameter 20: Configure the output status after re-power on it.

Configure the output status after re-power on it.
Size: 1 Byte, Default Value: 0

Setting	Description
0	Last status
1	Always on
2	Always off

Parameter 80: To set which notification would be sent to the associated dev
To set which notification would be sent to the associated devices (Group 1) when the state of Nano Dimmers is
 Size: 1 Byte, Default Value: 0

Setting	Description
0	Send Nothing
1	Send Hail CC
2	Send Basic CC report
3	Send Multilevel Switch report
4	Send Hail CC when using the manual switch to change the

Parameter 81: To set which notification would be sent to the associated nod
To set which notification would be sent to the associated nodes in association Group 3 when using the externa
 Size: 1 Byte, Default Value: 1

Setting	Description
0	Send Nothing
1	Send Basic Set CC

Parameter 82: To set which notification would be sent to the associated nod
To set which notification would be sent to the associated nodes in association Group 4 when using the externa
 Size: 1 Byte, Default Value: 1

Setting	Description
0	Send Nothing
1	Send Basic Set CC

Parameter 83: Configure the state of LED
Configure the state of LED when it is in 3 modes
 Size: 1 Byte, Default Value: 0

Setting	Description
0	The LED will follow the status (on/off) of its load (Energy mc
256 - 316	The hour value of ON time
2	Night light mode.

Parameter 84: ON/OFF time

Set the ON/OFF time of the LED when it is in Night light mode.

Size: 4 Byte, Default Value: 524306

Setting	Description
0 - 60	The minute time of OFF
256 - 316	The hour time of OFF
65536 - 65596	The minute time of ON
16777216 - 16777276	The hour time of ON

Parameter 86: Set appointment 1

Set appointment 1

Size: 4 Byte, Default Value: 2293760

Setting	Description
0 - 60	The minute value of ON time
256 - 316	The minute value of ON time
65536 - 65543	The day value (Mon to Sun)
16777215	Disable the setting.
16777216	Enable the setting.

Parameter 87: Set appointment 2

Set appointment 2

Size: 4 Byte, Default Value: 2293760

Setting	Description
0 - 60	The minute value of ON time
256 - 316	The hour value of ON time
65536 - 65543	The day value (Mon to Sun)
16777215	Disable the setting.
16777216	Enable the setting.

Parameter 90: Enables/disables parameter 91 and 92 below:*Enables/disables the function of parameter 91 and 92.*

Size: 1 Byte, Default Value: 0

Setting	Description
0	Disable
1	Enable

Parameter 91: Set the threshold value of wattage.*Threshold change in wattage (in terms of wattage) to induce an automatic report.*

Size: 2 Byte, Default Value: 25

Setting	Description
0 - 60000	The threshold value range is 0 to 60000

Parameter 92: Set the threshold value of wattage.*Threshold change in wattage (in terms of percentage) to induce an automatic report.*

Size: 1 Byte, Default Value: 5

Setting	Description
0 - 100	The threshold value range is 0 to 100

Parameter 100: Set parameter 101-103 to default value.*Set parameter 101-103 to default value.*

Size: 1 Byte, Default Value: 0

Setting	Description
0	Reset the parameter 101-103

Parameter 101: To set which reports need to be sent in Report group 1.*To set which reports need to be sent in Report group 1.*

Size: 4 Byte, Default Value: 0

Setting	Description
1	Send Meter Report of voltage (V)
2	Send Meter Report of current (A)
4	Send Meter Report of wattage (W)
8	Send Meter Report of energy (kWh)

Parameter 102: To set which reports need to be sent in Report group 2.*To set which reports need to be sent in Report group 2.*

Size: 1 Byte, Default Value: 0

Size: 1 Byte, Default Value: 0

Setting	Description
1	Send Meter Report of voltage (V)
2	Send Meter Report of current (A)
4	Send Meter Report of wattage (W)
8	Send Meter Report of energy (kWh)

Parameter 103: To set which reports need to be sent in Report group 3.

To set which reports need to be sent in Report group 3.

Size: 1 Byte, Default Value: 0

Setting	Description
1	Send Meter Report of voltage (V)
2	Send Meter Report of current (A)
4	Send Meter Report of wattage (W)
8	Send Meter Report of energy (kWh)

Parameter 110: Set parameter 111-113 to default value.

Set parameter 111-113 to default value.

Size: 1 Byte, Default Value: 0

Setting	Description
0	Reset the parameter 111-113

Parameter 111: Set the interval of automatic report for Report group 1.

Set the interval of automatic report for Report group 1.

Size: 4 Byte, Default Value: 3

Setting	Description
1 - 2147483647	The range of interval time is 1 to 2147483647.

Parameter 112: Set the interval of automatic report for Report group 2.

Set the interval of automatic report for Report group 2.

Size: 4 Byte, Default Value: 600

Setting	Description
1 - 2147483647	The range of interval time is 1 to 2147483647.

Parameter 113: Set the interval of automatic report for Report group 2.

Set the interval of automatic report for Report group 3.

Size: 4 Byte, Default Value: 600

Setting	Description
1 - 2147483647	The range of interval time is 1 to 2147483647.

Parameter 120: Configure the external switch mode for S1.

Configure the external switch mode for S1.

Size: 1 Byte, Default Value: 0

Setting	Description
0	Enter automatic identification mode
1	Momentary push button mode
2	3 way switch mode
3	2-state switch mode

Parameter 121: Configure the external switch mode for S2.

Configure the external switch mode for S2.

Size: 1 Byte, Default Value: 0

Setting	Description
0	Enter automatic identification mode
1	Momentary push button mode
2	3 way switch mode
3	2-state switch mode

Parameter 122: Set the control destination for external switch S1

Set the control destination of the external switch.

Size: 1 Byte, Default Value: 3

Setting	Description
1	control the output loads of itself.
2	control the other nodes
3	control the output loads of itself and other nodes.

Parameter 252: Lock/unlock configuration parameters

Lock/unlock configuration parameters.

Size: 1 Byte, Default Value: 0

Setting	Description
0	Unlock
1	Lock

Parameter 255: Reset the Nano Dimmer

Reset the Nano Dimmer to factory default.

Size: 4 Byte, Default Value: 0

Setting	Description
0	Reset all configuration parameters to factory default setting
1431655765	Reset to factory default setting and removed from the z-wave

Technical Data

Dimensions	0.0425000x0.0400000x0.0200000 mm
Weight	28.5 gr
Hardware Platform	ZM5202
EAN	1220000015333
IP Class	IP 20
Voltage	24V DC/ 230V AC
Load	6,5 A
Device Type	On/Off Power Switch
Generic Device Class	Binary Switch
Specific Device Class	Binary Power Switch
Firmware Version	01.00
Z-Wave Version	04.22
Certification ID	ZC10-17035496
Z-Wave Product Id	0x0086.0x0003.0x0074
Frequency	Europe - 868,4 Mhz
Maximum transmission power	5 mW

Supported Command Classes

- Basic
- Switch Binary
- Switch All

- Scene Activation
- Scene Actuator Conf
- Meter
- Association Grp Info
- Device Reset Locally
- Zwaveplus Info
- Configuration
- Alarm
- Manufacturer Specific
- Powerlevel
- Firmware Update Md
- Clock
- Association
- Version
- Hail

Controlled Command Classes

- Hail

Explanation of Z-Wave specific terms

- **Controller** — is a Z-Wave device with capabilities to manage the network. Controllers are typically Gateway controllers.
- **Slave** — is a Z-Wave device without capabilities to manage the network. Slaves can be sensors, actuators
- **Primary Controller** — is the central organizer of the network. It must be a controller. There can be only one
- **Inclusion** — is the process of adding new Z-Wave devices into a network.
- **Exclusion** — is the process of removing Z-Wave devices from the network.
- **Association** — is a control relationship between a controlling device and a controlled device.
- **Wakeup Notification** — is a special wireless message issued by a Z-Wave device to announces that is able
- **Node Information Frame** — is a special wireless message issued by a Z-Wave device to announce its capabilities

