

**WWW.INFIRE.PL**



**INSTALLATION CARD**  
BIO-FIREPLACE INPORTAL 1 *weight 22 kg*

**INFIRE KAROL LIPKA  
UL. OBWODOWA 3  
11-500 GAJEWO**

**Kontakt:**  
biuro@infire.pl  
infire@wp.pl

## **THIS DOCUMENT IS PART OF THE DEVICE**

### **INSTALLATION**

Please make sure that the set delivered to you contains all the elements, that is:

- fireplace (housing)
- hearth (steel rectangular tank)
- glass and steel mountings for glass panel
- steel long handle for adjusting and extinguishing a flame

1. Choose the room in which you want to use the fireplace. The room in which the device will be used should have a minimum area of 20m<sup>2</sup>.
2. When using the fireplace in a room, the window must be tilted.
3. The room in which the fireplace is used should always be ventilated, as it absorbs oxygen from the air. Do not install the fireplace in a place where it will be exposed to draught!
4. The fireplace should be placed on an even and stable surface, in a place where it will not be exposed to falling over, should stick backwards to the wall.
5. The wall behind the fireplace must not be covered with any combustible material.
6. Place the rectangular steel tank (the hearth) in the rectangular opening inside the fireplace.
7. Insert the glass into the mountings and tighten it from the back using a screwdriver.
8. Fix the fireplace to the wall using the supplied screws by screwing it to the wall and attaching the fireplace with the "ears" at the back of the fireplace.
9. Do not place any objects on the housing or inside the fireplace.
10. Do not place any flammable materials in a distance of at least 2 m from the device.

11. Convection air slots and rear ventilation should not be obstructed.

Infire is not liable for damage resulting from incorrect installation of the fireplace or from installation of the fireplace on an unsuitable wall/floor.