

**WWW.INFIRE.PL**



**INSTALLATION CARD**  
**BIO-FIREPLACE INSERT 1000 *weight 14kg***

**INFIRE KAROL LIPKA**  
**UL. OBWODOWA 3**  
**11-500 GAJEWO**

**Kontakt:**  
biuro@infire.pl  
infire@wp.pl


## THIS DOCUMENT IS PART OF THE DEVICE

### INSTALLATION

Please make sure that the set delivered to you contains all the elements, that is:

- fireplace (housing)
- hearth (steel rectangular tank)
- glass and steel mountings for glass panel
- steel long handle for adjusting and extinguishing a flame
- rectangular extinguishing cover

1. Choose the room in which you want to use the fireplace. The room in which the device will be used should have a minimum area of 20m<sup>2</sup>.
2. When using the fireplace in a room, the window must be tilted.
3. The room in which the fireplace is used should always be ventilated, as it absorbs oxygen from the air. Do not install the fireplace in a place where it will be exposed to draught!
4. Place the rectangular steel tank (the hearth) in the enclosed frame and then in the prepared hole so that the frame hangs on its curves. Please note that the inserts may not be installed on materials that are sensitive to high temperatures, such as foil tops. There must be no flammable or heat-sensitive materials around the fireplace (at least 100 cm) from either side.
5. Install the fireplace in such a way that if you want to close the hole with a flap you will have to pull it (not push).
6. Insert the glass into the mountings and tighten it from the back using a screwdriver.
7. Do not place any objects on the housing or inside the fireplace.
8. Do not place any flammable materials in a distance of at least 2 m from the device.
9. Convection air slots and rear ventilation should not be obstructed.

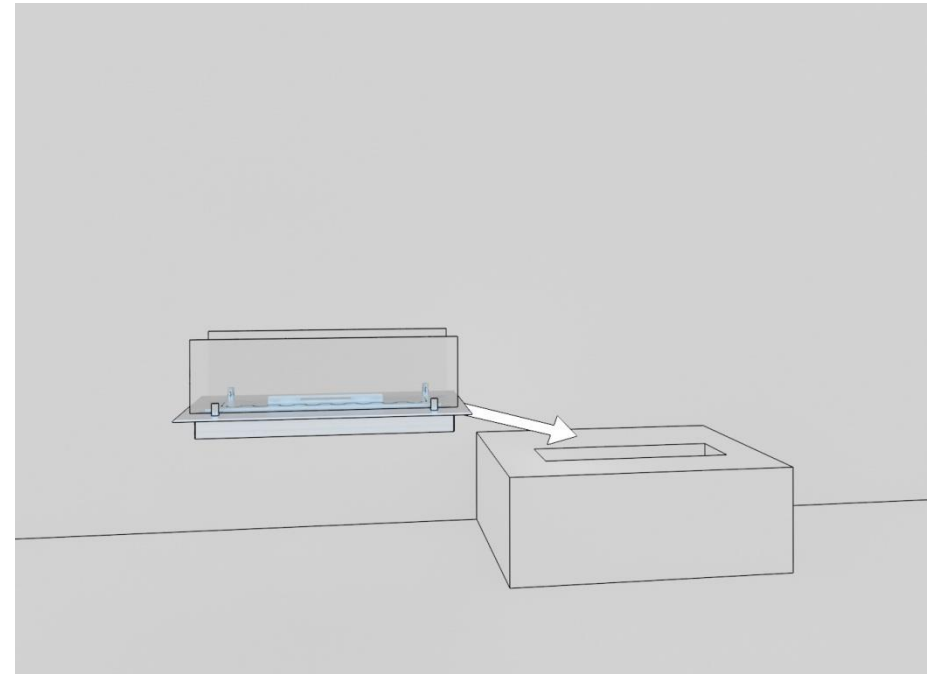

Infire is not liable for damage resulting from incorrect installation of the fireplace or from installation of the fireplace on an unsuitable wall/floor.