



2240 PART LIST

	PART NUMBER	DESCRIPTION
1	1322A059	Rear Sight Assembly
1a	1377-065	Screw, Sight Blade
1b	1322A058	Sight Blade
1c	1377-064	Rear Sight
2	970-028	Seal, .22 Breech
3	1322-066	Bolt, .22 Caliber
4	1322-015	Screw, Rear Breech
5	1322B027	Screw, Breech
6	1377-074	Breech
7	2240-002	Barrel, .22 Caliber
8	788-101	Front Sight
9	2250-004	Tube Plug
10	782-024	Spring, Hammer
11	2300-050	Striker
12	2100A011	Pin, Hammer
13	1377-077	Base, Action
14	1322A026	Sleeve
15	130-036	Seal, Face
16	2240-003	Tube, Powerlet
17	88-089	Set Screw (2)
18	2240-001	Barrel Band
19	2250-003	Valve Assembly
19a	2250A010	Valve Body
19b	2250-016	Valve Stem Assembly
19c	788-061	Spring
19d	2250-011	Spring
19e	130-035	O-Ring
19f	G397-012	Chamber Plug, Face
20	2250-013	Knob, Piercing
21	151-015	Screw, Valve
22	1322-045	Pin, Trigger
23	1322A048	Sear
24	1377-080	Spring, Sear
25	105-039	Ball, Steel Safety
26	111A067	Washer
27	1300-017	Trigger
28	1322-017	Spring, Safety
29	1322-054	Screw, Cover (2)
30	1322B044	Cover

	PART NUMBER	DESCRIPTION
31	1322-052	Safety
32	105-054	Screw, Grip (2)
33	151-020	Grip, Left Hand
34	1322A029	Screw, Rear Frame
35	1322B051	Frame
36	130B031	Screw
37	151-019	Grip, Right Hand

