


BIN TAC PA AIR RIFLE DIAGRAM

Note before ordering parts!

Parts are mostly interchangeable with the AEA Megaldodon.

But do note that the part numbers and location numbers are different between AEA and BinTac.

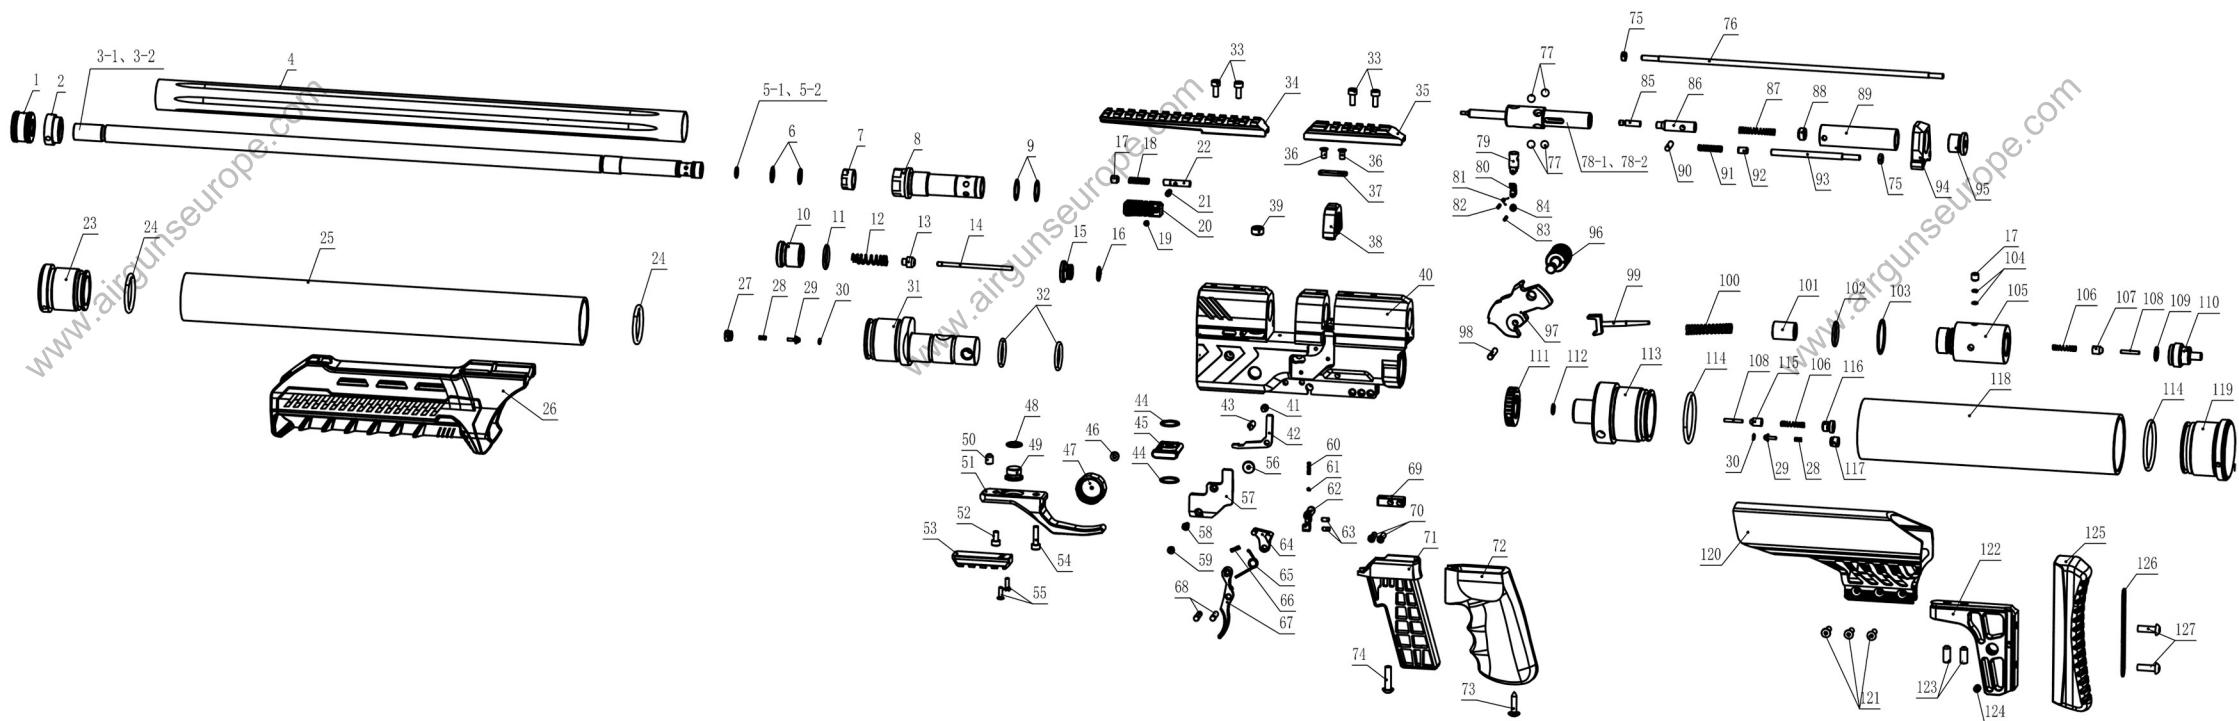

Revised Jan 2026

Item No.	Part No.	Description	Qty	Remarks	Item No.	Part No.	Description	Qty	Remarks	Item No.	Part No.	Description	Qty	Remarks	Item No.	Part No.	Description	Qty	Remarks
1	JT49A	Muzzle Nut	1		41	GB / T 70.1-2008-M3×6	Hex Socket Head Cap Screw M3×6	1		82	—	Deep Groove Ball Bearing, Stainless Steel 2B8T7	1		124	—	Hex Socket Cup-Point Set Screw M5×6	1	
2	JT51A	Front Nut	1		42	JT14A	Connecting Rod	1		83	—	Thrust Ball Bearing, Stainless Steel 7113-304	1		125	ELE-X-20-11.6-A-28-03-00	Shoulder Assembly	1	
3-1	2JT-7A (2)	6.35 mm × 21.65 Muzzle Tube	1	Used with item 5-1#, 78-1#	43	JT5A	Anti-Drop Safety Shaft	1		84	JT28A	Rotating Knob	1		126	ELE-X-20-11.6-A-28-04	Shoulder Plate	1	
3-2	2JT-8A (2)	7.62 mm × 21.65 Muzzle Tube	1	Used with item 5-2#, 78-2#	44	—	O-Ring 13.6 × 1.3 NBR90	2		85	JT29A	Limit Screw	1		127	GB / T 70.2-2008-M5×16	Hex Socket Flat Head Screw M5×16	2	
4	JT33A	Tube Sleeve	1		45	JT59A	Flow Limiter	1		86	JT12A	Locking Shaft	1						
5-1	—	O-Ring 6.5 × 1.5 NBR90	1	Used with item 3-1#, 78-1#	46	CH-BBP-30-12.7-31-03	Sealing Gasket	1		87	JT10A	Compression Spring 0.74 × 9 × 31 × 17	1						
5-2	—	O-Ring 7.8 × 1.2 NBR90	1	Used with item 3-2#, 78-2#	47	CH-BBP-30-12.7-31-02	Air Pressure Gauge	1		88	GB / T 77-2007-M10×6	Hex Socket Set Screw M10×6	1						
6	—	O-Ring 11 × 1.2 NBR90	2		48	—	O-Ring 10.5 × 1.5 NBR90	1		89	JT13A	Push Rod Sleeve	1						
7	HP-X-13-7.62-11	Muzzle Locking Nut	1		49	TER-A-14-11.6-26	Handle M12×1	1		90	—	Deep Groove Ball Bearing, Stainless Steel 440T7	1						
8	2JT-6A (2)	Adapter Sleeve	1		50	GB / T 80-2007-M6×8	Hex Socket Set Screw M6×8	1		91	JT46A	Compression Spring 0.5 × 4.7 × 20 × 23	1						
9	—	O-Ring 16 × 1 NBR90	2		51	JT19A	Trigger Frame	1		92	—	Deep Groove Ball Bearing, Stainless Steel 61808	1						
10	2JT-5A (2)	Valve Core Spring Seat	1		52	—	Hex Socket Head Cap Screw M4×8	1	GB / T 70.1-2008-M4×8	93	JT17A	Connecting Rod	1						
11	—	O-Ring 17.5 × 1.8 NBR90	1		53	JT20A	Leather Pad	1		94	JT16A	Push Rod Connector Block	1						
12	CH-SBP-24-7.62-21-05	Press-Fit Pin 3.8 × 3 × 30 × 10	1		54	GB / T 70.1-2008-M4×16	Hex Socket Head Cap Screw M4×16	1		95	JT17A	Screw	1						
13	2JT-3A (2)	Valve Core	1		55	GB / T 70.3-2008-M3×10	Hex Socket Countersunk Screw M3×10	2		96	JT42A	Pull Handle	1						
14	2JT-4A (2)	Valve Stem	1		56	JT3A	Screw	1		97	JT2A	Hammer	1						
15	2JT-2A (2)	Sealing Ring	1		57	JT30A	Cover Plate	1		98	—	Needle Roller Bearing, Cylindrical 4 × 22 – 45#	1						
16	—	O-Ring 10 × 1.2 NBR90	1		58	GB / T 70.3-2008-M3×8	Hex Socket Countersunk Screw M3×8	1		99	ELE-X-20-11.6-04	Hammer Spring Rod	1						
17	GB / T 77-2007-M6×6	Hex Socket Set Screw M6×6	2		59	GB / T 70.3-2008-M3×6	Hex Socket Countersunk Screw M3×6	1		100	ELE-X-20-11.6-22	Compression Spring 1.7 × 7.7 × 39 × 15	1						
18	JT45A	Press-Fit Pin 6.4 × 8 × 19.7 × 14	1		60	ELE-X-20-11.6-25	Compression Spring 0.35×2.4×9.9	1		101	ELE-X-20-11.6-A-29	Hammer Spring Seat	1						
19	—	Hex Socket Countersunk Screw M2×4	1		61	GB / T 308.1-2013	Steel Ball GCr15 Ø2.5 G10	1		102	—	O-Ring 18 × 1.8 NBR90	1						
20	JT15A	Push Button	1		62	ELE-X-20-11.6-24	Safety Latch	1		103	—	O-Ring 27 × 1.5 NBR90	1						
21	JT43A	Limit Screw	1		63	GB / T 77-2007-M3×6	Hex Socket Set Screw M3×6	2		104	—	O-Ring 2.6 × 1.2 NBR90	2						
22	JT27A	Limit Rod	1		64	JT37A	Stop Pin	1		105	ELE-X-20-11.6-A-30	Rear Air Cylinder Port	1						
23	JT39A	Air Reservoir Adapter	1		65	ELE-X-20-11.6-13	Compression Spring 1.2×3.9×2.25	1		106	HP-A-8-5.5-15-06	Compression Spring 0.5 × 4 × 20 × 11.5	2						
24	—	O-Ring 27.8 × 3.1 NBR90	2		66	JT18A	Compression Spring 0.45×2.7×8.7×5	1		107	JT57A	Sealing Block	1						
25	HP-A-18-5.5-05	Air Reservoir	1		67	JT36A	Trigger	1		108	JT35B2A	Opposed Valve Stem	2						
26	JT14B	Front Grip Assembly	1		68	—	Needle Roller Bearing 4×15-45#	2		109	—	O-Ring 9 × 1.5 NBR90	1						
27	HP-X-13-7.62-14-03	Eccentric Valve Core Spring Seat	1		69	JT32A	Trigger Link Connector	1		110	JT41A	Opposed Valve Screw	1						
28	DEF-2S-X-18-01-13	Press-Fit Pin 4 × 2.9 × 5.5 × 6	2		70	JT67A	Hex Socket Countersunk Screw M4	2		111	JT40A	Locking Nut	1						
29	HP-X-13-7.62-14-02	Eccentric Valve Core	2		71	HP-A-8-5.5-20	Grip Valve Core	1		112	—	O-Ring 6 × 1.5 NBR90	1						
30	—	O-Ring 2.6 × 1.2 CPU90	2		72	HP-A-8-5.5-19	Grip Valve Housing	1		113	JT52B1A	Rear Air Cylinder Connector	1						
31	JT38B1A-0	Eccentric Valve	1		73	—	Cross Recessed Pan Head Screw ST4.2×19	1		114	—	O-Ring 38 × 3 NBR90	2						
32	—	O-Ring 19.8 × 2.4 NBR90 + P	2		74	GB / T 70.2-2008-M5×20	Hex Socket Flat Head Screw M5×20	1		115	1XD13B2A	Valve Core	1						
33	GB / T 70.1-2008-M4×10	Hex Socket Head Cap Screw M4×10	4		75	GB / T 6170-2000-M4	Type I Hex Nut M4	2		116	1XD13B4A	Screw	1						
34	JT24A	Leather Pad	1		76	JT16A	Connecting Rod	1		117	HP-X-13-7.62-B-14-03	Eccentric Valve Core Spring Seat	1						
35	JT25A	Leather Pad	1		77	GB / T 308.1-2013	Steel Ball GCr15 Ø6 G10	4		118	ELE-X-20-11.6-A-31	Air Reservoir Tube	1						
36	—	Hex Socket Countersunk Screw M4×8	2		78-1	2JT-13A (1)	Push Rod	1	Used with item 3-1#, 5-1#	119	HP-A-10-5.5-A-06	Air Reservoir Connector	1						
37	JT23A	Pressure Plate	1		78-2	2JT-14A (1)	Push Rod	1	Used with item 3-2#, 5-2#	120	1ELEX-2B1A (1)	52-Round Drum Magazine	1						
38	JT22A	Steel Sleeve	1		79	JT11A	Push Rod Actuating Shaft	1		121	—	Hex Socket Countersunk Screw M4×14	3						
39	—	Hex Socket Flat Head Screw M10×16	1		80	JT31A	Slide Base	1		122	ELE-X-20-11.6-A-28-02	Support Plate	1						
40	2JT-1A (2)	Base	1		81	JT34A	Compression Spring 0.22 × 6 × 1.264 × 5.32 – LH	1		123	GB / T 80-2007-M6×14	Hex Socket Set Screw M6×14	2						