

Place Ecobuster's EcoHome dispenser on cupboards and high chests of drawers so that the active ingredient can be distributed well in the room. It can also be hung anywhere with the complimentary suspension. Be careful not to spray directly onto plastic/furniture. If the dispenser is in operation, the LED lamp lights up green. It turns red once the batteries need to be replaced. If the LED light flashes 10x, the filling must be replaced. To keep the room free of insects, we recommend regular use with 8 to a maximum of 16 sprays per day.

Danger! Keep out of reach of children.

How it works

1. Open the dispenser pressing the grey button on the top of the machine.
2. Insert batteries.
3. Place the EcoHome spray with the green spray nozzle to the front into the dispenser.
4. Set the dispenser following the steps below.

Button functions	
SPRAY	Test, sprays after 4x blinking
MODE	Save
WEEK	Weekdays
HOUR	Hours
MIN	Minutes
ON / OFF	On / Off
RESET	Reset, programm new

Setting the dispenser

Steps	Description
1. Set the time	Enter the current time using the yellow hour button and the orange min button (e.g. 7:30am).
	Confirm with mode.
	The display shows „start“. Enter the start time using the yellow hour button and the orange min button (e.g. 7:30am).
	Confirm with mode.
	The display shows „stop“. Enter the end time using the yellow and orange buttons (e.g. 19:30pm).
Confirm with mode.	
2. Set the intervals	The display shows „spray“. 15min intervals are set as standard, this can be adjusted using the orange button.
	Confirm with mode.
3. Set weekdays	The display shows „week“. 7 weekdays is set as standard. 5, 6 or 7 weekdays can be set individually using the green button.
	Confirm with mode.
4. Turn on	The display shows „clock“.
	Turn the machine away from you and press the red on button once. The first spray follows. Close the dispenser and place it well - done!