

COMPATIBLE DEVICES

9"- 10" Tablets

○ **Amazon**

- Fire HD 10

○ **Apple**

- iPad (1st Generation)
- iPad (3rd Generation)
- iPad (4th Generation)
- iPad (5th Generation)
- iPad (6th Generation)
- iPad (7th Generation)
- iPad (8th Generation)
- iPad 2
- iPad 9.7 (2017)
- iPad 9.7 (2018)
- iPad Air
- iPad Air 2
- iPad Air 3
- iPad Air 4
- iPad Pro 9.7 (1st Generation)
- iPad Pro 10.5 (2nd Generation)
- iPad Pro 11"
- iPad Pro 11" (2020)

○ **ASUS**

- MeMO Pad FHD 10
- Transformer Pad
- ZenPad 10
- ZenPad 3S 10
- ZenPad Z10

○ **Dell**

- Venue 10 7000
- Venue 11 Pro
- Venue 11 Pro 7000

○ **Google**

- Nexus 10
- Pixel C

○ **HP**

- ElitePad 900
- ElitePad 900 G1
- Pro 610
- Pro Slate 10.1

○ **Huawei**

- MediaPad M2 10.0
- MediaPad M3 Lite 10.0
- MediaPad T3 10

○ **Lenovo**

- Miix 3
- S6000
- Tab 2 A10-70
- Tab 4 10
- Tab 4 10 Plus
- Tab A10
- Tab3 10 Business
- ThinkPad 10
- ThinkPad Tablet 2
- Yoga Book
- Yoga Tab 3 10
- Yoga Tab 3 Pro
- Yoga Tablet 10
- Yoga Tablet 10 HD+
- Yoga Tablet 2 (10 inch)

○ **LG**

- G Pad 10.1
- G Pad II 10.1
- G Pad X 10.1
- G Pad X II 10.1

○ **Microsoft**

- Surface 2
- Surface Pro
- Surface Pro 2

○ **Samsung**

- Galaxy Book 10.6
- Galaxy Tab 10.1
- Galaxy Tab 2 10.1
- Galaxy Tab 3 10.1
- Galaxy Tab 4 10.1
- Galaxy Tab A 9.7
- Galaxy Tab A 10.5
- Galaxy Tab Active Pro
- Galaxy Tab Pro 10.1
- Galaxy Tab S 10.5
- Galaxy Tab S2 9.7
- Galaxy Tab S3 9.7
- Galaxy Tab S4 10.5
- Galaxy Tab S5e
- Galaxy Tab S6
- Galaxy Tab S7
- Galaxy Tab S7 Plus

○ **Sony**

- Vaio Tap 11
- Xperia Tablet S
- Xperia Tablet Z

○ **Vankyo**

- MatrixPad Z4 10"

○ **Zebra**

- ET50 10"
- ET55 10"

+ Many Others