 


Digital loupe 3.5" with LED, Manual

LI-S66143

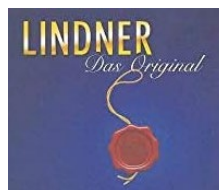

 
reflecta




Index

1. Image
2. Table of contents
3. Package Contents
Tips and warnings
4. Features and Components
User Manual
5. Batteries
Color mode
Play


Content

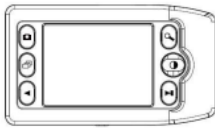

Draagbare digitale loep

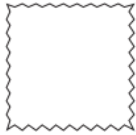 


Schoonmaakdoek

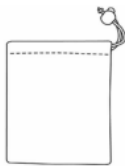 

Draagtas



 USB-kabel

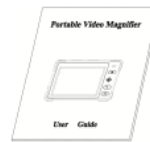


Gebruikersaanwijzing

Video loupe
USB cable
Protective bag
Cleaning cloth
User Manual

Tips and warnings

1. Do not use the digital loupe in environments where such devices are prohibited, improper use may result in serious accidents.
2. Protect the digital loupe from water and other liquids. Do not use the digital loupe with wet hands. Never use the digital loupe in the rain or snow. Moisture can cause fire and electric shock. If you notice smoke or odors coming from your digital loupe, turn it off immediately. Turn it off immediately.
3. The digital loupe may become slightly warm during use. This is not a malfunction.
4. Wipe the digital loupe with a soft, dry cloth.

 Features and Components

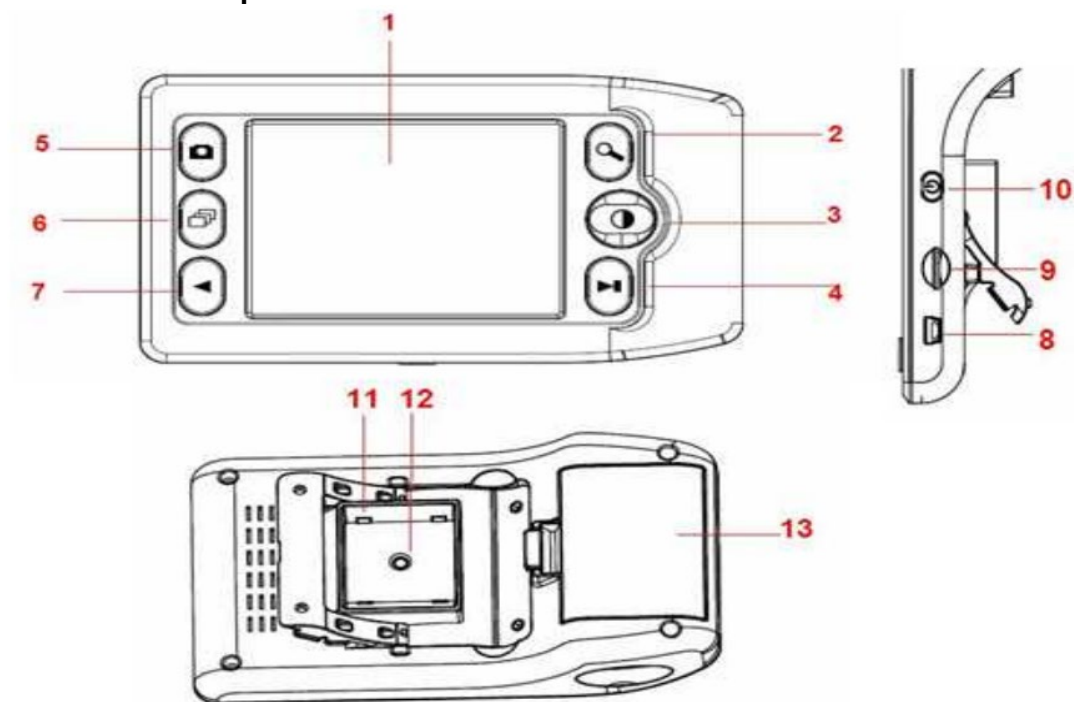

- | | | |
|------------------|-------------------------|------------------|
| 1. 3.5" screen | 8. USB port | 9. Micro SD Card |
| 2. Magnification | 10. On/Off | |
| 3. Color mode | 11. LED | |
| 4. Back | 12. Lens | |
| 5. Snapshot | 13. Battery compartment | |
| 6. Playback | | |
| 7. Forward | | |

User Manual

1. Turn on your device, using the power button (10)
2. Insert your Micro SD card into the SD slot.
3. Fold out the support to position your Loupe parallel to the subject.
4. If necessary, you can turn on the LED lighting.



This button allows you to set the magnification to the desired mode 5x, 6x, 7.5x or 10x.

 


This button allows you to change the colors used on the screen

You can now use the set recording capability. Store these recordings on your SD card, which you can read in your PC or other equipment.

Batteries

When the battery is low, a low battery indicator will be displayed in the lower right corner of the panel. When replacement with new batteries is necessary, use only alkaline AAA size batteries (3 pcs). Press lightly and pull the battery compartment cover lever to open the battery compartment. Place the batteries according to the polarity as shown inside the battery compartment, and close the cover.

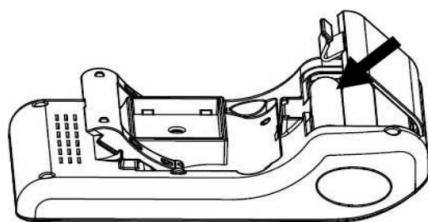

Color mode

Using this mode, you can call up 3 different modes according to what gives the best image result.

- 1 Full color
- 2 Enhanced positive image (black and white)
- 3 Enhanced negative image (white on black)

Play



This button allows you to view, pause and stop the images.



This button allows you to take pictures and save them to your Micro SD card (not included in delivery)

Your supplier



