

MONSTER

clippers



MONSTERTRIMMER

manual

IMPORTANT SAFEGUARDS | 4

DESCRIPTION OF PARTS | 7

OPERATING INSTRUCTIONS | 8

CHARGING THE BATTERY | 8

CORDED OPERATION | 8

BATTERY OPERATION | 9

TRIMMER CARE | 10

BLADE CARE & OILING | 10

UNIT CARE | 11

REPLACING OR RE-ADJUSTING THE BLADES | 12

USING ATTACHMENT COMBS | 13

GUIDELINES FOR LITHIUM-ION BATTERIES | 14

TROUBLESHOOTING | 15

Cordless Trimmer Instructions MODEL M03

Please read the following instructions carefully before using your new Monster Trimmer. Save these instructions for further reference.

THIS PRODUCT IS INTENDED FOR PROFESSIONAL USE.

For more information or assistance call our customer service centre

T: +31 (0)88 88 000 80

W: www.monsterclippers.com

E: customerservice@monsterclippers.com

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using the Monster Trimmer.

REQUIREMENTS

- Pay attention to the rating voltage.
- An appliance should never be left unattended when plugged in.
- Use this appliance only for its intended purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance.

HAZARDS

Danger: risk of fire, electric shock, or injury to person due to damaged product

- Do not operate the appliance with a broken cord, plug or charger, or if it is not working properly, if it has been dropped or damaged in anyway.
- Any examination or repair must be performed by a qualified professional.
- Do not use attachments not recommended by Monster Clippers because they may cause fire, electric shock or injury and damage to the appliance.
- Use of a charger not sold by Monster Clippers may result in risk of fire, electric shock, or injury to person.
- Do not disassemble charger. Incorrect reassembly may result in a risk of electric shock or fire.
- Plug adapter cord directly into an AC outlet. Do not use an extension cord.

Danger: Electric shock due to penetration of liquid

- To protect against risk of electrical shock never immerse the unit or let it come into contact with water or other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into the bathroom.

Danger of explosion

- Never operate the appliance where aerosol (spray) products are being used or where oxygen is being released
- This appliance contains a lithium-ion battery; exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with the local legal regulations. Do not throw into fire where heat could cause them to rupture or explode.

Warning: injuries due to incorrect handling

- Do not use this appliance with a damaged or broken blade or comb, as injury to the skin may occur.
- Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- Always turn control to OFF then remove plug from outlet to disconnect.
- Never use your appliance without paying attention! Except when charging always unplug this appliance from the electricity outlet immediately after using.

Caution: Danger of product damage

- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance charger.
Care should be used to keep the cord untwisted, and undamaged.
- Do not use outdoors or in damp areas.
- Never carry the unit by its power cord.
- Never drop or insert any object into any opening.
- Always store the trimmer with the blade guard covering the blades

DESCRIPTION OF PARTS



- A. Blade
- B. ON / OFF button
- C. Blade guard
- D. Attachment comb nr. 0,5 = 1,5 mm
- E. Attachment comb nr. 1 = 4,5 mm
- F. Attachment comb nr. 1,5 = 6 mm
- G. Cleaning brush
- H. 10 cc Clipper oil
- I. Charging stand
- J. AC adapter



OPERATING INSTRUCTIONS

CHARGING THE BATTERY

The AC adapter is intended for use with Monster Clipper model MO3 lithium-ion trimmer battery with a rated capacity of 5V 1.5A.

Plug the AC adapter/power cord into an outlet at the correct voltage.

Plug the adapter cord into the receptacle on the back of the charging stand (figure 1) and place trimmer in the charging stand with the Monster Clippers logo facing forward.

Make sure that the trimmer is switched OFF when charging. Note that the trimmer can be removed at any time during the charging cycle without harming the trimmer or battery. The trimmer has not been charged at the factory. Please charge the trimmer for about 60 minutes before the first use for maximum performance. You can keep the trimmer plugged into the charging stand or AC adapter when not in use.




figure 1

CORDED OPERATION



figure 2


If the trimmer powers OFF in the middle of a trimming job, the power cord can be attached to continue use in corded operation. For corded operation, disconnect the AC adapter/power cord from the back of stand and connect the receptacle on the bottom of the trimmer (figure 2). If the battery is completely run down, allow it to charge for one till two minutes (switched OFF) before you start using it as a corded trimmer.



The trimmer will charge at a slower rate while in use with the cord attached. The charging stand or AC adapter will maintain the battery at full charge (switched OFF) . When the trimmer won't be used for a week or more we recommend that you unplug the charging stand or AC adapter.

BATTERY OPERATION

Switch the trimmer ON using the ON / OFF button and, after use, switch it OFF again. When the battery is fully charged, the equipment can be used for up to 120 minutes of continuous run. The Monster Trimmer model MO3, by design, will run at full power until the battery is fully depleted.



TRIMMER CARE

BLADE CARE & OILING

You can clean the excess hair from your blades by using a small cleaning brush. Any excess hair and dirt that has accumulated between the blades should come out by using the Monster Clippers Clean & Cool Spray (sold separately). This maintenance spray cools, cleans, lubricates and protects the cutting blade. For longer durability and a smooth performance. A quick and easy way to clean the blade of impurities! To ensure durability and maintain performance, we recommend oiling the blades before, during and after each use.

FAILURE TO REGULARLY CLEAN AND OIL THE BLADES WILL VOID THE WARRANTY.

When you feel your trimmer blades leave streaks or slow down, it's an indication that you need to oil your blades. To oil it properly, the trimmer should be held so the blades are in a downward position. Place one drop of Monster Clippers oil (sold separately) in the center of the movable top blade and one drop of oil on each end of the top blade. Turn trimmer on and run to distribute the oil. When oil is evenly distributed, turn trimmer off and wipe off excess oil with a soft dry cloth. Periodically oil heel of blade to reduce blade friction.



USE MONSTER CLIPPERS OIL ONLY.

Wipe off excess oil to prevent it from running into the motor compartment. Oil in the motor compartment could eventually lead to poor motor performance or defects.

UNIT CARE

It's best to use a clean cloth (dry or dampened with water).

Do NOT USE thinner, bleach, benzene or other aggressive cleaning agents to clean the unit!

REPLACING OR RE-ADJUSTING THE BLADES

Please use extreme caution when replacing or re-adjusting the blade, improper adjustment may result in serious skin irritation or even aggravating cuts.

Switch off the trimmer. Undo both screws on the cutting set by using a phillips-head type screwdriver. Remove the bottom blade and the top blade. When assembling both blades should be aligned as follows:

1. Adjust the cutting-length adjustment level to the desired cutting length.
2. Make sure that the top blade does not extend past the bottom blade. The distance between the front edge of both blades should be between 0,2 mm (zero gap) – 0,5 mm.
3. The bottom blade and the top blade should be parallel to each other.
4. The first tooth of the top blade (from the left) must cover the first tooth of the bottom blade.
5. The outermost tooth of the top blade (on the right) must touch the outermost large tooth of the bottom blade (on the right).
6. Once the blade is adjusted to zero gap or your liking, gently tighten the two screws on each side of the blade. If the blade is not adjusted to satisfaction after testing, repeat the adjusting process.

WARNING: IF THE TOP BLADE EXTENDS PAST THE BOTTOM BLADE YOU CAN POTENTIALLY CUT A CLIENT. THEREFOR CHECK THE COMFORT LEVEL OF A BLADE ON YOUR FOREARM BEFORE USING ON A FACE OR NECK.

USING ATTACHMENT COMBS

Your trimmer comes with 3 attachment combs.

To use, slide front of attachment comb over the teeth of the blade.

Snap comb down over back of blade.

Cutting length indication:

Attachment comb nr. 0,5 = 1,5 mm

Attachment comb nr. 1 = 4,5 mm

Attachment comb nr. 1,5 = 6 mm

Note: Different blade angles in relation to the skin, thickness and texture of the hair will vary the cutting length.



SKELETON OPTION

GUIDELINES FOR LITHIUM-ION BATTERIES

1. This trimmer contains a lithium-ion battery. A lithium-ion battery does not develop a “memory effect” like other batteries. This means that you can charge the Monster Trimmer at any time for a full charge, or even use the trimmer before the battery is fully charged. Like most rechargeable batteries, lithium-ion batteries perform best when used frequently.
2. When the trimmer won't be used for a week or more we recommend that you unplug the charging stand or AC adapter and store the trimmer in a partially discharged condition. Recharge the battery before use.
3. Optimum use of the battery capacity will be achieved when charging at a stable temperature. Sudden fluctuations in temperature may result in a partially charged battery.
4. A battery that is used intensively or older than one year may not have the same run-time performance as a new battery.
5. New lithium-ion batteries that are unused for a period of time, may not accept a full charge. This is normal and does not indicate any problems. After several cycles of trimmer use and recharging the battery will accept a full charge.

To protect the environment please dispose the battery in a responsible manner, exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with the local legal regulations. For more details on recycling options and proper disposal, please contact your local waste officials/facility.

TROUBLESHOOTING

If your rechargeable trimmer does not seem to be operating or charging properly, please check the following:

- Make sure voltage is present at the wall outlet (confirm with an appliance you know is working).
- Check to make sure adapter cord is plugged firmly into trimmer or charging stand.

If you still encounter problems with charging your trimmer, return the product to Monster Clippers or an authorized Monster Clippers dealer for examination and repair or replacement.

Don't forget to include the AC adapter/ power cord, charging stand and a note explaining the problem.

MONSTER

clippers



120-240V ~50/60Hz

Made in China - Monster Clippers continuously strives for product improvement.

Therefore, contents may vary.

Monster Clippers | Katernstraat 33 E 1321 NC Almere | The Netherlands

www.monsterclippers.com



© APRIL 2020