 
RAY CEILING

INSTALLATION INSTRUCTIONS | DECEMBER 2022

1.0 LED

 







or





 1.0 PAR16











base dimensions:

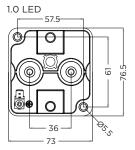


1.0 PAR16

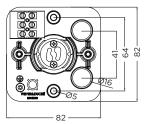

grommets overview table:

use pin to make hole, not a knife	A	B	
CABLE			
TYPE	ROUND H05RN-F H07RN8-F H07RN-F	ROUND H05RN-F	ROUND
OUTSIDE Ø	min 6.8mm max 8.9mm	min 5mm max 6.8mm	min 1.5mm max 2.6mm
CONDUCTION SECTION	2or3x 0.75mm ² 2or3x 1.0mm ² 2or3x 1.5mm ²	2or3x 0.75mm ² 2x 1.0mm ²	0.75mm ² 1.5mm ²

 DIMENSIONS





MOUNTING INSTRUCTION

- For LED: remove the mounting base from the LED module by loosening the socket screws and mount it on the ceiling with screws (screws are not included).

 For PAR16: directly mount the mounting base on the ceiling with screws (screws are not included).
- 2 POWER CONNECTION

Connect to 220-240V.

LED version



Connect the earth cable.

 
PAR16 version

L

N

For LED: please use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table.

for example:



Push the grommet into the back plate.

Pull the cable through the back plate.

Mount the back plate on the wall.


- For LED: attach the LED housing on the base by fixing the two socket screws.
- For LED: attach the box cover to the LED housing by screwing the locking ring. For PAR16: attach the box cover to the base by screwing the locking ring.


OPTIONAL:


Inner cover: put the inner cover in the outer cover by screwing with inner cover: max. 10W. (In this case the locking ring is no longer needed.)

RAY CEILING

INSTALLATION INSTRUCTIONS | DECEMBER 2022

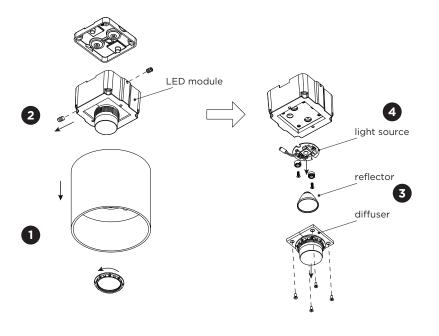

 

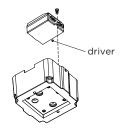

DISMOUNTING AND RECYCLING INSTRUCTIONS Light source & driver

- 1 Unscrew the locking ring and remove the cover.
- 2 Remove the two socket screws and disconnect the wires to dismount the LED module from the base.
- 3 Loosen the screws and remove the diffuser and reflector.
- Disconnect the wires, loosen the screws and remove the light source.
- 5 Unscrew the driver to remove it.



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.

This luminaire contains a light source with the corresponding energy class:

colour temperature	Energy class	
3000K	A D	
2700K 2000-3000K	A F	