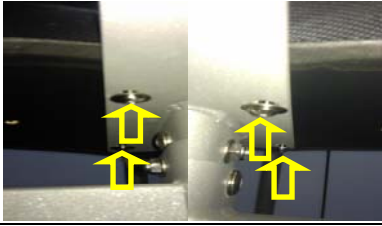 
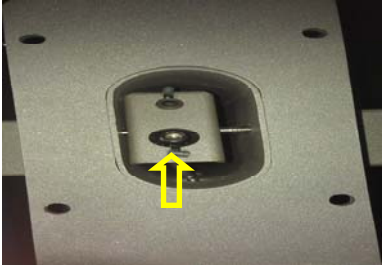 
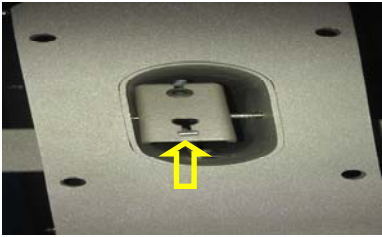 
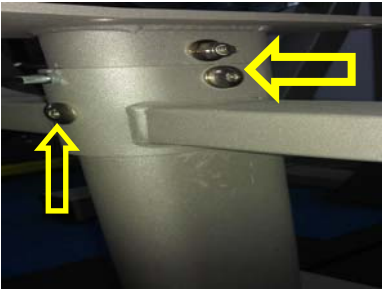 

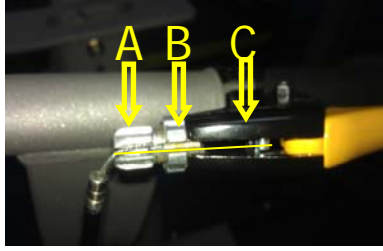 
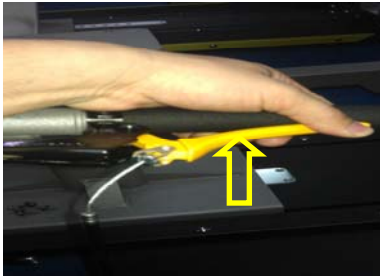 


Lever Cable Removal

	<p>Unscrew the 4 bolts as shown then remove the seat.</p>
	<p>Remove the cable securing bolt.</p>
	<p>Remove the cable.</p>
	<p>Unscrew the 2 bolts shown to remove the handle bar</p>
	<p>Pull out the cable</p>



Align A, B and C so the opening allows the cable to be removed.

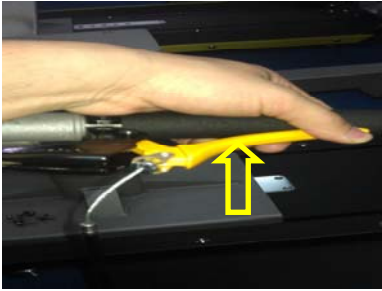
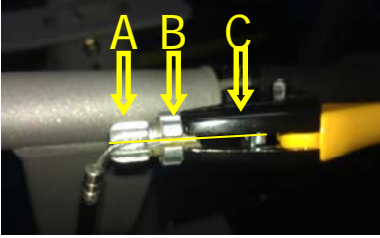

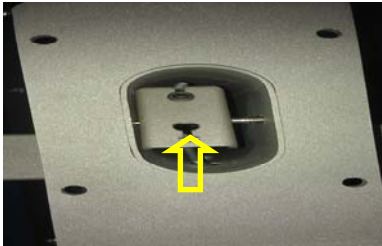


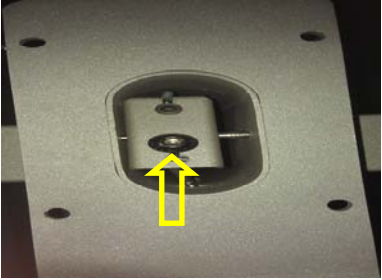
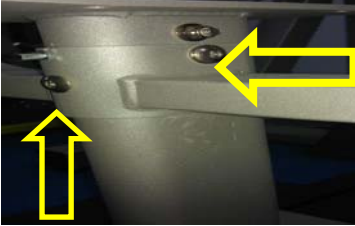
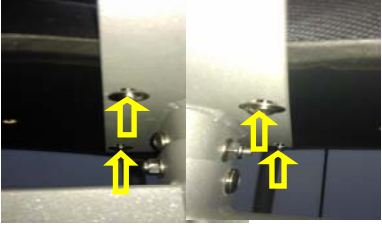
Pull and hold the lever then remove the cable end.

Lever Cable Replacement



Note: Ensure correct orientation of the lever cable before assembly.

	<p>Pull and hold the lever up then insert cable end into position.</p>
	<p>Place the cable into the opening along A, B and C then twist B to lock cable into place.</p>
	<p>Insert the cable into the seat frame.</p>
	<p>Insert the cable into the cable pivot.</p>

	<p>Lock in place using 1x M10x25 bolt</p>
	<p>Tighten the handle bar with 1x M8x70 bolt, 1x M8 Nylock Nut and 1x M8 Washer.</p>
	<p>Secure the seat using 4x M6x20 bolts and washers.</p>