


WhatsMiner Air-Cooling Miners Operation Guide V1.1

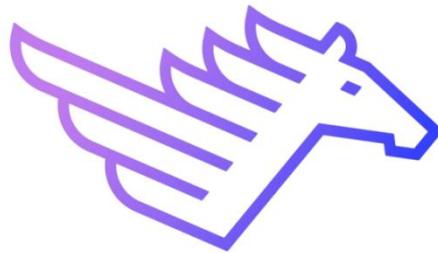

Shenzhen MicroBT Electronics
Technology Co., Ltd

Catalog

1. Product Introduction	3
2. WhatsMiner Connection and shelf-setting Safety Notes	4
2.1. Miner Connection Notes	4
2.1.1. Power Supply Control Wire Connection Notes	4
2.1.2. Adapter Board Control Wire Connection Notes	5
2.1.3. Fan Connection Notes	7
2.1.4. Hash Board and Adapter Board Connection Notes	7
2.1.5. Power Supply Copper Busbar Connection Notes	10
2.1.6. Product Connection Check	11
2.2. Notes for miner handling and shelf-setting operation	11
3. Miner Configuration Environment Preparation	11
3.1. Miner Configuration Equipment List	11
3.2. Miner Network Environment	12
4. Miner Connection and Pre-Power Check	13
5. Miner Data Configuration (Configuration on the web page)	13
5.1. Query the dynamic IP address obtained by the miner	13
5.1.1. Run WhatsMinerTools software	13
5.1.2. Check the IP address Reported by the Miner	14
5.2. Configuration Pool&Worker Data and NTP Server Address	16
5.2.1. Configuration Pool&Worker	16
5.2.2. Modify the NTP Synchronization Server Address (optional)	18
5.3. Configuration the Static IP Address (optional)	19
6. Miner Operation Status Check	221
7. Miner Batch Data Configuration, Miner Status Check, Firmware Upgrade	23
8. Miner Disassembly and Installation	23
8.1. Control Panel Disassembly and Installation	233
8.1.1. Control Board Disassembly	23
8.1.2. Control Board Installation	25
8.2. Power Supply Disassembly and Installation	26
8.2.1. Power Supply Disassembly	26
8.2.2. Power Supply Installation	27
8.3. Hash Board Disassembly and Installation	29
8.3.1. Hash Board Disassembly	29
8.3.2. Hash Board Installation	31
9. Other Attentions Notes	34
9.1. Miner care and maintenance	34

1. Product Introduction

At present, whatsmminer air cooling series models: M20, M20S, M20S +, M21S, M30S, M30S +, M30S + +, M31S, M31SE, M31S +, M50, M50S, M50S+, M60, M60S...

The M50S below as an example introduces various operations in details, and other models operate are the same




WhatsMiner M50S

Product Parameter Introduction as below:

SPECIFICATION			
Hashrate	110~120T ± 5%	Size	430mm*155mm*226mm
Power Ratio	29J/T ± 5%@25° C	Weight	11.7KG
Power On Wall	3190~3480W ± 10%	Internet Connections	Ethernet
Working Temperature	-5° C ~ 35° C	Power Cable Model	IEC C19, ≥16A
Air flow	350CFM	PSU Model	P221B/P222B AC220V ~ 240V

Miner operation flow chart

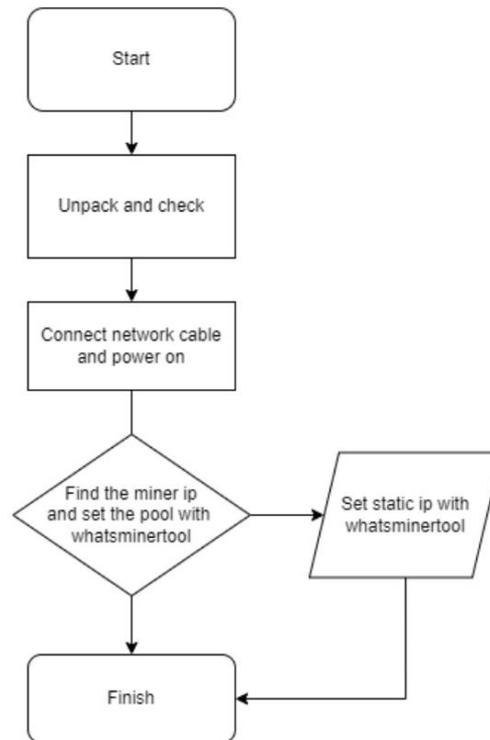

2. Whats Miner Connection and shelf-setting Safety Notes

2.1. Miner Connection Notes

Check over the miner's power supply control wire, adapter board control wire and fan control wire to make sure connections are correct. Damage of the control board, hash board, transfer board, fan, etc. caused by incorrect connection will not be covered by the warranty.


When connecting the wiring of the control board, ensure the pin connects to the corresponding socket. The pin cannot be inserted into the socket by force. If connected incorrectly, the power may burn out the control board, burning the signal wire!

2.1.1. Power Supply Control cable Connection Notes

The power control cable is 14pin, and the card slot is inserted as below:

Correct Connection:


Incorrect Connection:


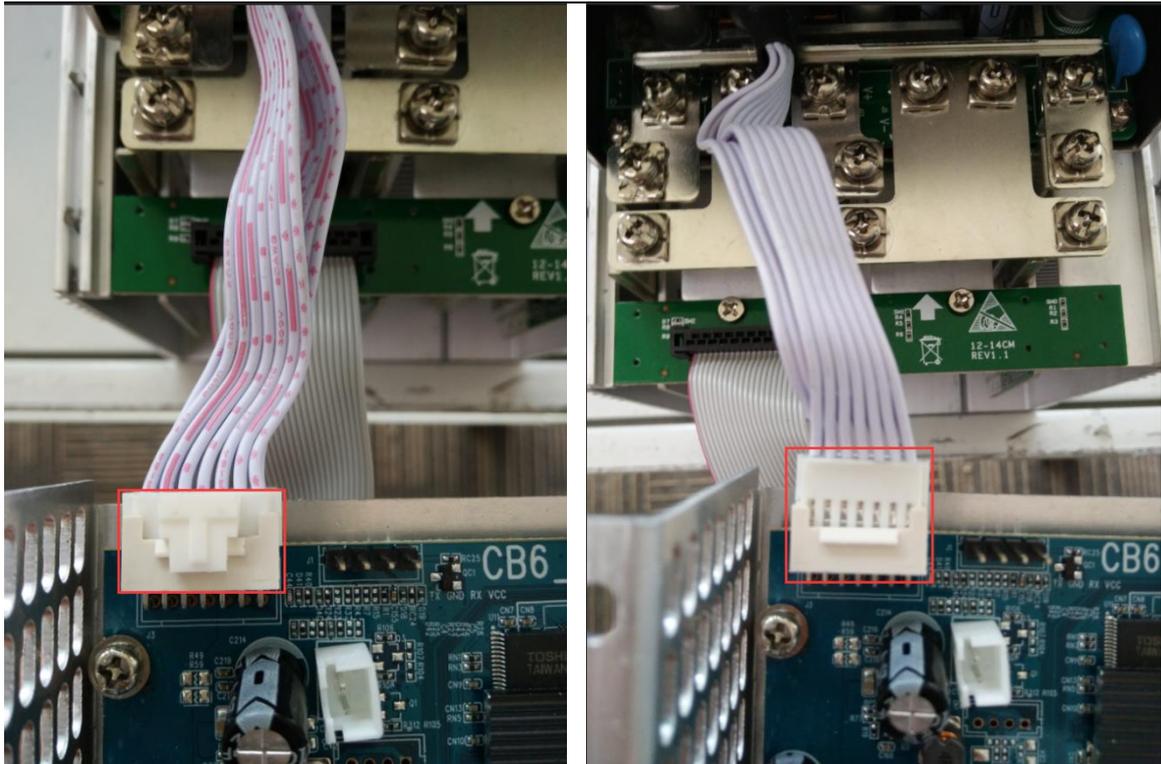


2.1.2. Adapter Board Control Ribbon Connection Notes




The adapter board control ribbon is 22pin, and the card slot is inserted as below:

Correct Connection:

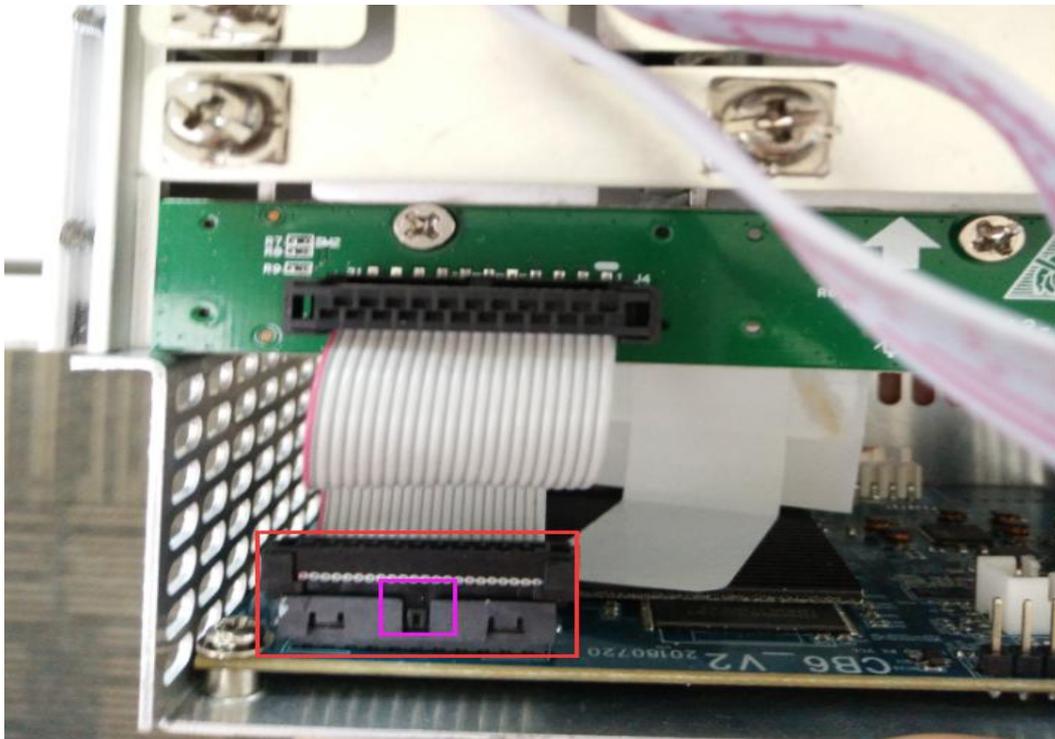

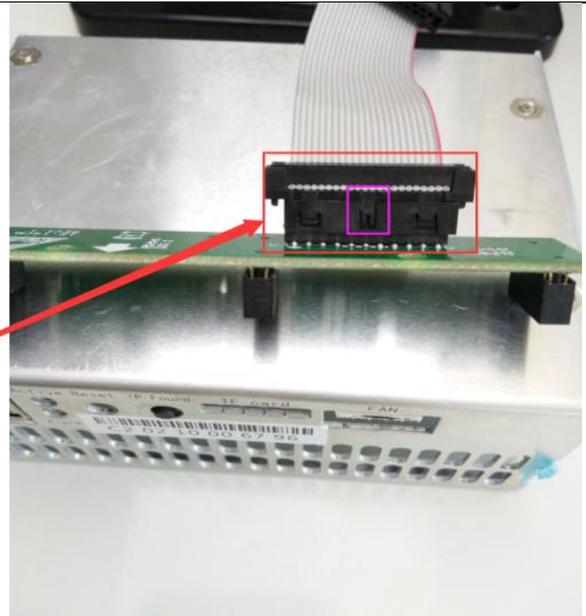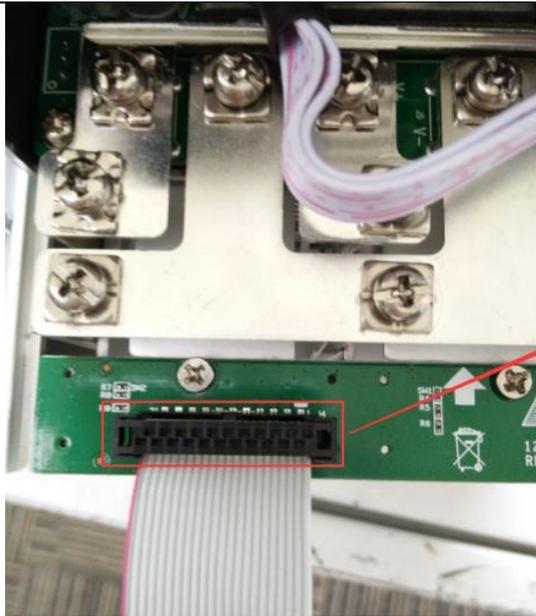


Incorrect Connection:

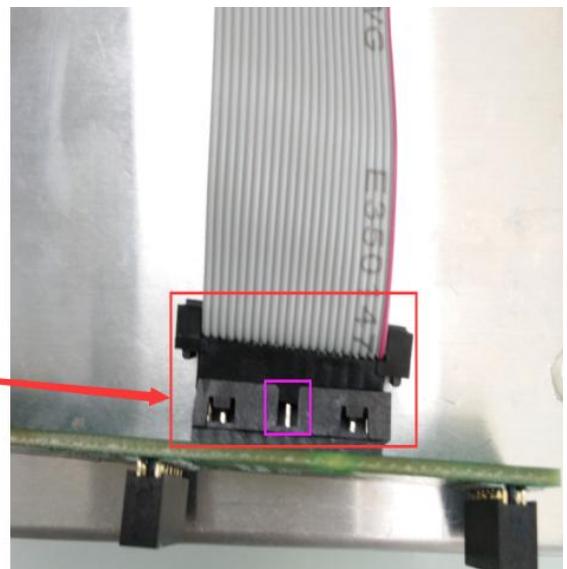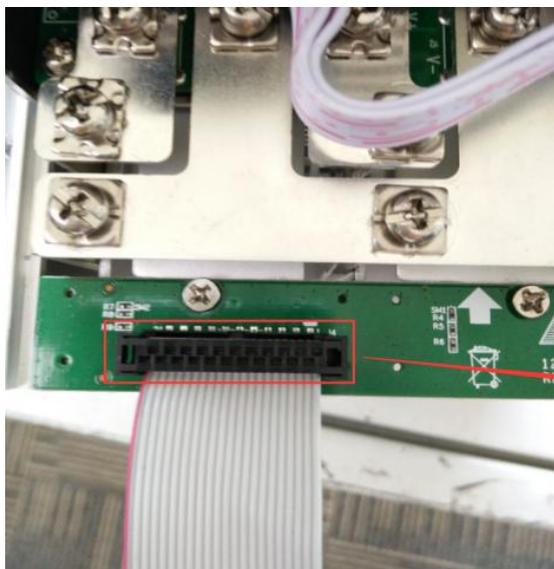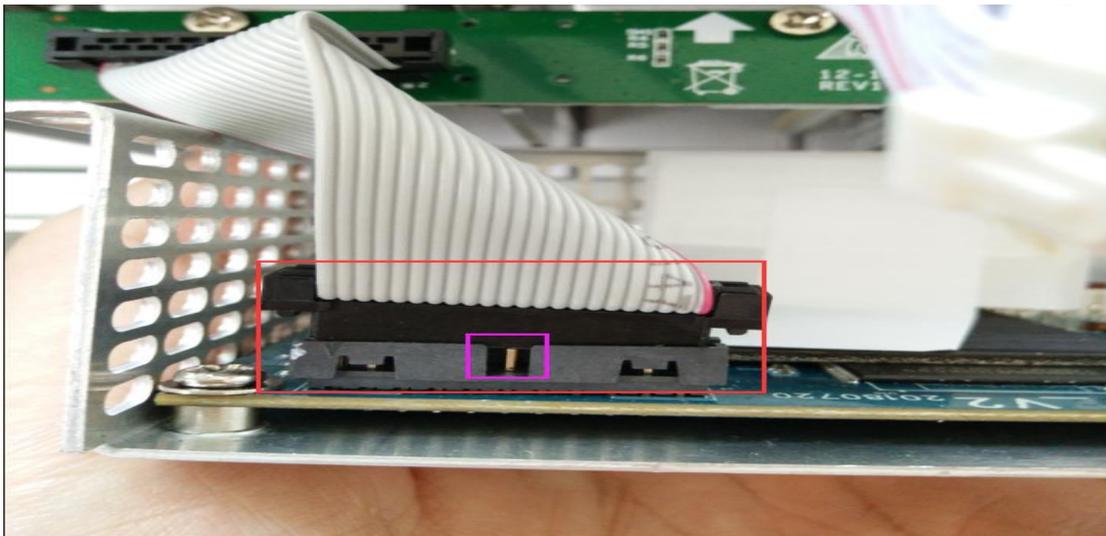


2.1.3. Fan Connection Notes

The fan cable is 4pin, and the card slot is inserted as below:

Correct Connection:

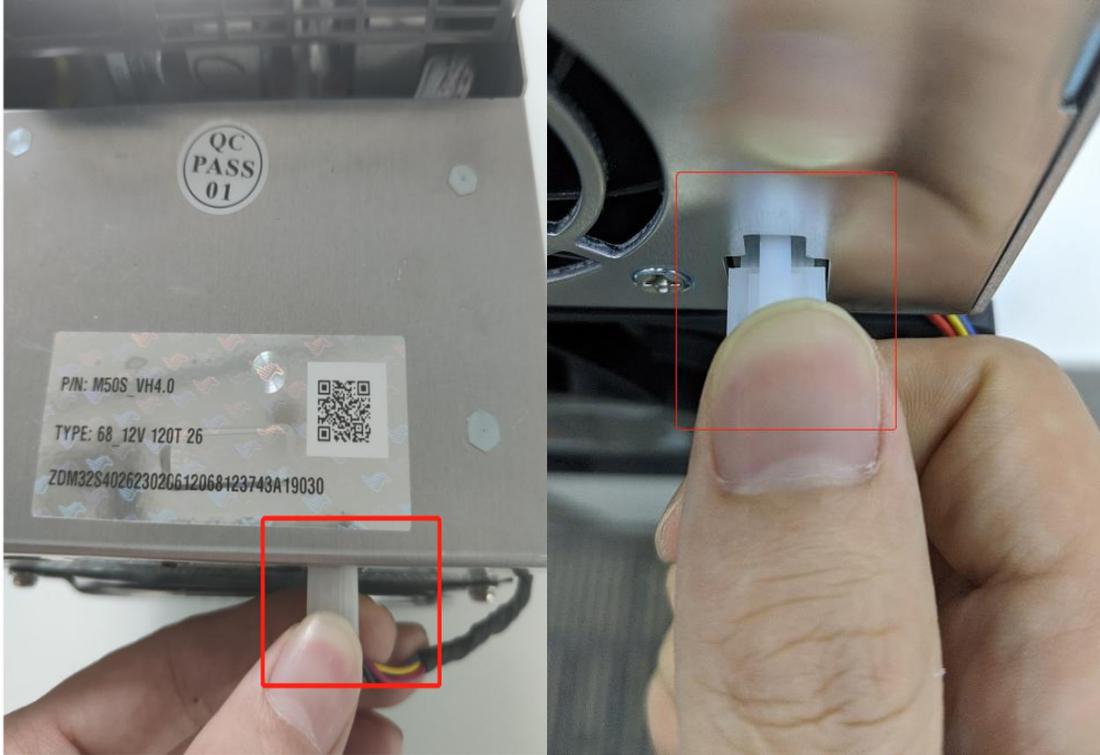

Incorrect Connection:

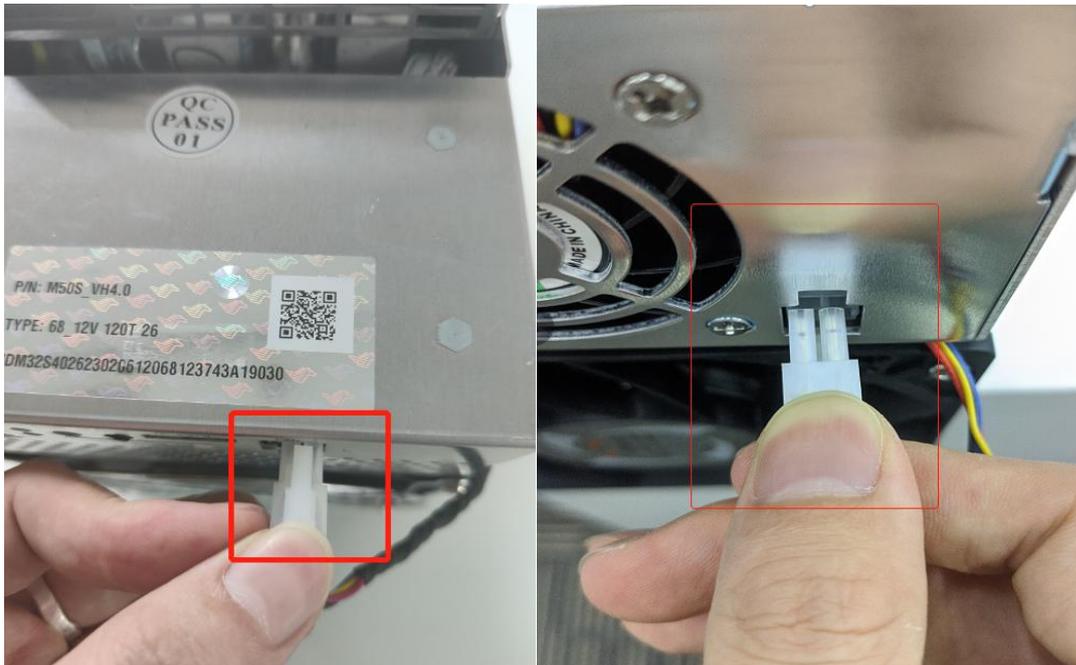


2.1.4. Hash Board and Adapter Board Connection Notes

The socket of the adapter board and the pin of the hash board must be installed in

place to avoid other problems caused by contact issues!

Correct Connection:

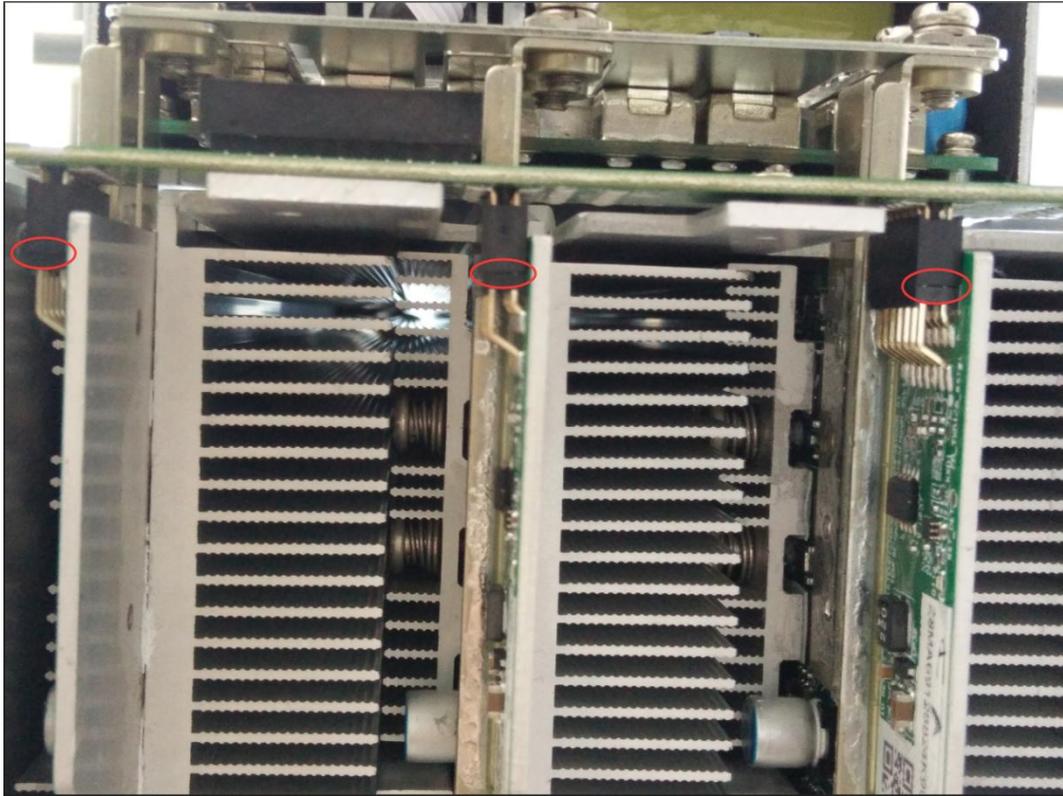


Incorrect Connection:




2.1.5. Power Supply Copper Busbar Connection Notes

When the power supply copper busbar is connected to the hash board, the positive and negative poles of the copper busbar cannot be connected incorrectly, and the screw washers of the fixed copper bar must be aligned in parallel with the edge of the copper bar. Otherwise, the machine may short-circuit when the power is turned on. Screws must be fastened. Fasten screws to avoid issues related to poor contact with the copper bar!

Correct Connection:

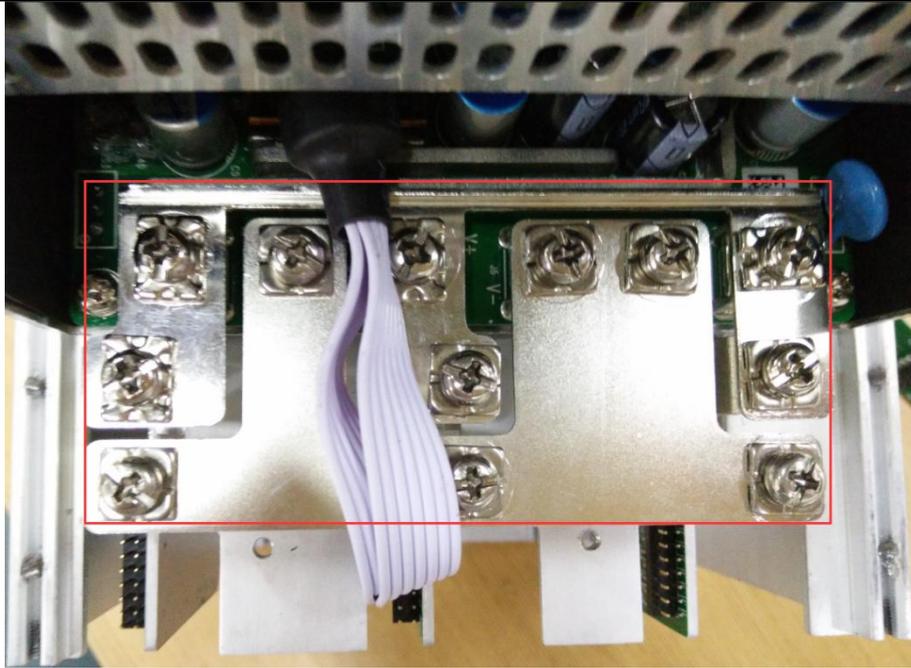

Incorrect Connection:

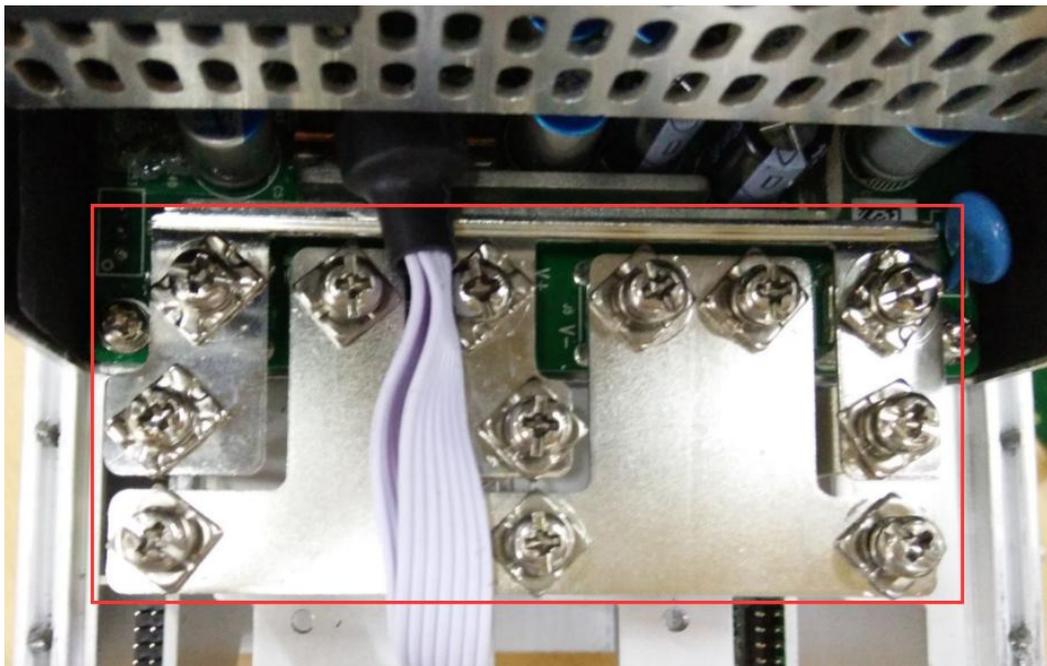

2.1.6. Product Connection Check

After all connections of the miner are connected and screws are tightened, check again to confirm that the connection is correct.



2.2. Notes for Miner Handling and Shelf-setting Operation

Before the process of handling and shelf-setting the miner, first, install the power terminal interface, then connect the power cord socket terminal. It is strictly forbidden to use the data cable, the power supply control wire or the fan wire as a load-bearing handle of the miner. Lifting the machine and power supply via its cables will result in damage to the connections, loose connections, and physical damage to the control panel. The resulting hardware damage and malfunctions will not be covered by the warranty!

3. Miner Configuration Environment


Preparation

3.1. Miner Configuration Equipment List

#	Tool	Numb	Use	Remark
1	Computer	1pc	Miner configuration	
2	Miner Power Supply	1pc	Power the miner	

3	Network Switch	1pc	Configuring miner and computer network communication	The Network switch can connect to the Internet.
4	DHCP/NTP Server/Router	1pc	1、 Provide a dynamic IP address for the first time power up of the miner 2、 Provide NTP network time for miner	Miner factory default settings is DHCP to obtain a dynamic IP address

3.2. Miner Network Environment

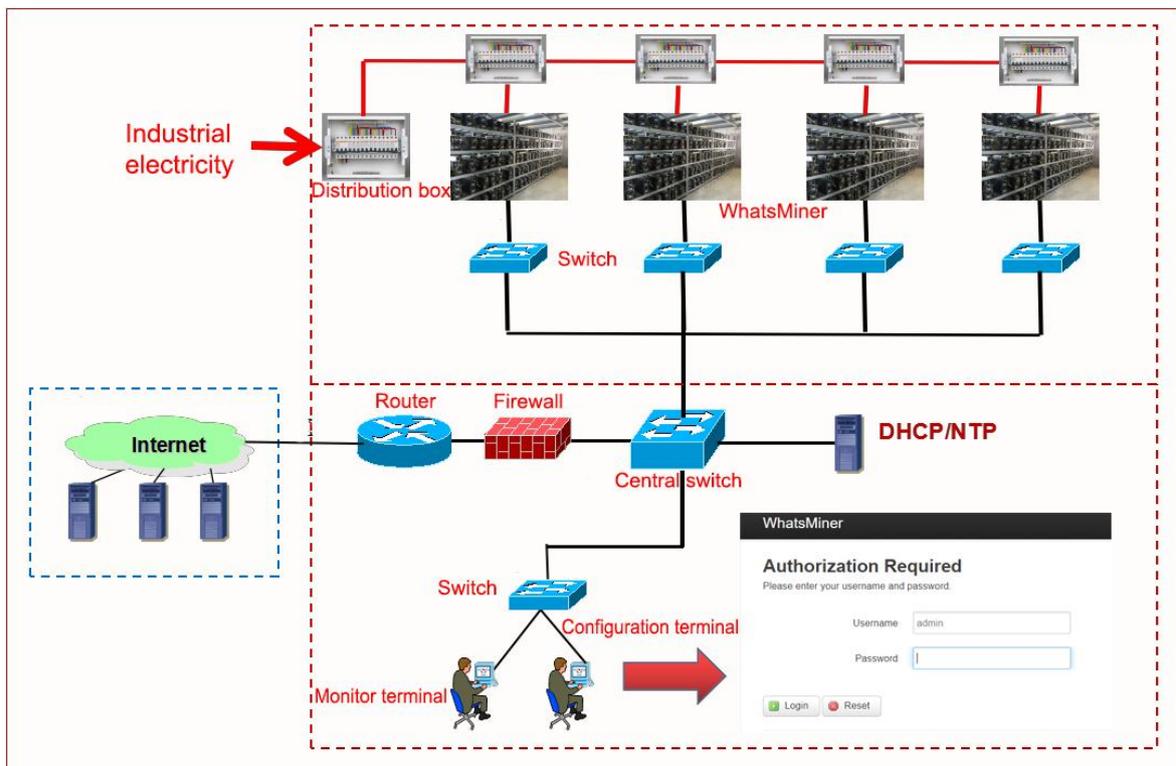

The miner defaults to DHCP to obtain dynamic IP. Therefore, the mine network must be configured with a DHCP server, or the router can enable DHCP to dynamically allocate the IP address service. The running time of the miner, the correctness of the calculation statistics, etc. depend on the network NTP time. The mining machine itself is configured with multiple NTP server addresses of the public network by default. In order to speed up the acquisition of network time and improve the time precision, it is recommended to mine the network. Configure a local NTP server.

4. Miner Connection and Pre-Power Check

(1) Before the wiring and power-on the machine, according to the warning signs on the side of the machine, shake the machine to check whether there is a radiator or other components loose. This is to ensure that there is no radiator or other components that may fall off before wiring and power-on.

(2) The machine is connected to the power wiring, and the network port is connected to the switch. Check the power control wiring, fan control wiring, adapter board control wiring, and ensure that the fan control wiring is not loose, and the copper line is connected correctly before powering on the machine.

Notes:

(1) When the power copper busbar is connected to the hash board, the positive and negative poles of the copper busbar are connected correctly, and the screw washers of the fixed copper bar are aligned parallel to the edge of the copper bar, the fixed screws must be tightened. Otherwise the power board may burn out. For the control board and power supply, hardware damage caused by copper stripping is not covered by the warranty.

(2) The power control wiring between the control board and the power supply must be connected. Otherwise, the power supply voltage output may not be controlled, resulting in low power calculation.


(3) The control board must be connected to the fan wiring securely. If the fan wiring is disconnected or the connection is poor, the miner may not be able to cool down, the power board throttled, and the power reduced.

5. Miner Data Configuration (Configuration on the web page)

5.1. Query the dynamic IP address obtained by the miner


5.1.1. Run WhatsMinerTools software

Miner Data Configuration: Connect PC to **the same network** the machine is located, run WhatsMinerTools software on the PC, select the "IP Monitor" tab, set the room number, rack number and layer number of the rack where the mining machine is located, the location number of the layer, click "Start".

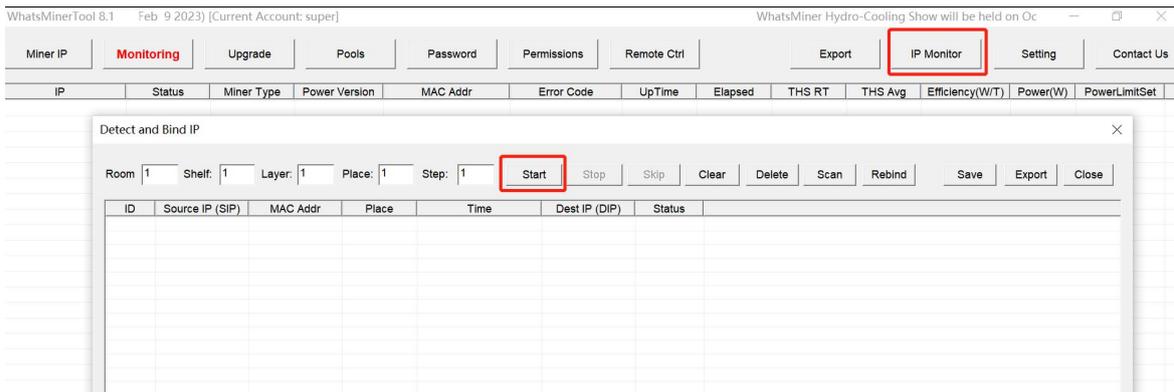


5.1.2. Check the IP Address Reported by the Miner

(1) After the machine is powered on for about 50s, under normal circumstances, the yellow light of the network port is always on and the green light is blinking. Press the IPFOUND function button (long button highlighted) on the miner control panel for more than 5s, the two LEDs on the right will flash a few times, indicating that the machine has broadcast the IP and MAC address of the unit to the network.

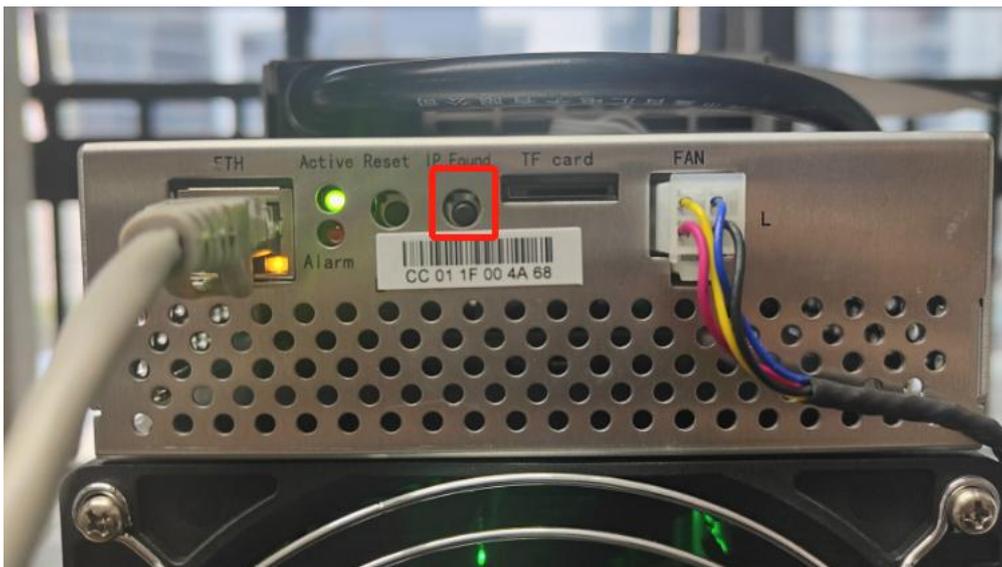

(2) View the dynamically obtained IP, MAC address, and miner position reported by the machine in WhatsMinerTools software.

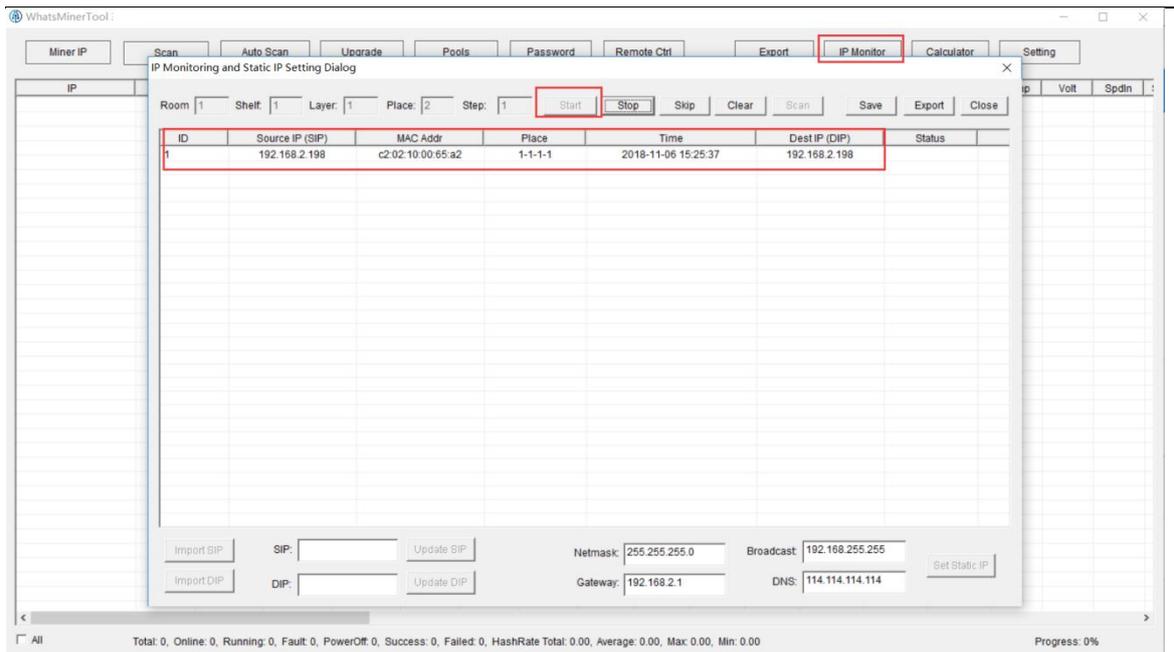


Notes:

- (1) If all the lights on the panel of the machine control panel are not lit after power-on, please check whether the power supply of the 220V power cable and the 16A power cable are reliable and the connection is correct.
- (2) If the indicator on the right side of the panel of the machine control panel is on, but the network port is not lit, or the green light is not flashing, check whether the switch is normal, the whether network cable connection is reliable.
- (3) The computer and miner running the WhatsMinerTools software must be on the same network segment. Otherwise, the software may not receive the broadcast message from the machine, so the IP Address and MAC Address information reported by the machine IPFOUND button cannot be queried.
- (4) If the computer and the miner machine are on the same network segment, and the DHCP service is enabled in the network, after the mining machine IPFOUND button is pressed, and WhatsMinerTools software does not query the IP of the machine, long press the reset button on the machine panel for more than 5s to recover Factory default configuration, then power off the miner machine. Power on to restart, power on for 50s and then press the IPFOUND button to detect the miner IP address.
- (5) If the computer is running WhatsMinerTools software, and after clicking "Start", without manually pressing the IPFOUND button, the software automatically finds the IP Address and MAC address of the machine, the IPFOUND button of the miner may be stuck by the panel. Find the software. Display the miner corresponding to the MAC address (the MAC address bar code is attached to the miner panel), power off the corresponding miner, and then re-install the control board to ensure that the control panel buttons and indicators are exposed to the mounting holes, and are not stuck.

5.2. Configuration Pool&Worker Data and NTP Server Address

5.2.1. Configuration Pool & Worker

- (1) After logging in, go to the Configuration - miner Configuration page.
- (2) In the Configuration - miner Configuration page, modify the mine pool address, mine worker name, and after modifying click "Save & Apply" in the lower right corner to save the modified configuration.

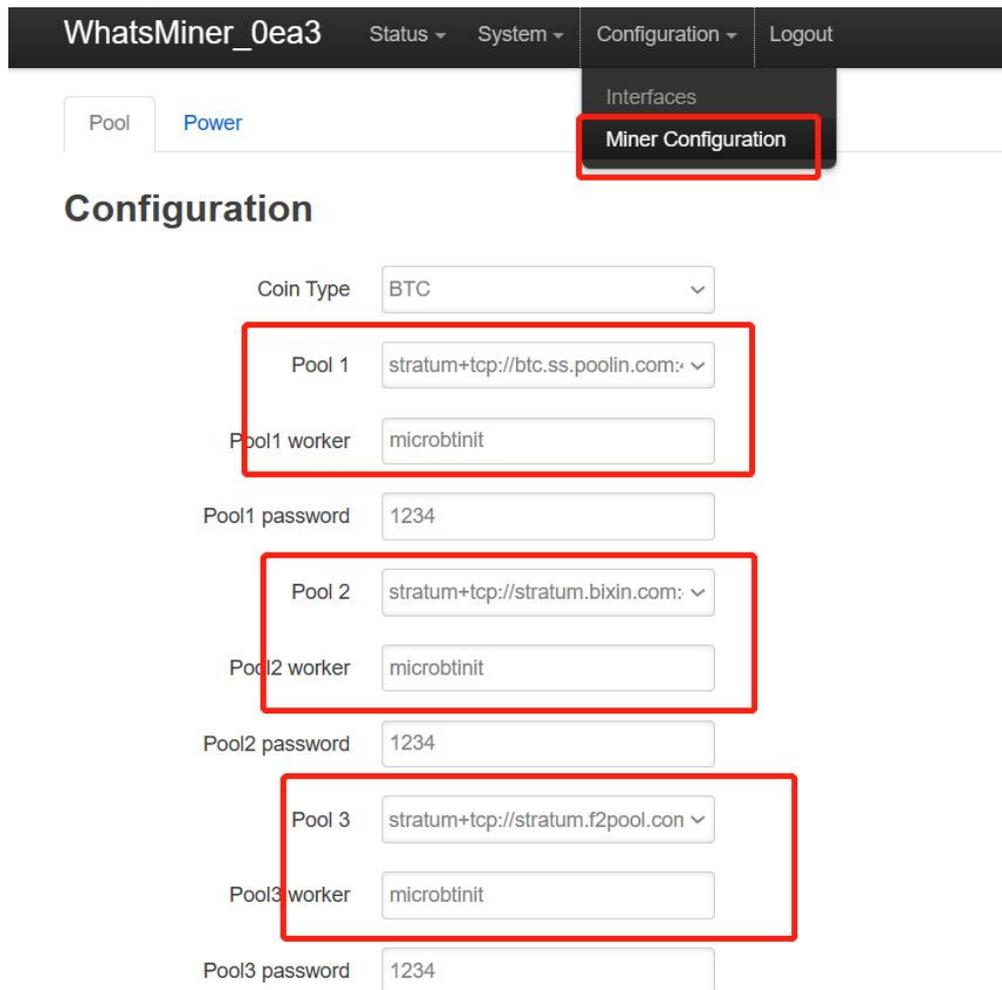

WhatsMiner_0ea3 Status ▾ System ▾ Configuration ▾ Logout

Pool Power Interfaces
Miner Configuration

Configuration

Coin Type BTC ▾

Pool 1 stratum+tcp://btc.ss.poolin.com: ▾

Pool1 worker microbtinit

Pool1 password 1234

Pool 2 stratum+tcp://stratum.bixin.com: ▾

Pool2 worker microbtinit

Pool2 password 1234

Pool 3 stratum+tcp://stratum.f2pool.con ▾

Pool3 worker microbtinit

Pool3 password 1234

After the configuration of the mining pool is modified, the modified configuration must be restarted after the miner program is restarted or the control panel is restarted.

- (3) Restart miner to check whether the configuration modification takes effect.
In the miner interface, select: Status - "minerStatus" to enter the miner running status interface.

WhatsMiner_0ea3 Status ▾ System ▾ Configuration ▾ Logout

Miner Status Re

Please visit <https://www.whatsminer.com>

Summary

Elapsed	GHSav	Accepted	Rejected	FanSpeedIn	FanSpeedOut	Voltage
2m 27s	125328.89	64	0	4,560	4,530	1,207

In the miner Status interface, click "Restart miner" to restart the miner process.

Miner Status Restart Miner

Please visit <https://www.whatsminer.com> for support.

Summary

Elapsed	GHSav	Accepted	Rejected	FanSpeedIn	FanSpeedOut	Voltage	Power	Power Mode
2m 27s	125328.89	64	0	4,560	4,530	1,207	3,500	Normal

Devices

Device	Frequency	GHSav	GHS5s	GHS1m	GHS5m	GHS15m
SM0	661	42206.13	42670.24	40838.86	42488.54	42488.54
SM1	631	40439.90	40575.49	39042.03	40710.52	40710.52
SM2	653	41819.75	42303.21	40355.76	42129.83	42129.83

(4) Restart the control board and check whether the configuration modification takes effect. (If you do not choose to restart miner, after the configuration is modified and saved, you can also restart the control board to make the configuration take effect.)

In the System interface, click "Reboot".

Miner Status

Restart Miner

Please visit <https://www.whatsminer.com> for

- System
- Administration
- Reboot

Summary

Elapsed	GHSav	Accepted	Rejected	FanSpeedIn	FanSp
2m 27s	125328.89	64	0	4,560	4,530

In the Restart interface, click "Perform reboot" to confirm the restart.

Reboot


Reboots the operating system of your device



After restarting for about 50s, the machine system will automatically jump to the login interface.

5.2.2. Modify the NTP Synchronization Server Address (optional)

(1) After logging in, select System - System Configuration in the interface to enter the miner configuration page.

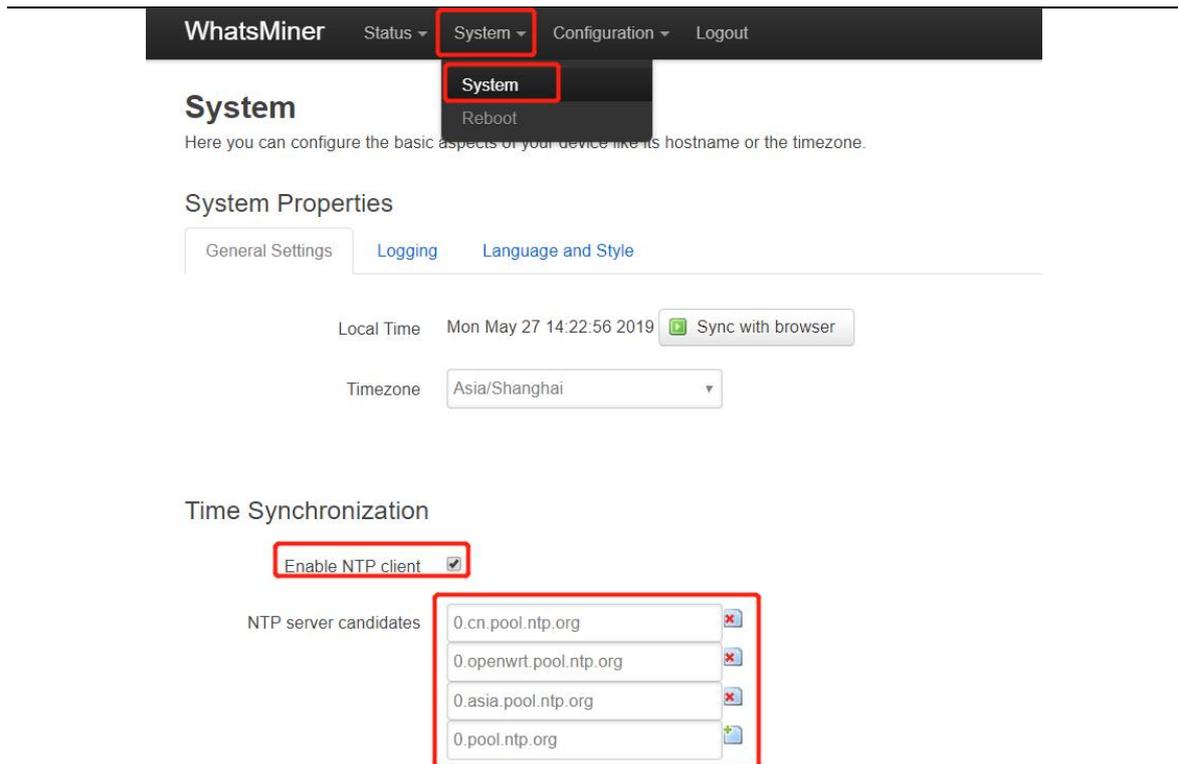

(2) In the miner configuration interface, add or modify the NTP server address. The miner has been configured with four NTP server addresses by default. You can modify or add the NTP server address to the local NTP server address according to the mine situation.


(3) After modifying the NTP server address, click "Save & Apply" in the lower right corner.

5.3. Configuration the Static IP Address (optional)


Modify the IP address obtained by the mining machine DHCP to the static IP address of the mine operation network planning.

(1) Enter the machine dynamic IP in the browser and log in to the mine interface with the admin user and the default password admin.

(2) After logging in to the machine, in the miner interface, select: Configuration->Interfaces to enter the network interface configuration interface.

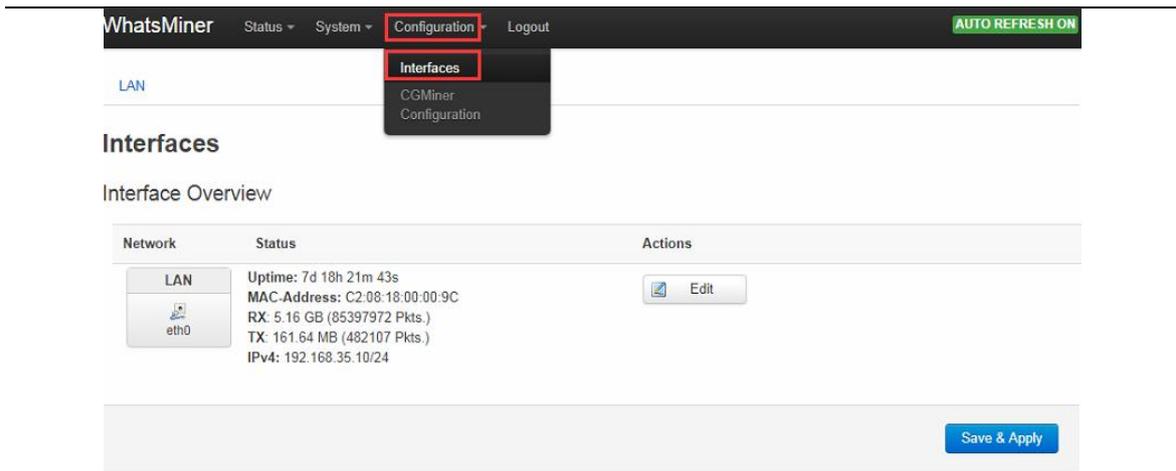

(3) In the "Configuration" interface, click "Edit".

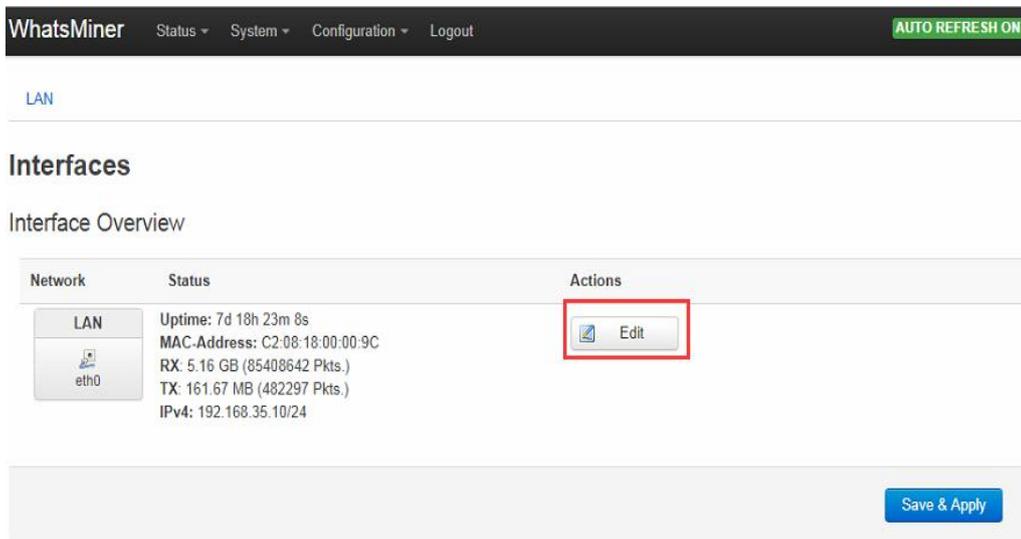

(4) In the interface modification page, select "Static address" for the protocol and click "Switch protocol".

LAN

Interfaces - LAN

On this page you can configure the network interfaces. You can bridge several interfaces by ticking the "bridge interfaces" field and enter the names of several network interfaces separated by spaces. You can also use VLAN notation INTERFACE.VLANID (e.g.: eth0.1).

Common Configuration

General Setup

Status		Uptime: 7d 18h 24m 13s eth0 MAC-Address: C2:08:18:00:00:9C RX: 5.16 GB (85417289 Pkts.) TX: 161.73 MB (482497 Pkts.) IPv4: 192.168.35.10/24
Protocol	<input type="text" value="Static address"/>	
Really switch protocol?	<input type="button" value="Switch protocol"/>	

(5) In the static address configuration interface, change the IP address, mask, gateway, broadcast address, and DNS address to the actual planned address of the mine. After editing, click "Save & Apply" in the lower right corner.

WhatsMiner Status System Configuration Logout UNSAVED CHANGES: 2 AUTO REFRESH ON

Status		Uptime: 0h 11m 47s eth0 MAC-Address: 36:8C:E5:AA:B9:CD RX: 9.29 MB (150598 Pkts.) TX: 1.19 MB (3875 Pkts.) IPv4: 192.168.2.112/24
Protocol	<input type="text" value="Static address"/>	
IPv4 address	<input type="text" value="192.168.1.221"/>	
IPv4 netmask	<input type="text" value="255.255.0.0"/>	
IPv4 gateway	<input type="text" value="192.168.0.1"/>	
IPv4 broadcast	<input type="text" value="192.168.255.255"/>	
Use custom DNS servers	<input type="text" value="192.168.0.1"/>	

After saving the application, you need to re-use the newly set static IP address to log in to the mining machine (otherwise the page will display as loading until the loading fails).

6. Miner Operation Status Check

After the mine is connected to the operation network, log in to the machine and check the running status of the machine.

(1) In the miner interface, select: Status->miner Status to enter the miner running

status interface.

(2) View the overall calculation of the mining machine, front and rear fan speed, connection to the mining pool, single board computing power, board temperature and other operating conditions.

WhatsMiner_Oea3
Status ▾ System ▾ Configuration ▾ Logout
UNSAVED CHANGES

Miner Status Restart Miner

Please visit <https://www.whatsminer.com> for support.

Summary

Elapsed	GHSav	Accepted	Rejected	FanSpeedIn	FanSpeedOut	Voltage	Power	Power Mode
30m 47s	125987.72	816	0	4,800	4,830	1,210	3,532	Normal

Devices

Device	Frequency	GHSav	GHS5s	GHS1m	GHS5m	GHS15m
SM0	661	42745.91	43173.74	42710.41	42723.80	42768.89
SM1	631	40925.49	41008.54	41013.08	40955.59	40958.65
SM2	653	42308.39	42396.35	42315.93	42305.84	42327.02
Total	648	125979.79	126578.63	126039.42	125985.23	126054.56

Device	Status	UpfreqCompleted	EffectiveChips	Temperature
SM0	Alive	1	111	77.75
SM1	Alive	1	111	72.19
SM2	Alive	1	111	76.00

Pools

Pool	URL	Active	User	Status	Difficulty	GetWorks	Accepted	Rejected	Stale	LST
1	stratum+tcp://192.168.2.24:3333	true	microbinitial	Alive	65536	92	816	0	0	Thu Mar 9 11:38:40 2023

Notes:

- (1) **The mining machine is connected correctly. When the network is normal, the mining machine will automatically perform the frequency search test after power-on. The search frequency test phase takes about 15 minutes. After the search frequency is over, it will enter the formal mining stage. It is the computing power of normal operation. If the search frequency is not over yet, the mining power will be lower than the normal operation.**
- (2) **If the temperature of the air outlet of the power board is higher than 85 degrees and the fan speed is above 6100 rpm, the mining machine will run at a reduced frequency, and the power will be lower than the normal operation. It is necessary to do a good job of ventilation and cooling measures in the operating environment of the mining machine to ensure that the ambient temperature of the mining machine is below 30 Celsius degree.**

- (3) If the fan wiring is not reliably connected to the control board, the corresponding fan speed in the miner interface is 0, which leads to the mining machine overheating. When the temperature is too high, the power board is reduced, and the computing power is reduced.
- (4) If the power board temperature is not detected in the status interface, the miner machine needs to be powered off, and the power cable and data cable of the corresponding power board re-plugged and connected (one end of the control board and one end of the hash board) to ensure a reliable connection.

7. Miner Batch Data Configuration, Miner Status Check, Firmware Upgrade

You can use the WhatsMinerTool software to carry out batch data configuration, status check and firmware upgrade of the mining machine. For details, please refer to the "Whats Miner WhatsMinerTool Operation Guide".


8. Miner Disassembly and Installation

8.1. Control Panel Disassembly and Installation


8.1.1. Control Panel Disassembly

- 1) Unplug the fan cable on the control panel before removing the control board, and then remove the four screws fixed on the chassis.




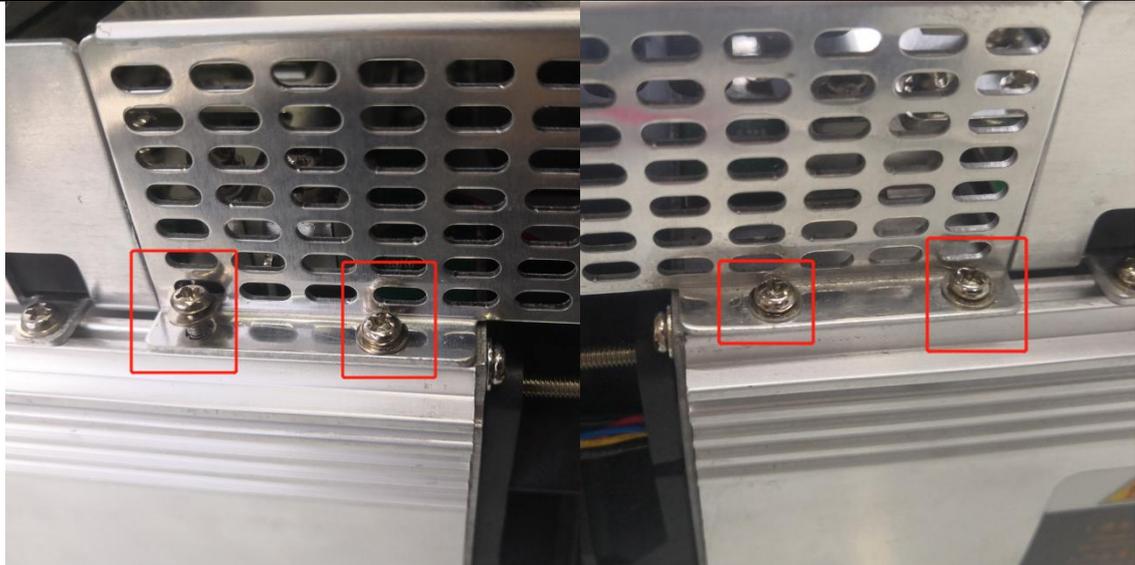

2) Unplug the power control cable and the adapter board control cable connected to the control panel as shown:

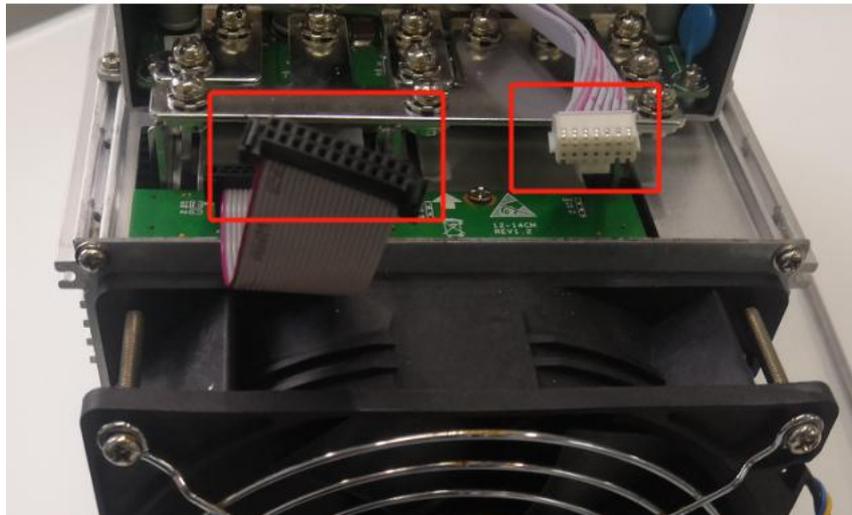


3) Remove the four screws fixed on the bracket and take out the control panel from the bracket as shown:

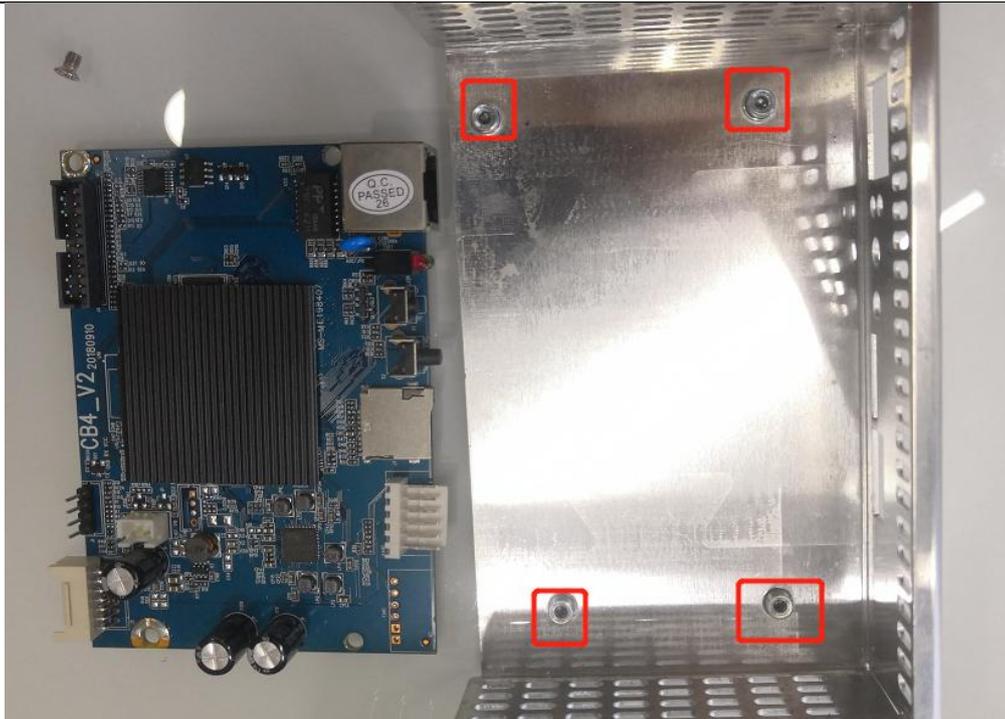

8.1.2. Control Panel Installation

1) When installing the control board, first fix the 4 screws on the control board bracket, as shown in the figure:

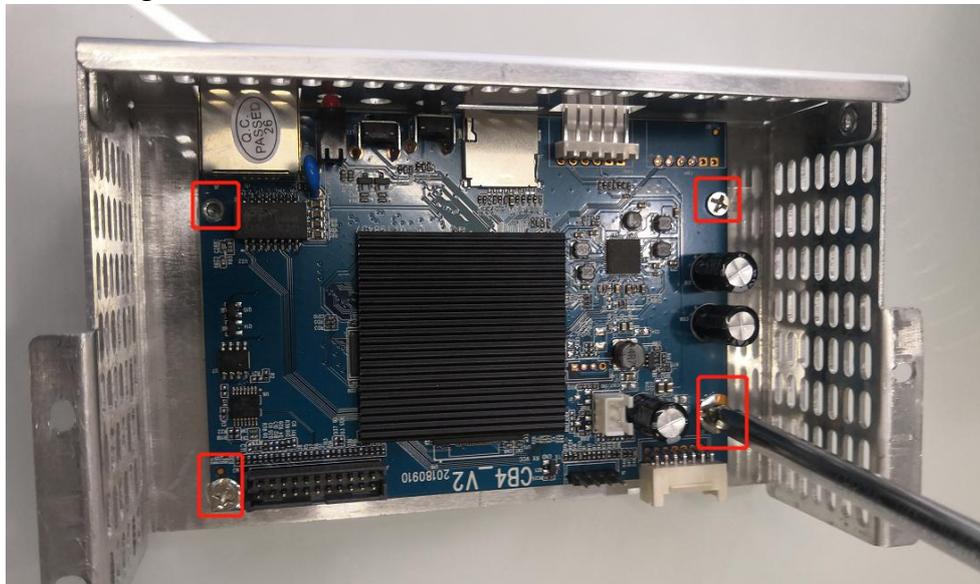

2) Insert the power control cable and the adapter board control cable into the corresponding slots on the control board, and then fix the bracket to the chassis with screws, as shown in the figure:


3) Plug the fan cable and the control board is installed.




8.2. Power Supply Disassembly and Installation

8.2.1. Power Supply Disassembly

1) Remove the four screws that secure the power supply on the chassis, then remove the six screws that secure the copper bars on the power supply. Unplug the fan cable on the power supply.

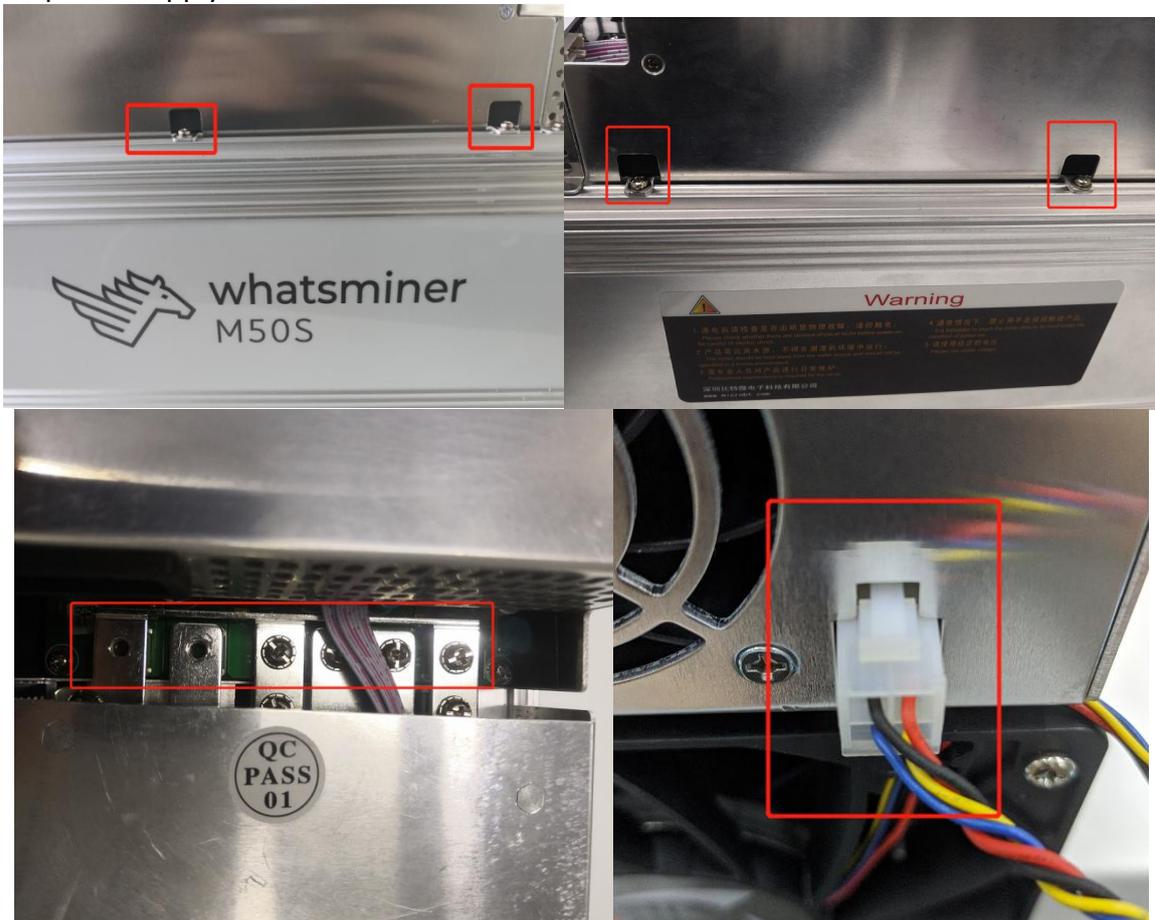

2) After the above operation is completed, gently pull out the power supply (do not pull out too long, the power control cable is still connected to the control panel), as shown in the figure:

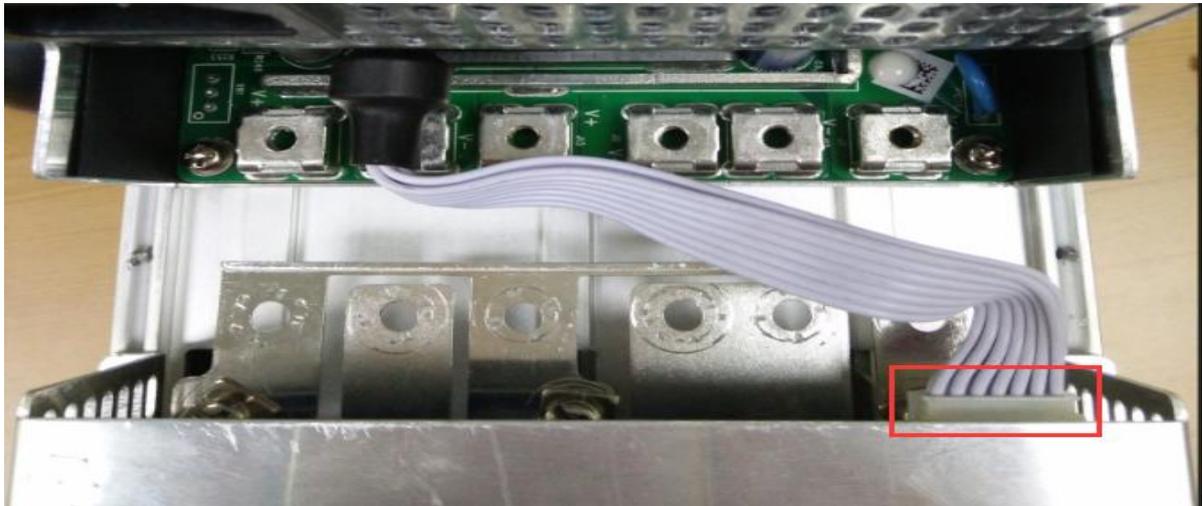


3) Unplug the power control cable on the control panel, remove the power supply, and remove the power supply:




8.2.2. Power Supply Installation


1) First plug the control cable of the power supply into the corresponding slot on the control panel, as shown below:

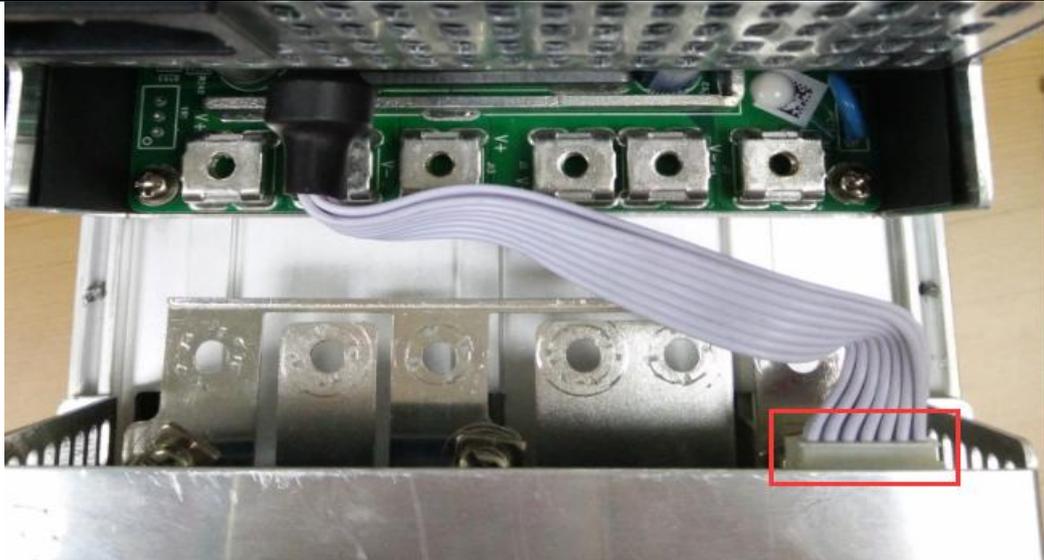

2) Then connect the 6 positive and negative terminals on the power supply to the copper row one by one, and then install 6 screws in turn. The screws should be tightened and the washers should be aligned parallel to the edge of the copper bar to avoid short circuiting the power supply or the power board, as shown below:

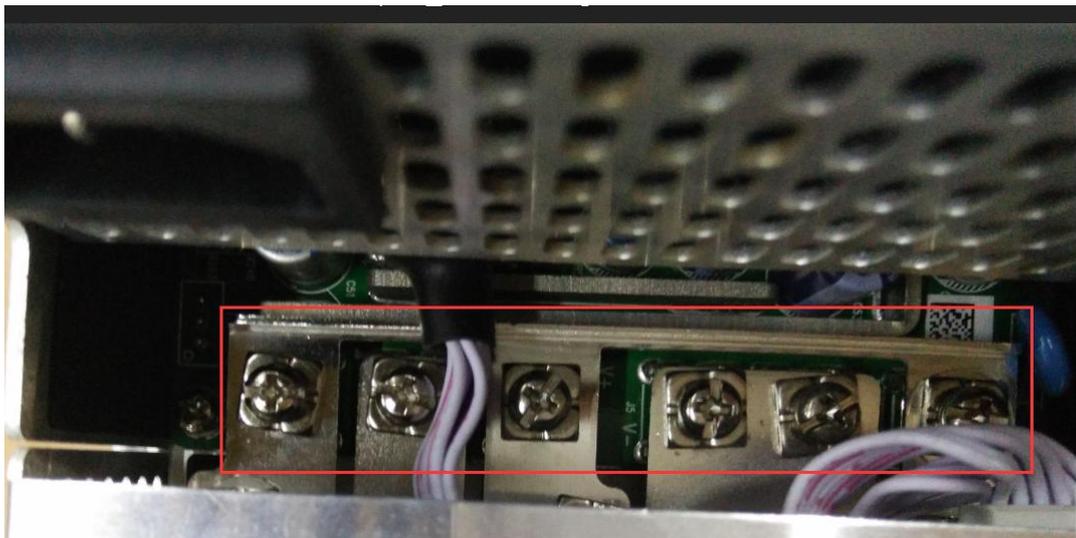

3) Finally, tighten the screws of the four fixed power supplies on the chassis, and the power supply is installed, as shown below:

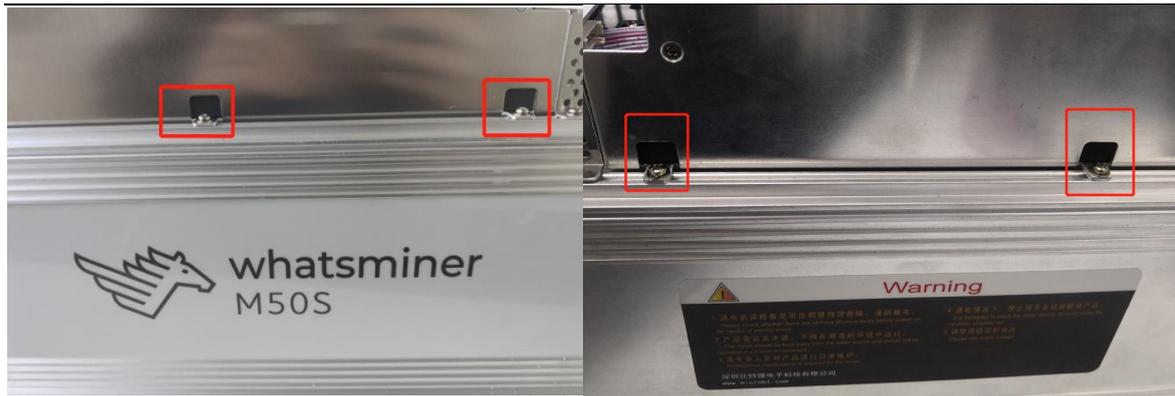


8.3. Hash Board Disassembly and Installation

8.3.1. Hash Board Disassembly


1) There are three hash boards on each mining machine (the order number of the hash board is as shown below). Before removing the board, first remove the control board and the inlet fan, as shown below:



2) Remove the adapter plate and the copper bar fixed to the control panel as shown:

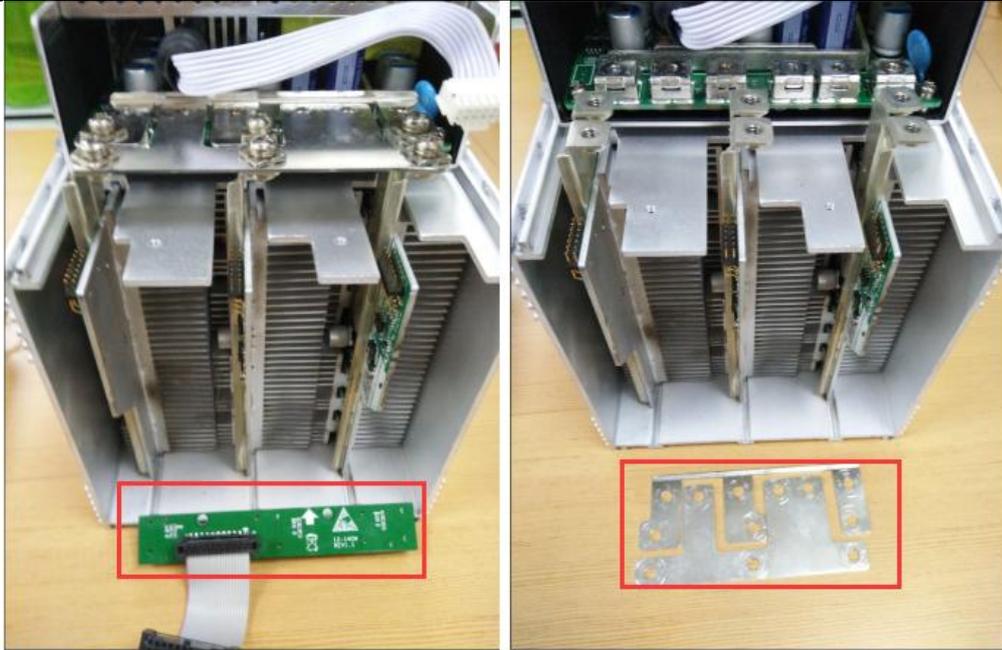

3) Extract the faulty hash board outward, as shown:

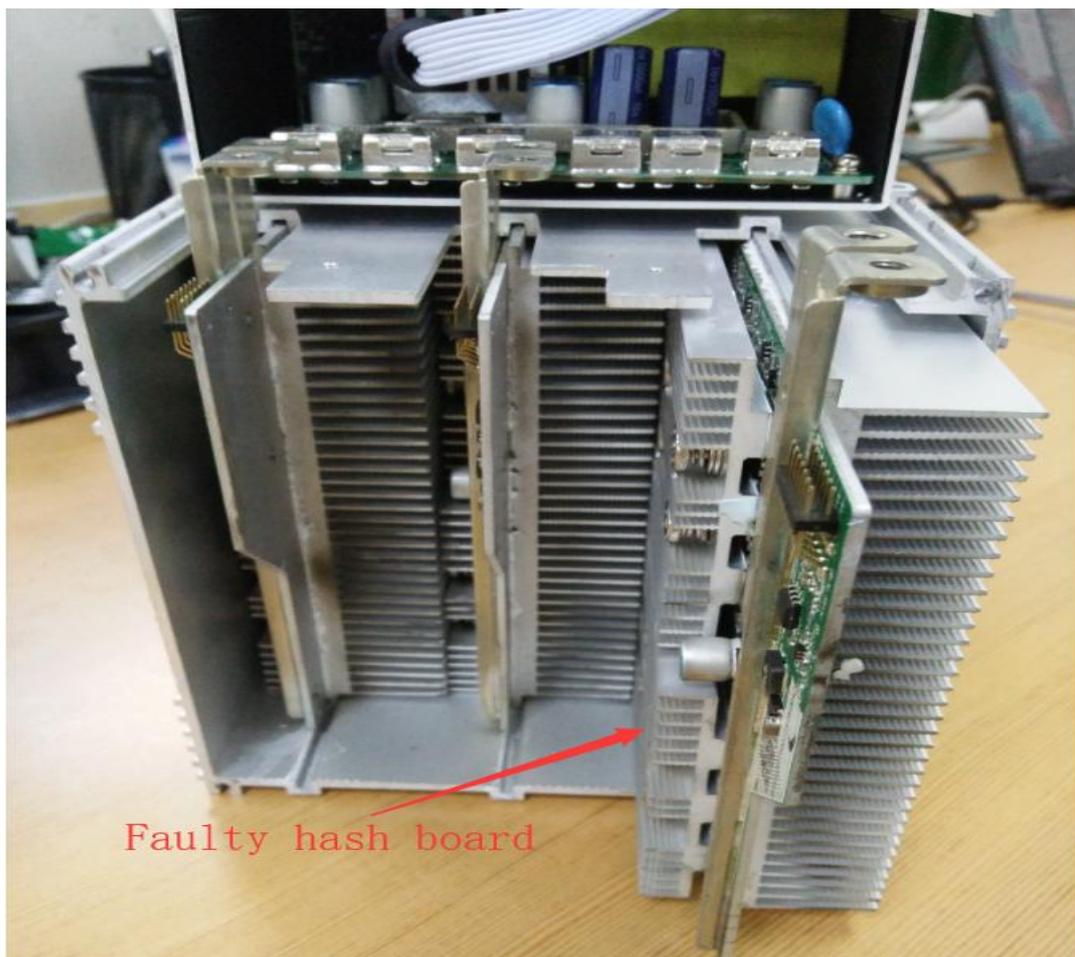


4) After taking out the hash board, record the serial number above or use WeChat “scan” to scan the power board serial number and provide it to the relevant after-sales technician, as shown:




8.3.2. Hash Board Installation


- 1) When the hash board is loaded into the miner, one hand holds the board into the hash board slot, and sequentially enters the miner, as shown in the figure:

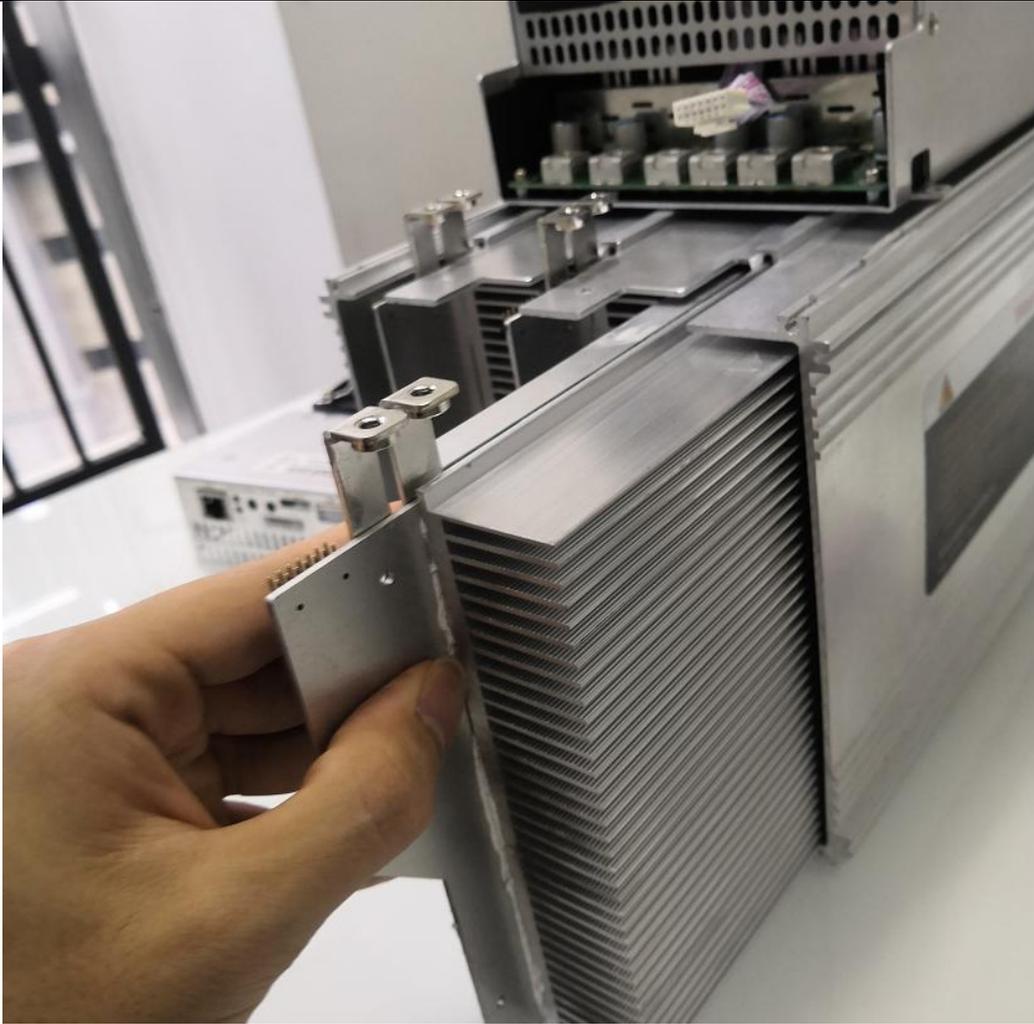

2) After installing the hash board into the miner, first install the adapter board. The socket of the adapter board and the pin of the hash board must be installed in place to avoid other contact related issues, as shown:

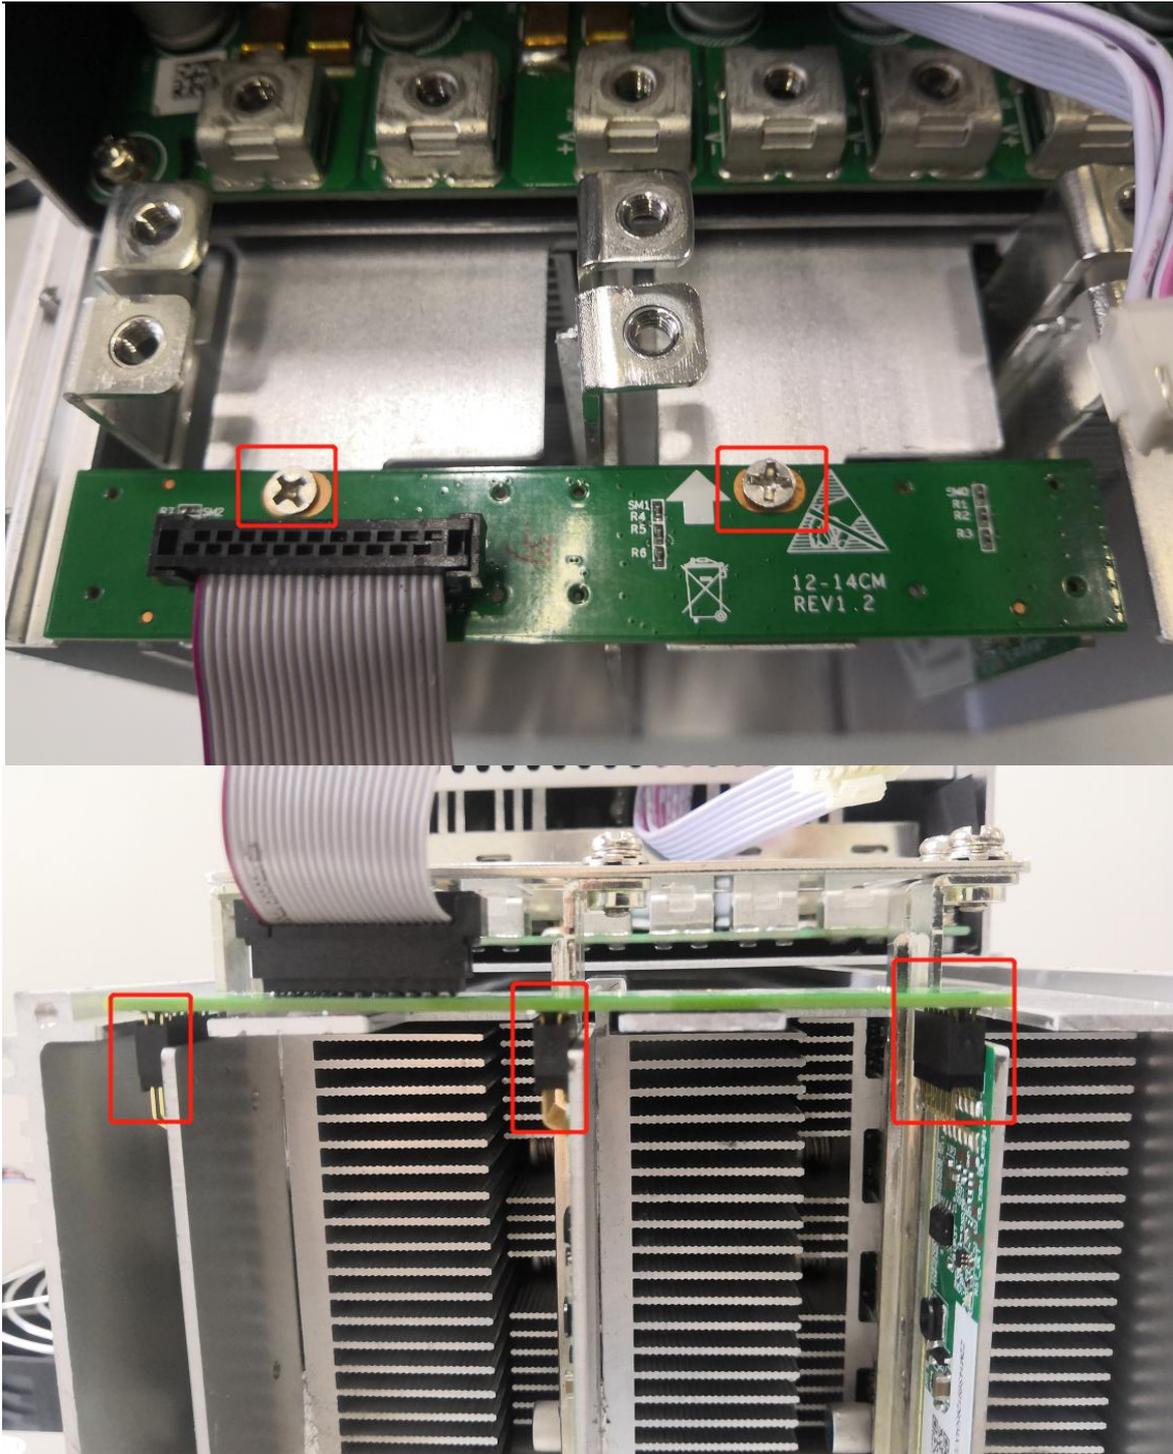

3) After the adapter plate is installed, install the copper bar. When the power busbar is connected to the hash board, the positive and negative poles of the copper bar cannot be connected incorrectly, and the screw pads of the fixed copper bar must be aligned with the edge of the copper bar, otherwise it may be possible to power on, and the machine will short-circuit. Fixed screws must be tightened to ensure the normal operation of the machine with proper contact with the copper bars, as shown:

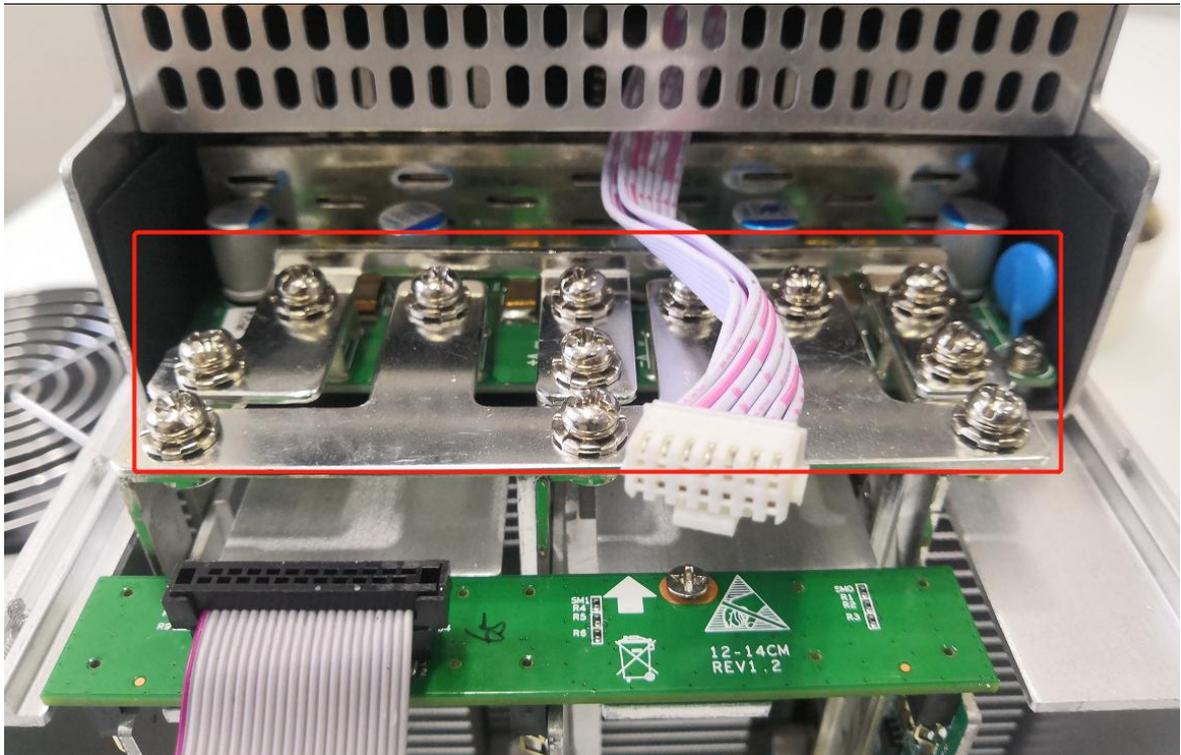

4) After the power bridge is installed, then install control board and the fans, finally the whole hash board installation is done.

9. Other Attentions Notes

9.1 Miner care and maintenance

After the devices has been running or stored for a period of time (3-6 months), dust should be regularly cleaned on the hash board, control board, adapter plate, ribbons,cables and other parts to prevent corrosion, rust, etc. For details, please refer to the video tutorial:

<https://www.youtube.com/watch?v=loM-SRGpslw&t=39s>

Attention:If the machine has severe corrosion, dusty, moisture, etc., it will not be covered by the warranty!!!