


## Installation dimensions

MED-100; BL-100; LABO-100; LABEX®-105; FROSTER-MED-95; FROSTER-LABEX®-96

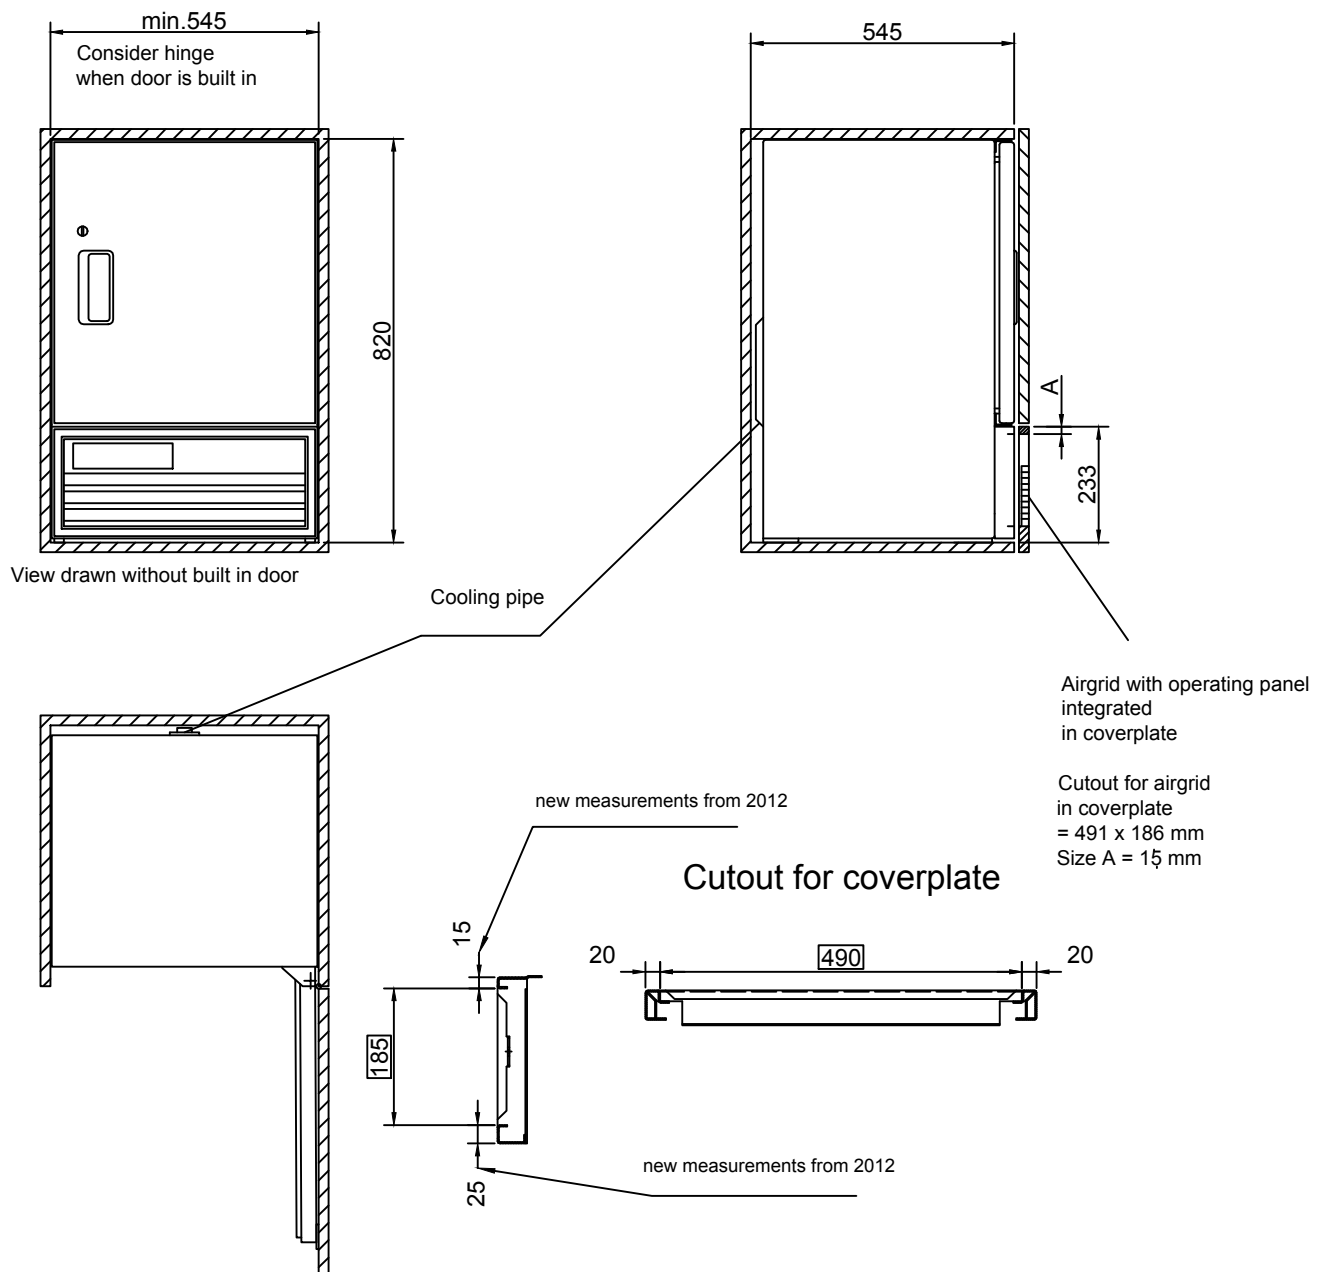

Ensure when fitting:

Supply and exhaust air takes place via front-sided airgrid.  
For that do not block with subjects or even blind it,  
so that the ventilation of the cooling machine keeps warranted.