Let op: Daytime running light moet uitgeschakeld worden voor installatie van de DRLSF

Important: Before using DRLSF: Daytime running light must be set to: Whithout



Parameters - Visibility



Lighting


Daytime running light settings

This parameter controls which lamps are to be used as daytime running lights.

Possible values:

- Without: No daytime running lights
- · Dipped beam with position lamps.
- Dipped beam or foglights with position lamps.
- · Dedicated LED.
- · Dedicated LED with position lamps.

Factory setting: Depends on vehicle specification.

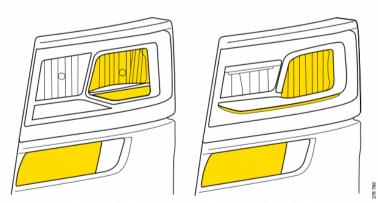

Daytime running lights in H7 headlamp and LED headlamp.

Lighting